

\*\*\*Unable to locate subtitle\*\*\*

# Amazon Snowball Edge Developer Guide



# Amazon Snowball Edge Developer Guide: \*\*\*Unable to locate subtitle\*\*\*

# **Table of Contents**

What is Snowball Edge?	1
Snowball Edge features	1
Related Services	2
Accessing the Snowball Edge service	3
Accessing an Amazon Snowball Edge device	3
Pricing for the Snowball Edge	3
Resources for first-time Amazon Snowball Edge users	4
Device hardware information	4
Device configurations	4
Device specifications	6
Supported network hardware	11
Prerequisites for using Snowball Edge	13
Sign up for an Amazon Web Services account	14
Secure IAM users	14
About the your environment	15
Working with special characters	16
Amazon S3 encryption with Amazon KMS	17
Prerequisites for using Amazon S3 adapter on Snowball Edge for import and expo	rt
jobs	21
Prerequisites for using Amazon S3 compatible storage on Snowball Edge	22
Prerequisites for using compute instances on Snowball Edge	22
How Snowball Edge Works	24
How import jobs work	26
How export jobs work	26
How local compute and storage jobs work	27
How clustered local compute and storage jobs work	28
Snowball Edge videos and blogs	28
Long-term pricing for Snowball Edge devices	30
Swapping devices during the long-term pricing period	30
Shipping considerations	32
Region-based shipping restrictions	32
Shipping Carriers	32
Region-Based Shipping Restrictions	32
Getting started	34

Creating a job to order a Snowball Edge device	35
Choosing a job type	35
Choosing your compute and storage options	37
Choosing your features and options	40
Choosing security, shipping, and notification preferences	41
Reviewing the job summary and create your jobjob	44
Cancelling a job	45
Cloning a job to order a Snowball Edge	46
Receiving the Snowball Edge	47
Connecting to your local network	48
Getting credentials to access a Snowball Edge	50
Unlocking the Snowball Edge	51
Troubleshooting unlocking a Snowball Edge	54
Setting up local users	54
Rebooting the Snowball Edge device	56
Powering off the Snowball Edge	61
Returning the device	65
Return shipping	66
Amazon Snowball Edge device Pickups in China	66
Shipping speeds	67
Monitoring the import status	67
Getting job completion report and logs	68
Large data migration	71
Planning your large transfer	71
Step 1: Understand what you're moving to the cloud	72
Step 2: Calculate your target transfer rate	72
Step 3: Determine how many Snowball Edge you need	72
Step 4: Create your jobs	73
Step 5: Separate your data into transfer segments	73
Calibrating a large data transfer	74
Creating a large data migration plan	75
Step 1: Choose your migration details	76
Step 2: Choose your shipping, security, and notification preferences	81
Step 3: Review and create your plan	82
Using the large data migration plan	82
Recommended job ordering schedule	82

	Jobs ordered list	84
	Monitoring dashboard	84
Js	sing Amazon OpsHub to Manage Devices	86
	Downloading Amazon OpsHub	87
	Unlocking a device	87
	Unlocking a device locally	88
	Unlocking a device remotely	91
	Verifying the signature of Amazon OpsHub	94
	Managing Amazon services	98
	Launching an Amazon EC2-compatible instance	99
	Stopping an Amazon EC2-compatible instance	102
	Starting an Amazon EC2-compatible instance	103
	Working with key pairs	104
	Terminating an Amazon EC2-compatible instance	104
	Managing EBS volumes	105
	Importing an image into your device as an Amazon EC2-compatible AMI	107
	Deleting a snapshot	111
	Deregistering an AMI	
	Managing clusters	
	Set up Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub	113
	Managing S3 storage	119
	Managing the NFS interface	
	Rebooting the device	
	Managing profiles with Amazon OpsHub	
	Shutting down the device	
	Editing the device alias	
	Managing public key certificates using OpsHub	
	Download the public key certificate using OpsHub	
	Renewing the public key certificate using OpsHub	
	Getting device updates	
	Updating Amazon OpsHub	
	Automating your management tasks with Amazon OpsHub	
	Creating and starting a task	
	Viewing details of a task	143
	Deleting a task	
	Setting the NTP time servers for the device	144

Configuring and using the Snowball Edge Client	146
Downloading and installing the Snowball Edge Client	. 146
Configuring a profile for the Snowball Edge Client	. 148
Finding Snowball Edge client version	. 151
Getting credentials	. 152
Starting a service on a Snowball Edge	. 153
Stopping a service on a Snowball Edge	. 153
Viewing and downloading logs	. 154
Viewing device status	. 156
Viewing status of services	157
Viewing status of features	. 162
Setting time servers	. 163
Checking time sources	. 163
Updating time servers	. 165
Validating NFC tags	. 165
Updating MTU size	. 166
Transferring files using the S3 adapter	. 167
Downloading and installing the Amazon CLI	168
Install the Amazon CLI on Linux operating systems	. 168
Install the Amazon CLI on Windows operating systems	. 168
Using the Amazon CLI and API operations on Snowball Edge devices	. 169
Authorization with the Amazon S3 API interface for Amazon Snowball Edge	
Getting and using local Amazon S3 credentials	. 170
Configuring the S3 adapter as the Amazon CLI endpoint	. 170
Unsupported Amazon S3 features for the S3 adapter	. 172
Batching small files	. 172
Supported Amazon CLI commands for data transfer	
Supported Amazon CLI commands for Amazon S3	
Supported Amazon S3 REST API actions for data transfer	179
Managing the NFS interface	. 182
NFS configuration for Snowball Edge	. 183
Configure Snowball Edge for the NFS interface	. 183
Starting the NFS service on the Snowball Edge	. 185
Mounting NFS endpoints on client computers	187
Stopping the NFS interface	. 187
Using Amazon EC2-compatible compute instances	. 188

Explaining Amazon EC2-compatible instances	. 189
Pricing for EC2 instances	. 189
Using AMIs on Snowball Edge	. 190
Adding an AMI when ordering	. 192
Adding an AMI from Amazon Web Services Marketplace	. 192
Adding an AMI after receiving the device	. 197
Adding a Microsoft Windows AMI to a Snowball Edge	. 197
Importing a VM Image to a Snowball Edge	. 199
Exporting the latest Amazon Linux 2 AMI for a Snowball Edge	. 199
Importing a VM image to a Snowball Edge device	. 200
Step 1: Prepare the VM image and upload it to the Snowball Edge device	. 201
Step 2: Set up required permissions on the Snowball Edge	. 202
Step 3: Import the VM image as a snapshot on the Snowball Edge	. 208
Step 4: Register the snapshot as an AMI on the Snowball Edge	. 210
Step 5: Launch an instance from the AMI on the Snowball Edge	. 211
Additional AMI actions for a Snowball Edge	. 212
Using the Amazon CLI and API Operations	. 216
Network configurations for compute instances	. 217
DNI and VNI prerequisites	. 218
Setting up a Virtual Network Interface (VNI)	. 218
Setting Up a DNI	
Using SSH to connect to a compute instance	. 223
Transferring data from compute instances to buckets on the same device	. 224
Starting instances automatically	. 225
Creating an EC2-compatible launch configuration	. 225
Updating an EC2-compatible launch configuration	. 225
Deleting an EC2-compatible launch configuration	. 226
Listig EC2-compatible launch configurations	. 226
Creating a Virtual Network Interface on a Snowball Edge	. 226
Describing Your Virtual Network Interfaces	. 227
Updating a Virtual Network Interface	. 228
Deleting a Virtual Network Interface	. 229
Using the Amazon EC2-compatible endpoint	. 230
Specifying the EC2-compatible endpoint as the Amazon CLI endpoint	. 230
Supported EC2-compatible Amazon CLI commands	. 231
Supported Amazon EC2-compatible API operations	. 247

	Autostarting EC2-compatible instances	250
	Using IMDS for Snow with EC2-compatible instances	251
	IMDS versions on a Snowball Edge	252
	Examples of retrieving instance metadata using IMDSV1 and IMDSv2	256
	Using block storage with EC2-compatible instances	260
	Controlling network traffic with security groups	262
	Supported EC2-compatible instance metadata and user data	262
	Computer instance user data	264
	Stopping EC2-compatible instances	264
Us	ing Amazon IoT Greengrass on EC2-compatible instances	266
	Setting up EC2-compatible for Amazon IoT Greengrass	266
	Installing Amazon IoT Greengrass on an EC2-compatible instance on a Snowball Edge	267
Us	ing Amazon Lambda	270
	Getting started using Lambda	270
	Prerequisites for Amazon IoT Greengrass	270
	Prerequisites for Lambda	271
	Deploy a Lambda function to a Snowball Edge device	272
Us	ing Amazon S3 compatible storage on Snowball Edge	273
	Order Amazon S3 compatible storage on Snowball Edge	276
	Setting up and starting Amazon S3 compatible storage on Snowball Edge	276
	Prerequisites	277
	Setting up your local environment	277
	Starting the Amazon S3 compatible storage on Snowball Edge service	278
	Viewing information about endpoints	281
	Working with S3 buckets	282
	Using the Amazon CLI	283
	Using the Java SDK	284
	Bucket ARN format	285
	Bucket location format	. 285
	Determining bucket access	
	Retrieving a list of buckets or regional buckets	285
	Getting a bucket	287
	Creating an S3 bucket	288
	Deleting a bucket	
	Creating and managing an object lifecycle configuration using the Amazon CLI	290
	PUT a lifecycle configuration on a Snowball Edge bucket	290

	Copying an object	292
	Listing objects	293
	Getting an object	295
	Deleting objects	297
	Supported REST API actions for Amazon S3 compatible storage on Snowball Edge	298
	Using Amazon S3 compatible storage on Snowball Edge with a cluster of Snow devices	300
	Snowball Edge cluster quorums	303
	Reconnecting an unavailable cluster node	303
	Replacing a node in a cluster	304
	Configuring Amazon S3 compatible storage on Snowball Edge event notifications	317
	Configuring local SMTP notifications	319
	Configuring the Snowball Edge for local notifications	319
Us	sing Amazon EKS Anywhere on Snowball Edge	321
	Actions to complete before ordering a Snowball Edge device for Amazon EKS Anywhere on	
	Amazon Snow	323
	Create an Ubuntu EKS Distro AMI	323
	Build a Harbor AMI	324
	Ordering a Snowball Edge device for use with Amazon EKS Anywhere on Amazon Snow	324
	Configuring and running Amazon EKS Anywhere on Snowball Edge devices	325
	Initial setup	325
	Configuring and running Amazon EKS Anywhere automatically	
	Configuring and running Amazon EKS Anywhere manually	
	Configuring Amazon EKS Anywhere on Amazon Snow for disconnected operation	
	Configure the Harbor registry on a Snowball Edge device	336
	Use the Harbor registry on the Amazon EKS Anywhere admin instance on a Snowball	
	Edge	
	Creating and maintaining clusters	
	Best practices for creating clusters on a Snowball Edge	
	Upgrading clusters on a Snowball Edge	
	Cleaning up cluster resources on a Snowball Edge	
Us	sing IAM locally	
	Using the Amazon CLI and API Operations	
	Supported IAM Amazon CLI Commands	
	Supported IAM API operations on Snowball Edge	
	Supported IAM policy version and grammar on Snowball Edge	
	IAM policy examples on Snowball Edge	343

	Allowing the GetUser call for a sample user on a Snowball Edge through the IAM API	. 344
	Allowing full access to the Amazon S3 API on a Snowball Edge	. 344
	Allowing read and write access to an Amazon S3 bucket on a Snowball Edge	. 344
		. 345
	Allowing list, get, and put access to an Amazon S3 bucket on a Snowball Edge	345
	Allowing full access to the Amazon EC2 API on a Snowball Edge	345
	Allowing access to start and stop Amazon EC2-compatible instances on a Snowball	
	Edge	. 346
	Denying calls to DescribeLaunchTemplates but allowing all calls to DescribeImages on a	
	Snowball Edge	. 346
	Policy for API calls on a Snowball Edge	. 347
	TrustPolicy example on a Snowball Edge	. 347
U	sing Amazon STS	349
	Using the Amazon CLI and API operations on a Snowball Edge	. 349
	Supported Amazon STSAmazon CLI commands on a Snowball Edge	350
	Example command to assume a role on a Snowball Edge	350
	Supported Amazon STS API operations on a Snowball Edge	. 350
Μ	anaging public key certificates	. 352
	Listing the certificate	352
	Getting certificates	353
	Deleting cettificates	353
P	ort requirements for Amazon services	. 355
U	sing Snowball Edge Device Management to manage devices	357
	Choosing the Snowball Edge Device Management state when ordering a Snowball Edge	358
	Activating Snowball Edge Device Management on a Snowball Edge	359
	Adding permissions for Snowball Edge Device Management to an IAM role on a Snowball	
	Edge	360
	Snowball Edge Device Management CLI commands	. 361
	Creating a Snowball Edge Device Management task	. 362
	Checking the status of a Snowball Edge Device Management task	. 363
	Checking device information with Snowball Edge Device Management	. 364
	Checking states of EC2-compatible instances with Snowball Edge Device Management	365
	Viewing Snowball Edge Device Management task metadata	. 366
	Cancelling a Snowball Edge Device Management task	368
	Listing Snowball Edge Device Management commands and syntax	. 369
	Listing Snowball Edge available for remote management	369

Listing status of tasks across devices	370
Listing available resources on devices	372
Listing device or task tags	373
Listing tasks by status	374
Applying tags to tasks or devices	375
Removing tags from tasks or devices	375
Updating Snowball Edge devices	377
Prerequisites for updating software	378
Downloading updates	378
Installing updates	382
Updating the SSL certificate	388
Updating your Amazon Linux 2 AMIs	389
Understanding jobs	391
Job details	391
Job statuses	392
Statuses of Snowball Edge cluster jobs	394
Import jobs	395
Export jobs	396
Using Amazon S3 object keys with export jobs	397
Best practices for export jobs	405
Information about local compute and storage jobs	405
Information about local storage jobs	406
Information about local storage on a cluster of devices	406
Best practices	407
Security recommendations	407
Best practices for resource management	408
Data transfer performance recommnedations	408
Improving data transfer speed	410
Security	411
Data Protection	411
Protecting Data in the Cloud	413
Protecting Data On Your Device	413
Identity and Access Management	415
Access Control for Console and Jobs	416
Logging and Monitoring	453
Compliance validation	453

Resilience	454
Infrastructure Security	454
Data validation	456
Local file inventory	456
Common causes of data validation errors with Snowball Edge	456
Validating data mnaully after importing into Amazon S3	457
Notifications	459
How Snow uses Amazon SNS	459
Encrypting SNS topics for job status changes	459
Setting up a customer-managed KMS key policy	460
SNS notifications examples	461
Logging with Amazon CloudTrail	474
Amazon Snowball Edge information in CloudTrail	474
Understanding log file entries	475
Quotas	477
Limitations for Amazon Snowball Edge jobs	477
Rate limits on Amazon Snowball Edge	477
Amazon Snow S3 Adapter connection limit	477
Limitations on transferring on-premises data	478
Quotas for compute instances	478
Compute resource storage quotas on Snowball Edge	478
Shared compute resource limitations on Snowball Edge	480
Shipping limitations	481
Limitations on processing returned devices for import jobs	481
Troubleshooting	483
Identify a device	484
Troubleshooting boot-up problems	485
Troubleshooting problems witht the LCD display during boot-up	485
Troubleshooting problems with the E Ink display during boot-up	487
Troubleshooting connection problems	488
Troubleshooting unlock-device command problems	489
Troubleshooting manifest file problems	489
Troubleshooting credentials problems	489
Troubleshooting unable to locate Amazon CLI credientials	490
Troubleshooting error message: Check Your Secret Access Key and Signing	490
Troubleshooting data transfer problems	490

491
492
. 492
. 494
496
501
501
501
502
502
502
503
503
504

# What is Snowball Edge?

Snowball Edge is a device with on-board storage and compute power for select Amazon capabilities. Snowball Edge can process data locally, run edge-computing workloads, and transfer data to or from the Amazon Web Services Cloud.

Each Snowball Edge device can transport data at speeds faster than the internet. This transport is done by shipping the data in the devices through a regional carrier. The appliances are rugged, complete with E Ink shipping labels.

Snowball Edge devices have two options for device configurations—*Storage Optimized 210 TB* and *Compute Optimized*. When this guide refers to Snowball Edge devices, it's referring to all options of the device. When specific information applies only to one or more optional configurations of devices, it is called out specifically. For more information, see <u>Snowball Edge device configurations</u>.

#### **Topics**

- Snowball Edge features
- Services related to Snowball Edge
- Accessing the Snowball Edge service
- · Pricing for the Snowball Edge
- Resources for first-time Amazon Snowball Edge users
- Amazon Snowball Edge device hardware information
- Prerequisites for using Snowball Edge

# **Snowball Edge features**

Snowball Edge devices have the following features:

- Large amounts of storage capacity or compute functionality for devices. This depends on the options you choose when you create your job.
- Network adapters with transfer speeds of up to 100 Gbit/second.
- Encryption is enforced, protecting your data at rest and in physical transit.
- You can import or export data between your local environments and Amazon S3, and physically transport the data with one or more devices without using the internet.

Snowball Edge features 1

- Snowball Edge devices are their own rugged box. The built-in E Ink display changes to show your shipping label when the device is ready to ship.
- Snowball Edge devices come with an on-board LCD display that can be used to manage network connections and get service status information.
- You can cluster Snowball Edge devices for local storage and compute jobs to achieve data durability across 3 to 16 devices and locally grow or shrink storage on demand.
- You can use Amazon EKS Anywhere on Snowball Edge devices for Kubernetes workloads.
- Snowball Edge devices have Amazon S3 and Amazon EC2 compatible endpoints available, enabling programmatic use cases.
- Snowball Edge devices support the new sbe1, sbe-c, and sbe-g instance types, which you can use to run compute instances on the device using Amazon Machine Images (AMIs).
- Snowball Edge supports these data transfer protocols for data migration:
  - NFSv3
  - NFSv4
  - NFSv4.1
  - Amazon S3 over HTTP or HTTPS (via API compatible with Amazon CLI version 1.16.14 and earlier)

# Services related to Snowball Edge

You can use an Amazon Snowball Edge device with the following related Amazon services:

- Amazon S3 adapter Use for programmatic data transfer in to and out of Amazon using the Amazon S3 API for Snowball Edge, which supports a subset of Amazon S3 API operations. In this role, data is transferred to the Snow device by Amazon on your behalf and the device is shipped to you (for an export job), or Amazon ships an empty Snow device to you and you transfer data from your on-premises sources to the device and ship it back to Amazon (for an import job)"
- Amazon S3 compatible storage on Snowball Edge Use to support the data needs of
  compute services such as Amazon EC2, Amazon EKS Anywhere on Snow, and others. This
  feature is available on Snowball Edge devices and provides an expanded Amazon S3 API set and
  features such as increased resiliency with flexible cluster setup for 3 to 16 nodes, local bucket
  management, and local notifications.
- Amazon EC2 Run compute instances on a Snowball Edge device using the Amazon EC2 compatible endpoint, which supports a subset of the Amazon EC2 API operations. For more

Related Services 2

information about using Amazon EC2 in Amazon, see <u>Getting started with Amazon EC2 Linux</u> instances.

- Amazon EKS Anywhere on Snow Create and operate Kubernetes clusters on Snowball Edge devices. See Using Amazon EKS Anywhere on Amazon Snow.
- Amazon Lambda powered by Amazon IoT Greengrass Invoke Lambda functions based on Amazon S3 compatible storage on Snowball Edge storage actions made on an Amazon Snowball Edge device. For more information about using Lambda, see <u>Using Amazon Lambda with an</u> Amazon Snowball Edge and the Amazon Lambda Developer Guide.
- Amazon Elastic Block Store (Amazon EBS) Provide block-level storage volumes for use with EC2-compatible instances. For more information, see <u>Amazon Elastic Block Store</u> (Amazon EBS).
- Amazon Identity and Access Management (IAM) Use this service to securely control access to Amazon resources. For more information, see What is IAM?
- Amazon Security Token Service (Amazon STS) Request temporary, limited-privilege
  credentials for IAM users or for users that you authenticate (federated users). For more
  information, see Temporary security credentials in IAM.
- Amazon EC2 Systems Manager Use this service to view and control your infrastructure on Amazon. For more information, see What is Amazon Systems Manager?

# **Accessing the Snowball Edge service**

You can use the <u>Amazon Snow Family Management Console</u> or the job management API to create and manage jobs. For more information about using the <u>Amazon Snow Family Management</u> <u>Console</u>, see <u>Getting started with Snowball Edge</u>. For information about the job management API, see Job Management API Reference for Snowball Edge.

## Accessing an Amazon Snowball Edge device

After your Snowball Edge device is onsite, you can configure it with an IP address using the LCD screen then you can unlock the device using the Snowball Edge client or Amazon OpsHub. Then, you run can perform data transfer or edge compute tasks. For more information, see <u>Receiving the Snowball Edge</u>.

# **Pricing for the Snowball Edge**

For information about the pricing and fees associated with the service and its devices, see <u>Amazon</u> Snowball Edge Pricing.

# Resources for first-time Amazon Snowball Edge users

If you are a first-time user of the Amazon Snowball Edge service, we recommend that you read the following sections in order:

- For information about device types and options, see <u>Amazon Snowball Edge device hardware</u> information.
- 2. To learn more about the types of jobs, see Understanding Snowball Edge jobs.
- 3. For an end-to-end overview of how to use an Amazon Snowball Edge device, see <a href="How Amazon">How Amazon</a> Snowball Edge works.
- 4. When you're ready to get started, see Getting started with Snowball Edge.
- 5. For information about using compute instances on a device, see <u>Using Amazon EC2-compatible</u> compute instances on Snowball Edge.

# Amazon Snowball Edge device hardware information

All Snowball Edge devices share physical characteristics, like size and weight, but contain different types of hardware to suit their intended use. Devices designed for data transfer are configured with more storage and devices designed for compute are configured with more virtual CPUs and memory. This section provides information about the physical characteristics of Snowball Edge devices, and their compute and storage specifications.

#### **Topics**

- Snowball Edge device configurations
- Amazon Snowball Edge device specifications
- Network hardware supported by Snowball Edge

# **Snowball Edge device configurations**

Snowball Edge devices have the following options for device configurations:

 Snowball Edge storage-optimized 210 TB – This Snowball Edge device option has 210 TB of usable storage capacity. • Snowball Edge compute-optimized – This Snowball Edge device (with AMD EPYC Gen2) has the most compute functionality, with up to 104 vCPUs, 416 GB of memory, and 28 TB of dedicated NVMe SSD for compute instances.

#### Note

When using Amazon S3 compatible storage on Snowball Edge on these devices, usable storage will vary. See Using Amazon S3 compatible storage on Snowball Edge on Snowball Edge for storage capacity with Amazon S3 compatible storage on Snowball Edge.

For more information about the compute functionality of these three options, see Using Amazon EC2-compatible compute instances on Snowball Edge. Job creation and disk capacity differences in terabytes are described here.

#### Note

When we refer to Snowball Edge devices, this includes all optional variants of the device. When information applies to one or more specific optional configurations, we mention this explicitly.

The following table summarizes the differences between the various device options. For hardware specification information, see Amazon Snowball Edge device specifications.

	Snowball Edge storage-o ptimized 210 TB	Snowball Edge compute- optimized with AMD EPYC Gen2 and NVME
CPU	AMD Rome, 64 cores, 2 GHz	AMD Rome, 64 cores, 2 GHz
vCPUs	104	104
Usable memory	416 GB	416 GB
Security card	Yes	Yes
SSD	210 TB NVMe	28 TB NVMe

**Device configurations** 

	Snowball Edge storage-o ptimized 210 TB	Snowball Edge compute- optimized with AMD EPYC Gen2 and NVME
Usable HDD	Not applicable	Not applicable
Network interfaces	<ul> <li>2x 10 Gbit – RJ45 (one usable)</li> <li>1x 25 Gbit – SFP28</li> <li>1x 100 Gbit – QSFP28</li> </ul>	<ul> <li>2x 10 Gbit – RJ45 (one usable)</li> <li>1x 25 Gbit – SFP28</li> <li>1x 100 Gbit – QSFP28</li> </ul>
Physical security features	<ul> <li>Hidden magnetic screws</li> <li>Intrusion switches</li> <li>NFC tags</li> <li>Anti-tamper inserts</li> <li>Android app for tamper detection</li> <li>Conformal coating</li> </ul>	<ul> <li>Hidden magnetic screws</li> <li>Intrusion switches</li> <li>NFC tags</li> <li>Anti-tamper inserts</li> <li>Android app for tamper detection</li> <li>Conformal coating</li> </ul>

# **Amazon Snowball Edge device specifications**

In this section, you can find specifications for Amazon Snowball Edge device types and the hardware.

#### **Topics**

- Snowball Edge Storage Optimized 210 TB specifications
- Snowball Edge Compute Optimized device specifications

# **Snowball Edge Storage Optimized 210 TB specifications**

The following table contains hardware specifications for Snowball Edge Storage Optimized 210 TB devices.

Item	Snowball Edge Storage Optimized 210 TB specifications
Compute and memory specifica tions	
CPU	104 vCPUs
RAM	416 GB
Storage specifica tions	
NVME storage capacity	210 TB usable (for object and NFS data transfer)
SSD storage capacity	None
Power supply specifications	
Power	In Amazon Web Services Regions in the US: NEMA 5–15p 100–220 volts. In all Amazon Regions, a power cable is included
Power consumption	304 watts for an average use case, though the power supply is rated for 1200 watts
Voltage	100 – 240V AC
Frequency	47/63 Hz
Data and network connections	2x 10 Gbit – RJ45 (one usable)
	1x 25 Gbit – SFP28
	1x 100 Gbit – QSFP28
Cables	Each Amazon Snowball Edge device ships country-specific power cables. No other cables or optics are provided. For more information, see <a href="Network hardware supported by Snowball Edge">Network hardware supported by Snowball Edge</a> .

Item	Snowball Edge Storage Optimized 210 TB specifications
Thermal requireme nts	Amazon Snowball Edge devices are designed for office operations, and are ideal for data center operations.
Decibel output	On average, an Amazon Snowball Edge device produces 68 decibels of sound, typically quieter than a vacuum cleaner or living-room music.
Dimensions and weight specifications	
Weight	49.7 pounds (22.54 Kg)
Height	15.5 inches (394 mm)
Width	10.6 inches (265 mm)
Length	28.3 inches (718 mm)
Environment specifications	
Vibration	Non-operational use equivalent to ASTM D4169 Truck level I 0.73 GRMS
Shock	Operational use equivalent to 70G (MIL-S-901)
	Non-operational use equivalent to 50G (ISTA-3A)
Altitude	Operational use equivalent to 0–3,000 meters (0–10,000 feet)
	Non-operational use equivalent to 0–12,000 meters
Temperature range	0–30°C (operational)

# **Snowball Edge Compute Optimized device specifications**

Item	Snowball Edge Compute Optimized specifications
Compute and memory specifica tions	
CPU	104 vCPUs
RAM	512 GB RAM (Up to 416 GB RAM - Customer usable)
Storage specifications	
SSD storage capacity	28 TB NVMe SSD
Power supply specifications	
Power	In Amazon Web Services Regions in the US: NEMA 5– 15p 100–220 volts. In all Amazon Regions, a power cable is included
Power consumption	304 watts for an average use case, though the power supply is rated for 1200 watts
Voltage	100 – 240V AC
Frequency	47/63 Hz
Data and network connections	2x 10 Gbit – RJ45 (one usable)
	1x 25 Gbit – SFP28
	1x 100 Gbit – QSFP28
Cables	Each Amazon Snowball Edge device ships country- specific power cables. No other cables or optics are provided. For more information, see <u>Network hardware</u> <u>supported by Snowball Edge</u> .

Item	Snowball Edge Compute Optimized specifications
Thermal requirements	Amazon Snowball Edge devices are designed for office operations, and are ideal for data center operations.
Decibel output	On average, an Amazon Snowball Edge device produces 68 decibels of sound, typically quieter than a vacuum cleaner or living-room music.
Dimensions and weight specifica tions	
Weight	49.7 pounds (22.54 Kg)
Height	15.5 inches (394 mm)
Width	10.6 inches (265 mm)
Length	28.3 inches (718 mm)
Environment specifications	
Vibration	Non-operational use equivalent to ASTM D4169 Truck level I 0.73 GRMS
Shock	Operational use equivalent to 70G (MIL-S-901)
	Non-operational use equivalent to 50G (ISTA-3A)
Altitude	Operational use equivalent to 0–3,000 meters (0–10,000 feet)
	Non-operational use equivalent to 0–12,000 meters
Temperature range	0–45°C (operational)

# **Network hardware supported by Snowball Edge**

To use the Amazon Snowball Edge device, you need your own network cables. For RJ45 cables, there are no specific recommendations. SFP+ and QSFP+ cables and modules from Mellanox and Finisar have been verified to be compatible with the device.

After you open the back panel of the Amazon Snowball Edge device, you see the network ports similar to the ports shown in the following screenshot.



Only one network interface on the Amazon Snowball Edge device can be used at a time. Hence use any one of the ports to support the following network hardware.

#### **SFP**

This port provides a 10G/25G SFP28 interface compatible with SFP28 and SFP+ transceiver modules and direct-attach copper (DAC) cables. You need to provide your own transceivers or DAC cables.

- For 10G operation, you can use any SFP+ option. Examples include:
  - 10Gbase-LR (single mode fiber) transceiver
  - 10Gbase-SR (multi-mode fiber) transceiver
  - SFP+ DAC cable
- For 25G operation, you can use any SFP28 option. Examples include:
  - 25Gbase-LR (single mode fiber) transceiver
  - 25Gbase-SR (multi-mode fiber) transceiver
  - SFP28 DAC cable

Supported network hardware 11



#### **QSFP**

This port provides a 40G QSFP+ interface on storage optimized devices and a 40/50/100G QSFP + interface on compute optimized devices. Both are compatible with QSFP+ transceiver modules and DAC cables. You need to provide your own transceivers or DAC cables. Examples include the following:

- 40Gbase-LR4 (single mode fiber) transceiver
- 40Gbase-SR4 (multi-mode fiber) transceiver
- QSFP+ DAC




#### **RJ45**

This port provides 1Gbase-TX/10Gbase-TX operation. It is connected via UTP cable terminated with a RJ45 connector. Snowball Edge devices have two RJ45 ports. Choose one port to use.

Supported network hardware 12

1G operation is indicated by a blinking amber light. 1G operation is not recommended for large-scale data transfers to the Snowball Edge device, as it dramatically increases the time it takes to transfer data.

10G operation is indicated by a blinking green light. It requires a Cat6A UTP cable with a maximum operating distance of 180 feet (55 meters).

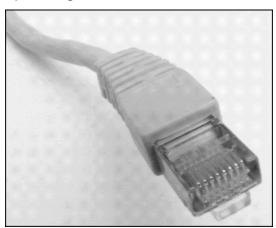

# **Prerequisites for using Snowball Edge**

Before you get started with a Snowball Edge, you need to sign up for an Amazon account if you don't have one. We also recommend learning how to configure your data and compute instances for use with Snowball Edge.

Amazon Snowball Edge is a region-specific service. So before you plan your job, be sure that the service is available in your Amazon Web Services Region. Ensure that your location and Amazon S3 bucket are within the same Amazon Web Services Region or the same country because it will impact your ability to order the device.

To use Amazon S3 compatible storage on Snowball Edge with compute optimized devices for local edge compute and storage jobs, you need to provision S3 capacity on the device or devices when you order. Amazon S3 compatible storage on Snowball Edge supports local bucket management, so you can create S3 buckets on the device or cluster after you receive the device or devices.

As part of the order process, you create an Amazon Identity and Access Management (IAM) role and an Amazon Key Management Service (Amazon KMS) key. The KMS key is used to encrypt the unlock code for your job. For more information about creating IAM roles and KMS keys, see <a href="Creating a job">Creating a job</a> to order a Snowball Edge device.



#### Note

In the Asia Pacific (Mumbai) Amazon Web Services Region service is provided by Amazon on Internet Services Private Limited (AISPL). For information on signing up for Amazon Web Services in the Asia Pacific (Mumbai) Amazon Web Services Region, see Signing Up for AISPL.

#### **Topics**

- Sign up for an Amazon Web Services account
- Secure IAM users
- About your environment
- Working with filenames that contain special characters
- Amazon S3 encryption with Amazon KMS
- Prerequisites for using Amazon S3 adapter on Snowball Edge for import and export jobs
- Prerequisites for using Amazon S3 compatible storage on Snowball Edge
- Prerequisites for using compute instances on Snowball Edge

# Sign up for an Amazon Web Services account

If you do not have an Amazon Web Services account, use the following procedure to create one.

### To sign up for Amazon Web Services

- Open http://www.amazonaws.cn/ and choose **Sign Up**. 1.
- 2. Follow the on-screen instructions.

Amazon sends you a confirmation email after the sign-up process is complete. At any time, you can view your current account activity and manage your account by going to http:// www.amazonaws.cn/ and choosing My Account.

### Secure IAM users

After you sign up for an Amazon Web Services account, safeguard your administrative user by turning on multi-factor authentication (MFA). For instructions, see Enable a virtual MFA device for an IAM user (console) in the IAM User Guide.

To give other users access to your Amazon Web Services account resources, create IAM users. To secure your IAM users, turn on MFA and only give the IAM users the permissions needed to perform their tasks.

For more information about creating and securing IAM users, see the following topics in the *IAM User Guide*:

- Creating an IAM user in your Amazon Web Services account
- Access management for Amazon resources
- Example IAM identity-based policies

## **About your environment**

Understanding your dataset and how the local environment is set up will help you complete your data transfer. Consider the following before placing your order.

#### What data are you transferring?

Transferring a large number of small files does not work well with Amazon Snowball Edge. This is because Snowball Edge Edge encrypts each individual object. Small files include files under 1 MB in size. We recommend that you zip them up before transferring them onto the Amazon Snowball Edge device. We also recommend that you have no more than 500,000 files or directories within each directory.

#### Will the data be accessed during the transfer?

It is important to have a static dataset, (that is, no users or systems are accessing the data during transfer). If not, the file transfer can fail due to a checksum mismatch. The files won't be transferred and the files will be marked as Failed.

To prevent corrupting your data, don't disconnect an Amazon Snowball Edge device or change its network settings while transferring data. Files should be in a static state while being written to the device. Files that are modified while they are being written to the device can result in read/write conflicts.

#### Will the network support Amazon Snowball Edge data transfer?

Snowball Edge supports the *RJ45*, *SFP+*, or *QSFP+* networking adapters. Verify that your switch is a gigabit switch. Depending on the brand of switch, it might say **gigabit** or **10/100/1000**. Snowball Edge devices do not support a megabit switch, or 10/100 switch.

About the your environment 15

# Working with filenames that contain special characters

It's important to note that if the names of your objects contain special characters, you might encounter errors. Although Amazon S3 allows special characters, we highly recommend that you avoid the following characters:

- Backslash ("\")
- Left curly brace ("{")
- Right curly brace ("}")
- Left square bracket ("[")
- Right square bracket ("]")
- 'Less Than' symbol ("<")
- 'Greater Than' symbol (">")
- Non-printable ASCII characters (128–255 decimal characters)
- Caret ("^")
- Percent character ("%")
- Grave accent / back tick ("`")
- · Quotation marks
- Tilde ("~")
- 'Pound' character ("#")
- Vertical bar / pipe ("|")

If your files have one or more of these characters in object names, rename the objects before you copy them to the Amazon Snowball Edge device. Windows users who have spaces in their file names should be careful when copying individual objects or running a recursive command. In commands, surround the names of objects that include spaces in the names with quotation marks. The following are examples of such files.

Operating system	File name: test file.txt
Windows	"C:\Users\ <username>\desktop\test file.txt"</username>
iOS	/Users/ <username>/test\ file.txt</username>

Operating system	File name: test file.txt
Linux	/home/ <username>/test\ file.txt</username>

#### Note

The only object metadata that is transferred is the object name and size.

# Amazon S3 encryption with Amazon KMS

You can use the default Amazon managed or customer managed encryption keys to protect your data when importing or exporting data.

### Using Amazon S3 default bucket encryption with Amazon KMS managed keys

#### To enable Amazon managed encryption with Amazon KMS

- 1. Open the Amazon S3 console at https://console.amazonaws.cn/s3/.
- 2. Choose the Amazon S3 bucket that you want to encrypt.
- In the wizard that appears on the right side, choose **Properties**.
- In the **Default encryption** box, choose **Disabled** (this option is grayed out) to enable default encryption.
- Choose Amazon-KMS as the encryption method, and then choose the KMS key that you want to use. This key is used to encrypt objects that are PUT into the bucket.
- Choose Save.

After the Snowball Edge job is created, and before the data is imported, add a statement to the existing IAM role policy. This is the role you created during the ordering process. Depending on the job type, the default role name looks similar to Snowball-import-s3-only-role or Snowball-export-s3-only-role.

The following are examples of such a statement.

#### For importing data

If you use server-side encryption with Amazon KMS managed keys (SSE-KMS) to encrypt the Amazon S3 buckets associated with your import job, you also need to add the following statement to your IAM role.

### **Example Example Snowball import IAM role**

```
{
    "Effect": "Allow",
    "Action": [
        "kms: GenerateDataKey",
    "kms: Decrypt"
    ],
    "Resource":"arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-efgh-11111111111"
}
```

#### For exporting data

If you use server-side encryption with Amazon KMS managed keys to encrypt the Amazon S3 buckets associated with your export job, you also must add the following statement to your IAM role.

#### **Example Snowball export IAM role**

```
{
    "Effect": "Allow",
    "Action": [
        "kms:Decrypt"
    ],
    "Resource":"arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-
efgh-1111111111"
}
```

# Using S3 default bucket encryption with Amazon KMS customer keys

You can use the default Amazon S3 bucket encryption with your own KMS keys to protect data you are importing and exporting.

#### For importing data

#### To enable customer managed encryption with Amazon KMS

- Sign in to the Amazon Web Services Management Console and open the Amazon Key Management Service (Amazon KMS) console at https://console.amazonaws.cn/kms.
- 2. To change the Amazon Web Services Region, use the Region selector in the upper-right corner of the page.
- 3. In the left navigation pane, choose **Customer managed keys**, and then choose the KMS key associated with the buckets that you want to use.
- 4. Expand **Key Policy** if it is not already expanded.
- 5. In the **Key Users** section, choose **Add** and search for the IAM role. Choose the IAM role, and then choose **Add**.
- 6. Alternatively, you can choose **Switch to Policy view** to display the key policy document and add a statement to the key policy. The following is an example of the policy.

#### Example of a policy for the Amazon KMS customer managed key

```
{
    "Sid": "Allow use of the key",
    "Effect": "Allow",
    "Principal": {
        "AWS": [
            "arn:aws:iam::111122223333:role/snowball-import-s3-only-role"
        ]
    },
    "Action": [
        "kms:Decrypt",
        "kms:GenerateDataKey"
    ],
    "Resource": "*"
}
```

After this policy has been added to the Amazon KMS customer managed key, it is also needed to update the IAM role associated with the Snowball job. By default, the role is snowball-import-s3-only-role.

#### **Example of the Snowball import IAM role**

```
{
    "Effect": "Allow",
```

```
"Action": [
    "kms: GenerateDataKey",
    "kms: Decrypt"
],
    "Resource": "arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-
efgh-11111111111"
}
```

For more information, see Using Identity-Based Policies (IAM Policies) for Amazon Snowball Edge.

The KMS key that is being used looks like the following:

```
"Resource": "arn:aws:kms:region:AccoundID:key/*"
```

#### For exporting data

#### Example of a policy for the Amazon KMS customer managed key

```
{
    "Sid": "Allow use of the key",
    "Effect": "Allow",
    "Principal": {
        "AWS": [
            "arn:aws:iam::111122223333:role/snowball-import-s3-only-role"
        ]
    },
    "Action": [
        "kms:Decrypt",
        "kms:GenerateDataKey"
    ],
    "Resource": "*"
}
```

After this policy has been added to the Amazon KMS customer managed key, it is also needed to update the IAM role associated with the Snowball job. By default, the role looks like the following:

```
snowball-export-s3-only-role
```

#### **Example of the Snowball export IAM role**

```
{
   "Effect": "Allow",
   "Action": [
```

```
"kms: GenerateDataKey",
    "kms: Decrypt"
],
    "Resource": "arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-
efgh-11111111111"
}
```

After this policy has been added to the Amazon KMS customer managed key, it is also needed to update the IAM role associated with the Snowball job. By default, the role is snowball-export-s3-only-role.

# Prerequisites for using Amazon S3 adapter on Snowball Edge for import and export jobs

You can use S3 adapter on Snowball Edge when you are using the devices to move data from on-premises data sources to the cloud or from the cloud to on-premises data storage. For more information, see <u>Transferring files using the Amazon S3 adapter for data migration to or from Snowball Edge</u>.

The Amazon S3 bucket associated with the job must use the Amazon S3 standard storage class. Before creating your first job, keep the following in mind.

For jobs that import data into Amazon S3, follow these steps:

- Confirm that the files and folders to transfer are named according to the <u>object key naming</u>
   <u>guidelines</u> for Amazon S3. Any files or folders with names that don't meet these guidelines aren't
   imported into Amazon S3.
- Plan what data you want to import into Amazon S3. For more information, see <u>Planning your</u> large transfer with Snowball Edge.

Before exporting data from Amazon S3, follow these steps:

- Understand what data is exported when you create your job. For more information, see <u>Using</u>
   Amazon S3 object keys when exporting data to a Snowball Edge device.
- For any files with a colon (:) in the file name, change the file names in Amazon S3 before you create the export job to get these files. Files with a colon in the file name fail export to Microsoft Windows Server.

# Prerequisites for using Amazon S3 compatible storage on Snowball Edge

You use Amazon S3 compatible storage on Snowball Edge when you are storing data on the device at your edge location and using the data for local compute operations. Data used for local compute operations will not be imported to Amazon S3 when the device is returned.

When ordering a Snow device for local compute and storage with Amazon S3 compatible storage, keep the following in mind.

- You will provision Amazon S3 storage capacity when you order the device. So consider your storage need before ordering a device.
- You can create Amazon S3 buckets on the device after you receive it rather than while ordering a Snowball Edge device.
- You will need to download the latest version of the Amazon CLI (v2.11.15 or higher), Snowball Edge client, or Amazon OpsHub and install it on your computer to use Amazon S3 compatible storage on Snowball Edge.
- After receiving your device, configure, start, and use Amazon S3 compatible storage on Snowball Edge according to Using Amazon S3 compatible storage on Snowball Edge in this guide.

# Prerequisites for using compute instances on Snowball Edge

You can run Amazon EC2-compatible compute instances hosted on a Amazon Snowball Edge with the sbe1, sbe-c, and sbe-g instance types:

- The sbe1 instance type works on devices with the Snowball Edge Edge Storage Optimized option.
- The sbe-c instance type works on devices with the Snowball Edge Edge Compute Optimized option.

All the compute instance types supported on Snowball Edge Edge device options are unique to Amazon Snowball Edge devices. Like their cloud-based counterparts, these instances require Amazon Machine Images (AMIs) to launch. You choose the AMI for an instance before you create your Snowball Edge Edge job.

To use a compute instance on a Snowball Edge Edge, create a job to order a Snowball Edge device and specify your AMIs. You can do this using the Amazon Snowball Edge Management Console, the Amazon Command Line Interface (Amazon CLI), or one of the Amazon SDKs. Typically, to use your instances, there are some housekeeping prerequisites that you must perform before creating your job.

- Amazon Linux 2
- CentOS 7 (x86\_64) with Updates HVM
- Ubuntu 16.04 LTS Xenial (HVM)
- Ubuntu 20.04 LTS Focal
- Ubuntu 22.04 LTS Jammy
- Microsoft Windows Server 2012 R2
- Microsoft Windows Server 2016
- Microsoft Windows Server 2019

#### Note

Ubuntu 16.04 LTS - Xenial (HVM) images are no longer supported in the Amazon Web Services Marketplace, but still supported for use on Snowball Edge devices through Amazon EC2 VM Import/Export and running locally in AMIs.

You can get these images from Amazon Web Services Marketplace.

If you're using SSH to connect to the instances running on a Snowball Edge, you can use your own key pair or you can create one on the Snowball Edge. To use Amazon OpsHub to create a key pair on the device, see <a href="Working with key pairs for EC2-compatible instances in Amazon OpsHub">Working with key pairs for EC2-compatible instances in Amazon OpsHub</a>. To use the Amazon CLI to create a key pair on the device, see <a href="create-key-pair">create-key-pair</a> in <a href="List of supported EC2-compatible Amazon CLI commands on a Snowball Edge</a>. For more information on key pairs and Amazon Linux 2, see <a href="Amazon EC2">Amazon EC2</a> key pairs and Linux instances in the Amazon EC2 User Guide.

For information specific to using compute instances on a device, see <u>Using Amazon EC2-compatible</u> <u>compute instances on Snowball Edge</u>.

### How Amazon Snowball Edge works

Amazon Snowball Edge devices are owned by Amazon, and they reside at your on-premises location while they're in use.

There are three job types you can use with an Amazon Snowball Edge device. Although the job types differ in their use cases, every job type has the same workflow for how you order, receive, and return devices. Regardless of the job type, every job follows a data erasure of the National Institute of Standards and Technology (NIST) 800-88 standard after the job completes.

#### The shared workflow

- 1. **Create the job** Each job is created in the Amazon Snow Family Management Console or programmatically through the job management API. The status for a job can be tracked in the console or through the API.
- 2. A device is prepared for your job We prepare an Amazon Snowball Edge device for your job, and the status of your job is now Preparing Snowball. This preparation process may take up to 4 weeks from when the job to order the device was created. This timeline should be factored into your project plan to ensure a seamless transition.
- 3. A device is shipped to you by your region's carrier The carrier takes over from here, and the status of your job is now In transit to you. You can find your tracking number and a link to the tracking website on the console or with the job management API. For information about who your region's carrier is, see Shipping considerations for Snowball Edge.
- 4. **Receive the device** A few days later, your region's carrier delivers the Amazon Snowball Edge device to the address that you provided when you created the job, and the status of your job changes to **Delivered to you**. When it arrives, you'll notice that it didn't arrive in a box, because the device is its own shipping container.
- 5. **Get your credentials and download the Snowball Edge client** Get ready to start transferring data by getting your credentials, your job manifest, and the manifest's unlock code, and then downloading the Snowball Edge client.
  - The Snowball Edge client is the tool that you use to manage the flow of data from the device to your on-premises data destination.

You can download and install the Snowball Edge client from the <u>Amazon Snowball Edge</u> resources page.

- The manifest is used to authenticate your access to the device, and it is encrypted so that only the unlock code can decrypt it. You can get the manifest from the console or with the job management API when the device is on-premises at your location.
- The unlock code is a 29-character code used to decrypt the manifest. You can get the unlock code from the console or with the job management API. We recommend that you keep the unlock code saved somewhere separate from the manifest to prevent unauthorized access to the device while it's at your facility.
- 6. **Position the hardware** Move the device into your data center and open it following the instructions on the case. Connect the device to power and your local network.
- 7. Power on the device Next, power on the device by pressing the power button above the LCD display. Wait a few minutes, and the **Ready** screen appears.
- 8. Get the IP address for the device The LCD display has a CONNECTION tab on it. Tap this tab and get the IP address for the Amazon Snowball Edge device.
- 9. Use the Snowball Edge client to unlock the device When you use the Snowball Edge client to unlock the Amazon Snowball Edge device, enter the IP address of the device, the path to your manifest, and the unlock code. The Snowball Edge client decrypts the manifest and uses it to authenticate your access to the device.
- 10**Use the device** The device is up and running. You can use it to transfer data with the Amazon S3 adapter or the Network File System (NFS) mount point or for local compute and storage with Amazon S3 compatible storage on Snowball Edge.
- 11**Prepare the device for its return trip** After you're done with the device in your on-premises location, press the power button above the LCD display. It takes about 20 seconds or so for the device to power off. Unplug the device and its power cables into the cable nook on top of the device, and shut all three of the device's doors. The device is now ready to be returned.
- 12.Your region's carrier returns the device to Amazon When the carrier has the Amazon Snowball Edge device, the status for the job becomes **In transit to Amazon**.



There are additional steps for export and cluster jobs. For more information, see How Snowball Edge export jobs work and How Snowball Edge clustered local compute and storage jobs work.

#### **Topics**

- · How Snowball Edge import jobs work
- How Snowball Edge export jobs work
- How Snowball Edge local compute and storage jobs work
- Snowball Edge videos and blogs

### How Snowball Edge import jobs work

Each import job uses a single Snowball appliance. After you create a job to order a Snowball Edge device in the Amazon Snow Family Management Console or the job management API, we ship a Snowball to you. When it arrives in a few days, you connect the Snowball Edge device to your network and transfer the data that you want imported into Amazon S3 onto the device. When you're done transferring data, ship the Snowball back to Amazon, and we import your data into Amazon S3.

### ▲ Important

The import process cannot write to buckets in Amazon S3 from the Snow device if you have turned on S3 Object Lock and enabled Default retention settings. After Amazon S3 Object Lock is enabled, you can't disable it or suspend bucket versioning for the bucket. If your buckets have S3 Object Lock with Default retention settings enabled, before returning the Snowball Edge, disable the retention setting of S3 Object Lock. After the data is imported from the device by Amazon, enable the retetion setting on the bucket again. For more information, see Set or modify a retention period on an S3 object.

The import process also cannot write to your bucket in Amazon S3 if IAM policies on the bucket prevent writing to the bucket. For more information, see <u>Identity and Access Management for Amazon S3</u>.

### How Snowball Edge export jobs work

Each export job can use any number of Amazon Snowball Edge devices. If the listing contains more data than can fit on a single device, multiple devices are provided to you. Each job part has exactly one device associated with it. After your job parts are created, your first job part enters the **Preparing Snowball** status.

How import jobs work 26



The listing operation used to split your job into parts is a function of Amazon S3, and you are billed for it the same way as any Amazon S3 operation.

Soon after that, we start exporting your data onto a device. The time required to export your data will vary based on the the nature of your data set. For example, exporting many small files (less than 10 MB) takes significantly longer. When the export is done, Amazon gets the device ready for pickup by your region's carrier. When it arrives, you connect the Amazon Amazon Snowball Edge device to your network and transfer the data from the device to storage on your network.

When you're done transferring data, ship the device back to Amazon. When we receive the device for your export job part, we erase it completely. This erasure follows the National Institute of Standards and Technology (NIST) 800-88 standards. This step marks the completion of that particular job part.

#### For keylisting

Before we export the objects in the S3 bucket, we scan the bucket. If the bucket is altered after the scan, the job could encounter delays because we scan for missing or altered objects.

#### For S3 Glacier Flexible Retrieval

It is important to note that Amazon Snowball Edge cannot export objects that are in S3 Glacier storage class. These objects must be restored before Amazon Snowball Edge can successfully export the objects in the bucket.

### How Snowball Edge local compute and storage jobs work

You can use the local compute and storage functionality of an Amazon Snowball Edge device by running Amazon EC2-compatible compute instances or Kubernetes containers in Amazon EKS Anywhere on Snow. For compute functionality, data storage is provided by Amazon S3 compatible storage on Snowball Edge.

You can create Amazon S3 buckets on the Snowball Edge devices to store and retrieve objects on premises for applications that require local data access, local data processing, and data residency. Amazon S3 compatible storage on Snowball Edge provides a new storage class, SNOW, which uses the Amazon S3 APIs, and is designed to store data durably and redundantly across multiple

Snowball Edge devices. You can use the same APIs and features on Snowball Edge buckets that you do on Amazon S3, including bucket lifecycle policies, encryption, and tagging. When the device or devices are returned to Amazon, all data created or stored in Amazon S3 compatible storage on Snowball Edge is erased. For more information, see Local Compute and Storage Only Jobs.

For more information, see Information about using Snowball Edge devices to provide local compute and storage functionality.

### How Snowball Edge clustered local compute and storage jobs work

A cluster job is a special kind of job for local storage and compute only. It is for those workloads that require increased data durability and storage capacity. For more information, see Information about jobs providing local storage on a cluster of Snowball Edge devices.



#### Note

Like standalone local storage and compute jobs, the data stored in a cluster can't be imported into Amazon S3 without ordering additional devices as a part of separate import jobs. If you order these devices, you can transfer the data from the cluster to the devices and import the data when you return the devices for the import jobs.

Clusters have 3 to 16 Amazon Snowball Edge devices, called *nodes*. When you receive the nodes from your regional carrier, connect all the nodes to power and your network to obtain their IP addresses. You use these IP addresses to unlock all the nodes of the cluster at once with a single unlock command, using the IP address of one of the nodes. For more information, see Configuring and using the Snowball Edge Client.

You can write data to an unlocked cluster by using or using Amazon S3 compatible storage on Snowball Edge and the data distributed among the other nodes.

When you're done with your cluster, ship all the nodes back to Amazon. When we receive the cluster node, we perform a complete erasure of the Snowball. This erasure follows the National Institute of Standards and Technology (NIST) 800-88 standards.

### Snowball Edge videos and blogs

• Migrating mixed file sizes with the snow-transfer-tool on Amazon Snowball Edge devices

- Amazon Snowball Edge Data Migration
- Amazon OpsHub for Snow Family
- Novetta delivers IoT and Machine Learning to the edge for disaster response
- Enable large-scale database migrations with DMS and Amazon Snowball Edge
- Data Migration Best Practices with Amazon Snowball Edge
- Amazon Snowball Edge resources
- Amazon S3 Compatible Storage on Amazon Snowball Edge Compute Optimized Devices Now Generally Available
- Getting started with Amazon S3 compatible storage on Snowball Edge on Amazon Snowball
   Edge devices

## Long-term pricing for Snowball Edge devices

When ordering a Snowball Edge device, you can choose the pricing option to best fit your use case. Pricing is available in two ways: on-demand for each day you have the device or prepaid, longterm pricing in monthly, one-, or three-year terms based on the device type. You may choose to automatically renew your long-term pricing option for one- or three-year terms so that a new prepaid period begins when the previous period ends to avoid interruption of your use of the device. The monthly long-term pricing option will automatically renew while the device is in your possession. For more information about ordering a device, see Creating a job to order a Snowball Edge device in this guide.

In addition to budgetary convenience, long-term pricing allows you to swap Snowball Edge devices during the pricing period when you operational requirements change. For example, you can request to swap devices so that the new device includes a new AMI or new data from Amazon S3 or to replace a failed device. See Swapping Snowball Edge devices during the long-term pricing period.



#### Note

If you request to swap or replace a Snowball Edge device under 1 Year or 3 Year Commit Pricing Plan for any reason other than hardware or a software issue attributed to Amazon Snow service, you will be charged a Device Cycling Fee. This Device Cycling Fee is determined as the Monthly fee (for Snowball Edge Compute Optimized) or On-Demand Job Fee for your configuration.

For more information on long-term pricing, see Optimizing cost with long-term pricing options for Amazon Snowball Edge. For Amazon Snowball Edge pricing for your Amazon Web Services Region, see Amazon Snowball Edge Pricing.

# Swapping Snowball Edge devices during the long-term pricing period

Swapping Snowball Edge devices during the long-term pricing period involves ordering a new device and immediately returning the current device.

- 1. Create a new job for the replacement Snowball Edge device. The replacement device must be for the same job type and have the same compute and storage options as the device you have. See Creating a job to order a Snowball Edge device in this guide.
- 2. Immediately return the device you have. See <u>Powering off the Snowball Edge</u> and <u>Returning</u> <u>the Snowball Edge device</u>. Amazon will manage the device replacement logistics, and there will be a device cycling fee assessed for this swap.

## **Shipping considerations for Snowball Edge**

When you create a job to order a Snowball Edge device, you provide a shipping address and choose shipping speed. Note that the shipping speed doesn't indicate how soon you can expect to receive the device from the day you created the job. Rather, it indicates the time that the device is in transit between Amazon and your shipping address.

It may take up to 4 weeks to provision and prepare the device for your job before it is shipped. This timeline should be factored into your project plan to ensure a seamless transition. While Amazon is preparing your device to ship, you can monitor the status of your job through the Amazon Snow Family Management Console. For more information, see Statuses of Snowball Edge jobs.



#### Note

The shipping speed that you choose applies when Amazon sends the device to you and when you return the device to Amazon.

Snowball Edge devices can only be used to import or export data within the Amazon Region where the devices are ordered.

### Region-based shipping restrictions for Snowball Edge

Before you create a job to order a Snowball Edge device, you should sign in to the console from the Amazon Web Services Region that your Amazon S3 data is housed in. A few shipping restrictions apply, as follows:

We don't ship Amazon Snowball Edge devices between regions.



#### Note

Amazon will not ship an Amazon Snowball Edge device to a post office box.

### **Shipping Carriers**

When you create a job to order a Snowball Edge device, you provide the address that you want the Amazon Snowball Edge device shipped to. The carrier that supports your region handles the

shipping of Amazon Snowball Edge devices from Amazon to you, and from you back to Amazon. Whenever an Amazon Snowball Edge device is shipped, you'll get a tracking number. You can find each job's tracking number and a link to the tracking website from the Amazon Snow Family Management Console's job dashboard, or by using API calls to the job management API. In China, the carrier is S.F. Express.

### **Region-Based Shipping Restrictions**

Before you create a job to order a Snowball Edge device, you should sign in to the console from the Amazon Web Services Region that your Amazon S3 data is housed in. A few shipping restrictions apply, as follows:

We don't ship Amazon Snowball Edge devices between regions.



#### Note

Amazon will not ship an Amazon Snowball Edge device to a post office box.

### **Getting started with Snowball Edge**

With an Amazon Snowball Edge device, you can access the storage and compute power of the Amazon Web Services Cloud locally and cost effectively in places where connecting to the internet might not be an option. You can also transfer hundreds of terabytes or petabytes of data between your on-premises data centers and Amazon Simple Storage Service (Amazon S3).

Following, you can find general instructions for creating and completing your first Amazon Snowball Edge device job in the Amazon Snow Family Management Console. The console presents the most common workflows, separated into job types. You can find more information about specific components of the Amazon Snowball Edge device in this documentation. For an overview of the service as a whole, see How Amazon Snowball Edge works.

It may take up to 4 weeks to provision and prepare the Snowball Edge for your job before it is shipped. This timeline should be factored into your project plan to ensure a seamless transition.

Before you can get started, you must create an Amazon Web Services account and an administrator user in Amazon Identity and Access Management (IAM). For information, see <a href="Prerequisites for using Snowball Edge">Prerequisites for using Snowball Edge</a>.

#### **Topics**

- Creating a job to order a Snowball Edge device
- Cancelling a job to order a Snowball Edge
- Cloning a job to order a Snowball Edge in the Amazon Snow Family Management Console
- Receiving the Snowball Edge
- Connecting a Snowball Edge to your local network
- Getting credentials to access a Snowball Edge
- Unlocking the Snowball Edge
- Setting up local users on a Snowball Edge
- Rebooting the Snowball Edge device
- Powering off the Snowball Edge
- Returning the Snowball Edge device
- Return shipping for Snowball Edge
- Monitoring the import status from the Snowball Edge
- Getting your data transfer job completion report and logs

### Creating a job to order a Snowball Edge device

To order a Snowball Edge device, you create a job to order a Snowball Edge device in the Amazon Snow Family Management Console. A *job* is a term that Amazon uses to describe the lifecycle of the use of a Snowball Edge device by a customer. A job begins when you order a device, continues when Amazon prepares the device and ships it to you and you use it, and completes after Amazon receives and processes the device after you return it. Jobs are categorized by type: export, import, and local compute and storage. For more information, see <a href="Understanding Amazon Snowball Edge">Understanding Amazon Snowball Edge</a> jobs.

After you create the job to order a device, you can use the Amazon Snow Family Management Console to view the job status and monitor the progress of the device you ordered as Amazon prepares the device to ship to you and after it is returned. For more information, see <u>Job Statuses</u>. After the device is returned and processed by Amazon, you can access a job completion report and logs through the Amazon Snow Family Management Console. For more information, see <u>Getting</u> your job completion report and logs on the console.

You can also create and manage jobs using the job management API. For more information, see the Amazon Snowball Edge API Reference.

### **Topics**

- Choosing a job type
- Choosing your compute and storage options
- Choosing your features and options
- Choosing security, shipping, and notification preferences
- Reviewing the job summary and create your job

### Choosing a job type


The first step in creating a job is to determine the type of job that you need and to start planning it using the Amazon Snow Family Management Console.

### To choose your job type

1. Sign in to the Amazon Web Services Management Console, and open the <u>Amazon Snow Family</u> Management Console. If this is your first time creating a job in this Amazon Web Services

Region, you will see the **Amazon Snowball Edge** page. Otherwise you will see the list of existing jobs.

- 2. If this is your first job to order a device, choose **Order an Amazon Snowball Edge device**. If you're expecting multiple jobs to migrate over 500 TB of data, choose **Create your large data migration plan greater than 500 TB**. Otherwise, choose **Create Job** in the left navigation bar. Choose **Next step** to open the **Plan your job** page.
- 3. In the **Job name** section, provide a name for your job in the **Job name** box.
- 4. Depending on your need, choose one of the following job types:
  - Import into Amazon S3 Choose this option to have Amazon ship an empty Snowball Edge device to you. You connect the device to your local network and run the Snowball Edge client. You copy data onto the device using NFS share or the S3 adapter, ship it back to Amazon, and your data is uploaded to Amazon.
  - Export from Amazon S3 Choose this option to export data from your Amazon S3 bucket to your device. Amazon loads your data on the device and ships it to you. You connect the device to your local network and run the Snowball Edge client. You copy data from your device to your servers. When you are done, ship the device to Amazon, and your data is erased from the device.
  - Local compute and storage only Perform compute and storage workloads on the device without transferring data.

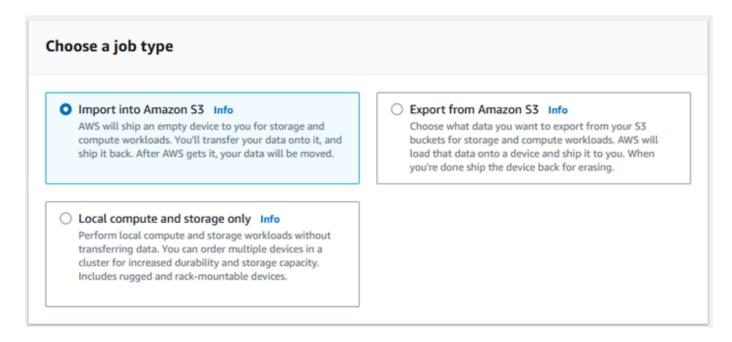

5. Choose **Next** to continue.

Choosing a job type 36

### **Choosing your compute and storage options**

Choose the hardware specifications for your Snowball Edge device, which of your Amazon EC2compatible instances to include on it, how data will be stored, and pricing.

#### To choose your device's compute and storage options

In the **Snow devices** section, choose the Snowball Edge device to order.



#### Note

Some Snowball Edge might not be available depending on the Amazon Web Services Region you are ordering from and the job type you chose.

- In the **Choose your pricing option** section, from the **Choose your pricing option** menu, 2. choose the type of pricing to apply to this job. If you choose 1 year or 3 year commit upfront pricing, in Auto-renew, choose On to automatically renew the pricing when the current period ends or **Off** to not automatically renew the pricing when the current period ends. For more information about long-term pricing options for Snowball Edge devices, see Long-term pricing for Snowball Edge devices in this guide. For device pricing for your Amazon Web Services Region, see Amazon Snowball Edge Pricing.
- In the **Select the storage type** section, make a choice according to your need: 3.
  - S3 Adapter: Use the S3 adapter to transfer data programmatically to and from Snowball Edge using Amazon S3 REST API actions.
  - Amazon S3 compatible storage: Use Amazon S3 compatible storage to deploy S3 compatible durable, scalable object storage on single Snowball Edge device or in a multidevice cluster.
  - NFS based data transfer: Use Network File System (NFS) based data transfer to drag and drop files from your computer into Amazon S3 buckets on Snowball Edge.



#### Marning

NFS based data transfer doesn't support the S3 adapter. If you proceed with NFS based data transfer, you must mount the NFS share to transfer objects. Using the Amazon CLI to transfer objects will fail.

See Using NFS for Offline Data Transfer in the Amazon Snowball Edge Edge Developer Guide for more information.




#### Note

Storage type options available depend on the job type and Snow device you chose.

- 4. If you selected S3 Adapter as the storage type or if you selected a device that supports block storage, do the following to select one or more S3 buckets to include on the device:
  - In the **Select your S3 buckets** section, do one or more of the following to select one or more \$3 buckets:
    - 1. Choose the S3 bucket that you want to use in the S3 bucket name list.
    - 2. In the **Search for an item** field, enter all or part a bucket name to filter the list of available buckets on your entry, then choose the bucket.
    - 3. Choose the **Create a new S3 bucket** to create a new S3 bucket. The new bucket name appears in the **Bucket name** list. Choose it.

You can include one or more S3 buckets. These buckets appear on your device as local S3 buckets.

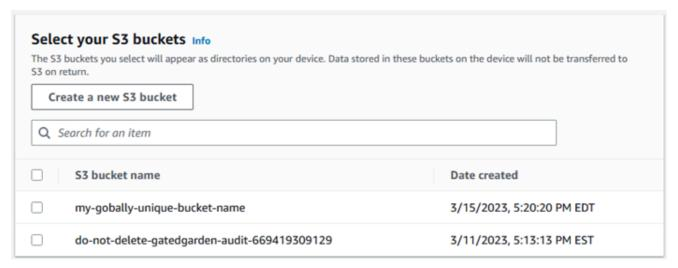


If you selected Amazon S3 compatible storage as the storage type, in the S3 storage capacity section, do the following:

- Select to use Amazon S3 compatible storage on Snowball Edge on a single device or a cluster of devices. See Using a Amazon Snowball Edge cluster in this guide.
- Select the amount of device storage to use for Amazon S3 compatible storage on Snowball Edge.




When using Amazon S3 compatible storage on Snowball Edge, you can manage and create Amazon S3 buckets after you receive the device, so you don't need to choose them while ordering. See Amazon S3 compatible storage on Snowball Edge in this guide.

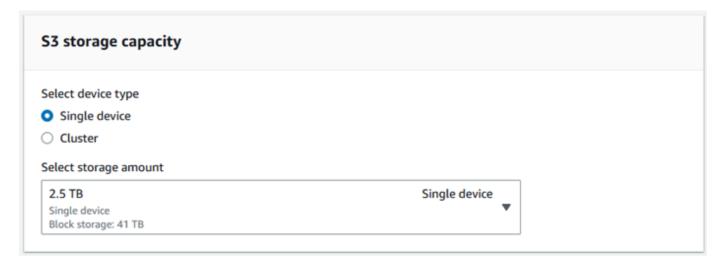

- If you selected NFS based data transfer as the storage type, in the Select your S3 buckets section, do one or more of the following to select one or more S3 buckets:
  - Choose the S3 bucket that you want to use in the S3 bucket name list. a.
  - In the **Search for an item** field, enter all or part a bucket name to filter the list of available b. buckets on your entry, then choose the bucket.
  - Choose the Create a new S3 bucket to create a new S3 bucket. The new bucket name C. appears in the **Bucket name** list. Choose it.
  - d. After choosing S3 buckets to use with NFS data transfer, also choose an S3 bucket to use as block storage for AMIs. See the steps to choose an S3 bucket.

You can include one or more S3 buckets. These buckets appear on your device as local S3 buckets.

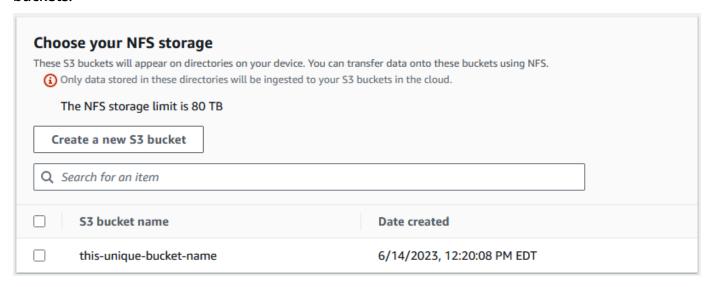

7. In the **Compute using EC2-compatible instances -** *optional* section, choose Amazon EC2-compatible AMIs from your account to include on the device. Or, in the search field, enter all or part the name of an AMI to filter the list of available AMIs on your entry, then choose the AMI.

To learn about configuring an AMI for secure shell (SSH), see <u>Configuring an AMI for a Snowball Edge and SSH</u>

For more information, see Adding an AMI When Ordering Your Device in this guide.

This feature incurs additional charges. For more information, see <u>Amazon Snowball Edge Pricing.</u>

8. Choose the **Next** button.

### **Choosing your features and options**

Choose the features and options to include in your Amazon Snowball Edge device job, including Amazon EKS Anywhere for Snow, an Amazon IoT Greengrass instance, and remote device management capability.

#### To choose your features and options

 In the Amazon EKS Anywhere on Amazon Snow section, to include Amazon EKS Anywhere on Amazon Snow, select Include Amazon EKS Anywhere on Snow and then do the following.



We recommend that you create your Kubernetes cluster with the latest available Kubernetes version supported by Amazon EKS Anywhere. For more information, see Amazon EKS-Anywhere Versioning. If your application requires a specific version of Kubernetes, use any version of Kubernetes offered in standard or extended support by Amazon EKS. Consider the release and support dates of Kubernetes versions when planning the lifecycle of your deployment. This will help you avoid the potential loss of support for the version of Kubernetes you intend to use. For more information, see Amazon EKS Kubernetes release calendar.

- In the **Build your own AMI** section, choose the AMIs you have built for Amazon EKS Anywhere. See Actions to complete before ordering a Snowball Edge device for Amazon EKS Anywhere on Amazon Snow.
- In the **High availability** section, to operate Amazon EKS Anywhere clusters across multiple Snowball Edge devices, choose the number of devices to include in your order.
- In the Amazon IoT Greengrass on Snow section, to include a validated AMI for IoT workloads, select Install Amazon IoT Greengrass validated AMI on my Snow device.
- To enable remote management of your Snowball Edge device by Amazon OpsHub or Snowball Edge Client, select Manage your Snow device remotely with Amazon OpsHub or Snowball Edge Client.
- Select the **Next** button.

### Choosing security, shipping, and notification preferences

#### **Topics**

- Choose security preferences for the Snowball Edge
- Choose your shipping preferences for receiving and returning the Snowball Edge
- Choose preferences for notifications about the Snowball Edge job

### **Choose security preferences for the Snowball Edge**

Setting security adds the permissions and encryption settings for your Amazon Snowball Edge job to help protect your data while in transit.

#### To set security for your job

- 1. In the **Encryption** section, choose the **KMS key** that you want to use.
  - If you want to use the default Amazon Key Management Service (Amazon KMS) key, choose **Amazon/importexport (default)**. This is the default key that protects your import and export jobs when no other key is defined.
  - If you want to provide your own Amazon KMS key, choose **Enter a key ARN**, provide the Amazon Resource Name (ARN) in the **key ARN** box, and choose **Use this KMS key**. The key ARN will be added to the list.
- 2. In the **Choose service access type** section, do one of the following:
  - Choose Snow console will create and use a service-linked role to access Amazon
    resources on your behalf. to grant Amazon Snowball Edge permissions to use Amazon
    S3 and Amazon Simple Notification Service (Amazon SNS) on your behalf. The role grants
    Amazon Security Token Service (Amazon STS) AssumeRole trust to the Snow service
  - Choose **Add an existing service role to use**, to specify the **Role ARN** that you want, or you can use the default role.
- 3. Choose **Next**.

### Choose your shipping preferences for receiving and returning the Snowball Edge

Receiving and returning a Snowball Edge device involves shipping the device back and forth, so it's important that you provide accurate shipping information.

### To provide shipping details

- 1. In the **Shipping Address** section, choose an existing address or add a new address.
  - If you choose **Use recent address**, the addresses on file are displayed. Carefully choose the address that you want from the list.
  - If you choose **Add a new address**, provide the requested address information. The Amazon Snow Family Management Console saves your new shipping information.



The country that you provide in the address must match the destination country for the device and must be valid for that country.

In the **Shipping speed** section, choose a shipping speed for the job. The shipping speed 2. doesn't indicate how soon you can expect to receive the device from the day you created the job. Rather, it indicates the time that the device is in transit between Amazon and your shipping address.

It may take up to 4 weeks to provision and prepare the device for your job before it is shipped. This timeline should be factored into your project plan to ensure a seamless transition.

The shipping speeds you can choose are:

- One-Day Shipping (1 business day)
- Two-Day Shipping (2 business days)

### Choose preferences for notifications about the Snowball Edge job

Notifications update you on the latest status of your Amazon Snowball Edge jobs. You create an SNS topic and receive emails from Amazon Simple Notification Service (Amazon SNS) as your job status changes.

#### To set up notifications

- In the **Set notifications** section, do one of the following:
  - If you want to use an existing SNS topic, choose Use an existing SNS topic, and choose the topic Amazon Resource Name (ARN) from the list.
  - If you want to create a new SNS topic, choose **Create a new SNS topic**. Enter a name for your topic and provide an email address.



#### Note

Jobs to order Snow devices created in the US West (N. California) and US West (Oregon) regions are routed through US East (N. Virginia) region. Because of this, service calls like Amazon SNS are also directed through US East (N. Virginia). We

recommend creating any new SNS topics in the US East (N. Virginia) region for the best experience.

Notifications will be about one of the following states of your job:

- Job created
- Preparing device
- Preparing shipment
- · In transit to you
- Delivered to you
- In transit to Amazon
- At sorting facility
- At Amazon
- Importing
- Completed
- Canceled

For more information about job status change notifications and encrypted SNS topics, see Notifications for Snowball Edge in this guide.

Select the Next.

### Reviewing the job summary and create your job

After you provide all the necessary information for your Amazon Snowball Edge job, review the job and create it. After you create the job, Amazon will begin preparing the Snowball Edge for shipment to you.

Jobs are subject to export control laws in specific countries and might require an export license. US export and re-export laws also apply. Diversion from the country and US laws and regulations is prohibited.

1. In the **Job summary** page, review all the sections before you create the job. If you want to make changes, choose **Edit** for the appropriate section, and edit the information.

2. When you are done reviewing and editing, choose **Create job**.



#### Note

After you create a job to order a Snowball Edge device, you can cancel it while it is in the Job created state without incurring any charges. For more information, see Cancelling a job through the Amazon Snow Family Management Console.


After your job is created, you can see the status of the job in the **Job status** section. For detailed information about job statuses, see Job Statuses.

### Cancelling a job to order a Snowball Edge

After creating a job to order a Snowball Edge device, you can cancel the job through the Amazon Snow Family Management Console. If you cancel the job, you won't receive the device you ordered. You can only cancel the job while the job status is *Job created*. After the job progresses past this status, you cannot cancel the job. For more information, see Job Statuses.

When you cancel a job while it's in the Job created status, you will not be charged for the Snowball Edge device. Billing only begins after the device has been prepared and shipped to you.

- 1. Log in to the Amazon Snow Family Management Console.
- Choose the job to cancel. 2.
- 3. Choose **Actions**. From the menu that appears, choose **Cancel job**.



The **Cancel job** window appears. To confirm cancelling the job, enter the **job** name and choose **Cancel job**. In the list of jobs, **Cancelled** appears in the **Status** column.

Cancelling a job



# Cloning a job to order a Snowball Edge in the Amazon Snow **Family Management Console**

When you first create an import job or a local compute and storage job, you might discover that you need more than one Amazon Snowball Edge device. Because import jobs and local compute and storage jobs are associated with a single device, requiring more than one device means that you need to create more than one job. When creating additional jobs, you can go through the job creation wizard again in the console, or you can clone an existing job.

#### Note

Cloning a job is a shortcut available in the console to make creating additional jobs easier. If you're creating jobs with the job management API, you can simply run the job creation command again.

Cloning a job means re-creating it exactly, except for an automatically modified name. Cloning is a simple process.

#### To clone a job in the console

- In the Amazon Snow Family Management Console, choose your job from the table.
- 2. For **Actions**, choose **Clone job**.

The **Create job** wizard opens to the last page, **Step 6: Review**.

- Review the information and make any changes you want by choosing the appropriate **Edit** 3. button.
- To create your cloned job, choose **Create job**.

Cloned jobs are named in the format **Job Name-clone-number**. The number is automatically added to the job name and represents the number of times you've cloned this job after the first time you clone it. For example, AprilFinanceReports-clone represents the first cloned job of AprilFinanceReports job, and DataCenterMigration-clone-42 represents the forty-second clone of the **DataCenterMigration** job.

### Receiving the Snowball Edge

When you receive the Amazon Snowball Edge device, you might notice that it doesn't come in a box. The device is its own physically rugged shipping container. When the device first arrives, inspect it for damage or obvious tampering. If you notice anything that looks suspicious about the device, don't connect it to your internal network. Instead, contact Amazon Web Services Support and inform them of the issue so that a new device can be shipped to you.

#### Important

The Amazon Snowball Edge device is the property of Amazon. Tampering with an Amazon Snowball Edge device is a violation of the Amazon Acceptable Use Policy. For more information, see Amazon Acceptable Use Policy.

The device looks like the following image.

Receiving the Snowball Edge



If you're ready to connect the device to your internal network, see the next section.

**Next:** Connecting a Snowball Edge to your local network

## Connecting a Snowball Edge to your local network

Using the following procedure, you connect the Amazon Snowball Edge device to your local network. The device doesn't need to be connected to the internet. The device has three doors: a front, a back, and a top.

#### To connect the device to your network

Open the front and back doors, sliding them inside the device door slots. Doing this gives you access to the touch screen on the LCD display embedded in the front of the device, and the power and network ports in the back.

#### Note

Don't close the front and back doors while you're using the Snowball Edge device. The open doors allow air to cool the device. Closing the doors while using the device may cause the device to shut down to prevent overheating.

- Open the top door and remove the provided power cable from the cable nook, and plug the 2. device into power.
- Choose one of your RJ45, SFP+, or QSFP+ network cables, and plug the device into your network. The network ports are on the back of the device.
- Power on the Amazon Snowball Edge device by pressing the power button above the LCD display.
- When the device is ready, the LCD display shows a short video while the device is getting ready to start. After about 10 minutes, the device is ready to be unlocked.
- (Optional) Change the default network settings through the LCD display by choosing CONNECTION.

You can change your IP address to a different static address, which you provide by using the following procedure.

To troubleshoot boot-up problems, see Troubleshooting boot-up problems with Snowball Edge.

#### To change the IP address of an Amazon Snowball Edge device

1. On the LCD display, choose **CONNECTION**.

A screen appears that shows you the current network settings for the Amazon Snowball Edge device. The IP address below the drop-down box is automatically updated to reflect the DHCP address that the Amazon Snowball Edge device requested.

(Optional) Change the IP address to a static IP address. You can also keep it as is. 2.

The device is now connected to your network.



#### 

To prevent corrupting your data, don't disconnect the Amazon Snowball Edge device or change its connection settings while it's in use.

**Next:** Getting credentials to access a Snowball Edge

### Getting credentials to access a Snowball Edge

Each job has a set of credentials that you must get from the Amazon Snow Family Management Console or the job management API to authenticate your access to the Snowball Edge. These credentials are an encrypted manifest file and an associated unlock code. The manifest file contains important information about the job and permissions associated with it.



#### Note

You get your credentials after the device is in transit to you. You can see the status of your job in the Amazon Snow Family Management Console. For more information, see Statuses of Snowball Edge jobs.

#### To get your credentials using the console

- Sign in to the Amazon Web Services Management Console and open the Amazon Snow Family Management Console.
- 2. On the console, search the table for the specific job to download the job manifest for, and then choose that job.
- 3. Expand that Job status pane, and choose View job details.
- In the details pane that appears, expand **Credentials** and then do the following:
  - Make a note of the unlock code (including the hyphens), because you need to provide all 29 characters to unlock the device.
  - In the dialog box, choose **Download manifest**, and follow the instructions to download the job manifest file to your computer. The name of your manifest file includes your Job ID.



We recommend that you don't save a copy of the unlock code in the same location in the computer as the manifest for that job. For more information, see Best practices for using a Snowball Edge device.

Now that you have your credentials, the next step is to download the Snowball Edge client, which is used to unlock the Amazon Snowball Edge device.

Next: Downloading and installing the Snowball Edge Client

### **Unlocking the Snowball Edge**

This section describes unlocking the Snowball Edge device using the Snowball Edge Client. To unlock the device using Amazon OpsHub, a graphical user interface (GUI) tool for Snowball Edge, see Unlock a device.

Before using a Snowball Edge device to transfer data or perform edge compute tasks, you need to unlock the device. When unlocking the device, you authenticate your ability to access it by providing two forms of credentials: a 29-digit unlock code and a manifest file. After you unlock the device, you can further configure the device, move data to or from it, set up and use Amazon EC2compatible instances, and more.

Before unlocking a device, the device must be plugged in to power and network, turned on, and an IP address assigned. See Connecting a Snowball Edge to your local network. You will need the following information about the Snowball Edge device:

- Download and install the Snowball Edge client. For more information, see Downloading and installing the Snowball Edge Client.
- Get the credentials from the Amazon Snow Family Management Console. For one or more standalone devices, the unlock codes and manifest file for each Snowball Edge. For a cluster of Snowball Edge devices, the one unlock code and one manifest file for the cluster. For more information on downloading credentials, see Getting credentials to access a Snowball Edge.
- Power on each device and connect it to your network. For more information, see Connecting a Snowball Edge to your local network.

#### To unlock a standalone device with the Snowball Edge Client

- 1. Find the IP address for the Amazon Snowball Edge device on the LCD display of the Amazon Snowball Edge device, under the **Connections** tab. Make a note of that IP address.
- 2. Use the unlock-device command to authenticate your access to the Snowball Edge with the IP address of the Snowball Edge and your credentials, as follows.

```
snowballEdge unlock-device --endpoint https://ip-address-of-device --manifest-
file /Path/to/manifest/file.bin --unlock-code 29-character-unlock-code
```

The device indicates it was unlocked successfully with the following message.

Your Snowball Edge device is unlocking. You may determine the unlock state of your device using the describe-device command. Your Snowball Edge device will be available for use when it is in the UNLOCKED state.

If the command returns connection refused, see <u>Troubleshooting unlocking a Snowball</u> Edge.

#### Example of unlock-device command

In this example, the IP address for the device is 192.0.2.0, the manifest file name is JID2EXAMPLE-0c40-49a7-9f53-916aEXAMPLE81-manifest.bin, and the 29-character unlock code is 12345-abcde-12345-ABCDE-12345.

```
snowballEdge unlock-device --endpoint https://192.0.2.0 --manifest-file /
Downloads/JID2EXAMPLE-0c40-49a7-9f53-916aEXAMPLE81-manifest.bin /
    --unlock-code 12345-abcde-12345-ABCDE-12345
```

#### To unlock a cluster of Snowball Edge devices with the Snowball Edge client

 Find the IP address of each of the devices in the cluster on the LCD display of each Amazon Snowball Edge device, under the Connections tab. Make a note of the IP addresses.

Unlocking the Snowball Edge 52

2. Use the snowballEdge unlock-cluster command to authenticate your access to the cluster of Amazon Snowball Edge device devices with the IP address of one of the devices in the cluster, your credentials, and the IP addresses of all devices in the cluster as follows.

```
snowballEdge unlock-cluster --endpoint https://ip-address-of-device --manifest-file Path/to/manifest/file.bin --unlock-code 29-character-unlock-code --device-ip-addresses ip-address-of-cluster-device-1 ip-address-of-cluster-device-2 ip-address-of-cluster-device-3
```

The cluster of devices indicates it was unlocked successfully with the following message.

Your Snowball Edge Cluster is unlocking. You may determine the unlock state of your cluster using the describe-cluster command. Your Snowball Edge Cluster will be available for use when your Snowball Edge devices are in the UNLOCKED state.

If the command returns connection refused, see <u>Troubleshooting unlocking a Snowball</u> Edge.

#### Example of unlock-cluster command

In this example for a cluster of five devices, the IP address for one of the devices in the cluster is 192.0.2.0, the manifest file name is JID2EXAMPLE-0c40-49a7-9f53-916aEXAMPLE81-manifest.bin, and the 29-character unlock code is 12345-abcde-12345-ABCDE-12345.

```
snowballEdge unlock-cluster --endpoint https://192.0.2.0 --manifest-file /
Downloads/JID2EXAMPLE-0c40-49a7-9f53-916aEXAMPLE81-manifest.bin /
--unlock-code 12345-abcde-12345-ABCDE-12345 --device-ip-addresses 192.0.2.0
192.0.2.1 192.0.2.2 192.0.2.3 192.0.2.4
```

Unlocking the Snowball Edge 53

### Troubleshooting unlocking a Snowball Edge

If the unlock-device command returns connection refused, you may have mistyped the command syntax or the configuration of your computer or network may be preventing the command from reaching the Snow device. Take these actions to resolve the situation:

- 1. Ensure the command was entered correctly.
  - a. Use the LCD screen on the device to verify the IP addressed used in the command is correct.
  - b. Ensure that the path to the manifest file used in the command is correct, including the file name.
  - c. Use the <u>Amazon Snowball Edge Management Console</u> to verify the unlock code used in the command is correct.
- 2. Ensure the computer you are using is on the same network and subnet as the Snow device.
- 3. Ensure the computer you are using and the network are configured to allow access to the Snow device. Use the ping command for your operating system to determine if the computer can reach the Snow device over the network. Check the configurations of antivirus software, firewall configuration, virtual private network (VPN), or other configurations of your computer and network.

Now you can begin using the Snowball Edge.

**Next:** Setting up local users on a Snowball Edge

### Setting up local users on a Snowball Edge

Following are steps to set up a local administrator on your Amazon Snowball Edge device.

#### 1. Retrieve your root user credentials

Use the snowballEdge list-access-keys and snowballEdge get-secret-access-key to get your local credentials. For more information, see <u>Getting credentials for a Snowball Edge</u>.

#### 2. Configure the root user credential using aws configure

Supply the Amazon Access Key ID, Amazon Secret Access Key, and Default region name. The region name must be snow. Optionally supply a Default output format. For

more information about configuring the Amazon CLI, see Configuring the Amazon CLI in the Amazon Command Line Interface User Guide.

#### 3. Create one or more local users on your device

Use the create-user command to add users to your device.

```
aws iam create-user --endpoint endpointIPaddress:6078 --region snow --user-
name UserName --profile ProfileID
```

After you add users according to your business needs, you can store your Amazon root credentials in a safe location and only use them for account and service management tasks. For more information about creating IAM users, see Creating an IAM user in your Amazon Web Services account in the IAM User Guide.

#### 4. Create an access key for your user

#### Marning

This scenario requires IAM users with programmatic access and long-term credentials, which presents a security risk. To help mitigate this risk, we recommend that you provide these users with only the permissions they require to perform the task and that you remove these users when they are no longer needed. Access keys can be updated if necessary. For more information, see Update access keys in the IAM User Guide.

Use the create-access-key command to create an access key for your user.

```
aws iam create-access-key --endpoint endpointIPaddress:6078 --region snow --user-
name UserName --profile ProfileID
```

Save the access key information to a file and distribute to your users.

#### Create an access policy

Setting up local users

You might want different users to have different levels of access to functionality on your device. The following example creates a policy document named s3-only-policy and attaches it to a user.

```
aws iam create-policy --endpoint endpointIPaddress:6078 --region snow --policy-name s3-only-policy --policy-document file://s3-only-policy --profile ProfileID
```

#### 6. Attach the policy to your user

Use the attach-user-policy to attach the s3-only-policy to a user.

```
aws iam attach-user-policy --endpoint endpointIPaddress:6078 --region snow
--user-name UserName --policy-arn arn:aws:iam::AccountID:policy/POLICYNAME --
profile ProfileID
```


For more information about using IAM locally, see Using IAM locally on a Snowball Edge.

## Rebooting the Snowball Edge device

Before you reboot a Snowball Edge device, make sure that all data transfer to the device has stopped.


#### To reboot the device using the power button:

1. When all communication with the device has ended, turn it off by pressing the power button located above the LCD screen. It takes about 20 seconds for the device to shut down. While the device is shutting down, the LCD screen displays a message indicating the device is shutting down.

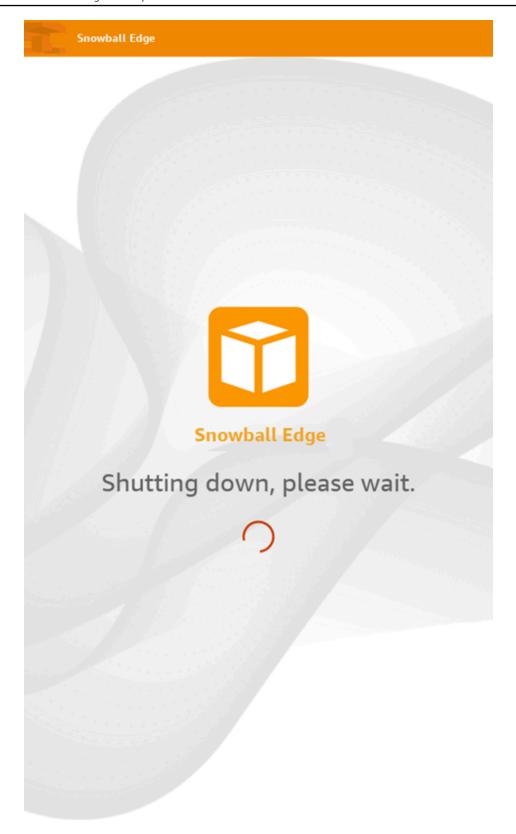



If the LCD screen is displaying the shutdown message when the device is not actually being shut down, press the **Restart display** button on the screen to return the screen to normal operation.

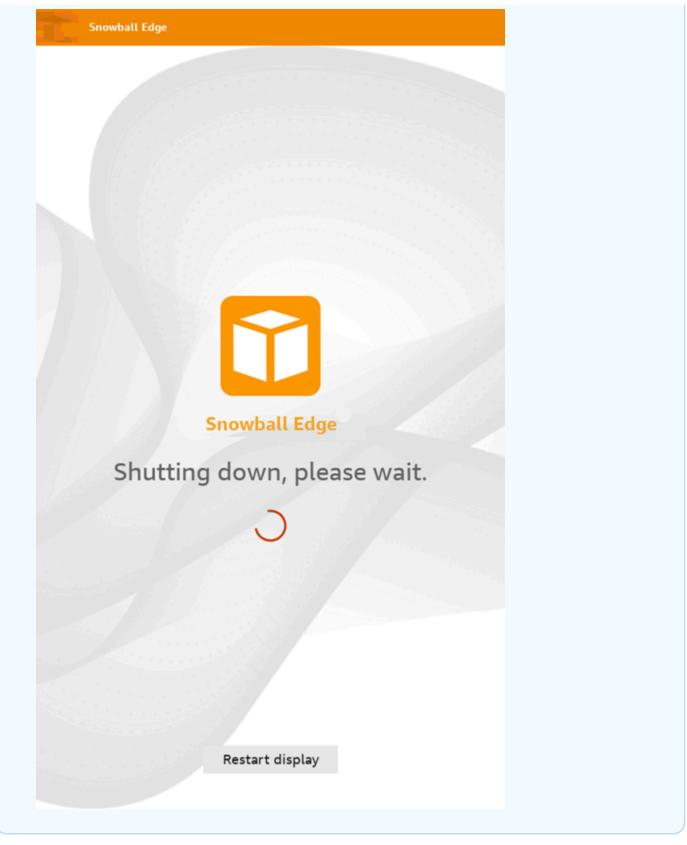

2. Press the power button. When the device is ready, the LCD display shows a short video while the device is getting ready to start. After about 10 minutes, the device is ready to be unlocked.

3. Unlock the device. See Unlocking the Snowball Edge.

#### To reboot the device using the Snowball Edge client:

1. When all communication with the device has ended, use the reboot-device command to reboot it. When the device is ready, the LCD display shows a short video while the device is getting ready to start. After about 10 minutes, the device is ready to be unlocked.


```
snowballEdge reboot-device --profile profile-name
```

2. Unlock the device. See Unlocking the Snowball Edge.

### **Powering off the Snowball Edge**

When you've finished transferring data on to the Amazon Snowball Edge device, prepare it for its return trip to Amazon. Before you continue, make sure that all data transfer to the device has stopped. If you were using the NFS interface to transfer data, disable it before you power off the device. For more information, see Managing the NFS interface.


When all communication with the device has ended, turn it off by pressing the power button located above the LCD screen. It takes about 20 seconds for the device to shut down. While the device is shutting down, the LCD screen displays a message indicating the device is shutting down.

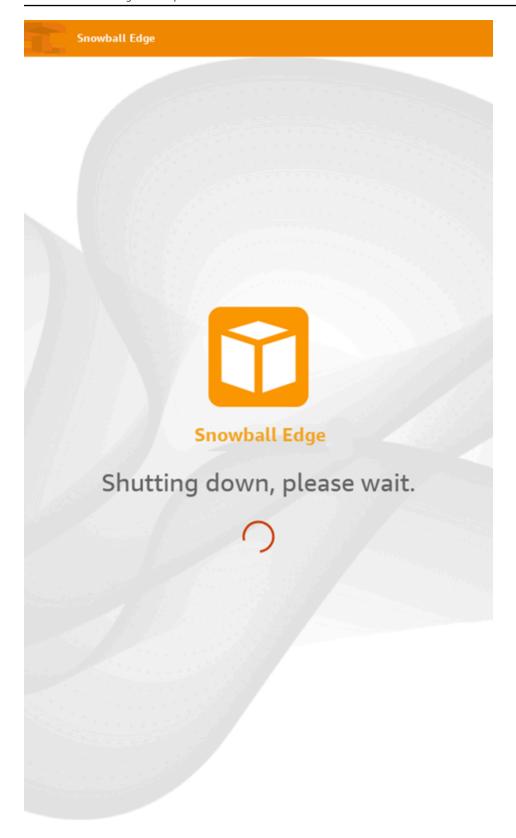



### Note

If the LCD screen is displaying the shutdown message when the device is not actually being shut down, press the Restart display button on the screen to return the screen to normal operation.

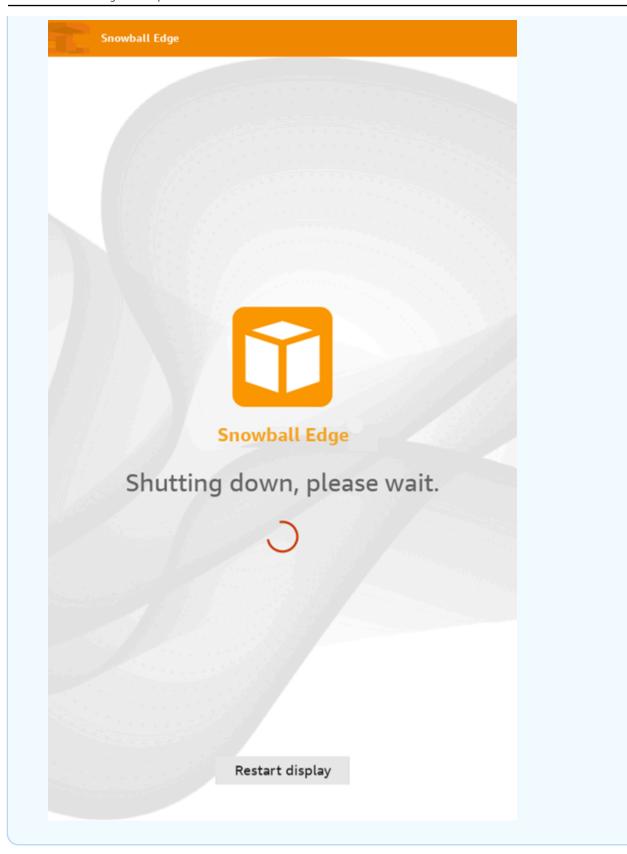

After the device shuts down, the shipping information appears on the E Ink display. If return shipping information does not appear on the E Ink display, contact Amazon Web Services Support.

**Next:** Returning the Snowball Edge device

### Returning the Snowball Edge device

After you are finished using the Snowball Edge and have powered it off, a shipping carrier will return it to Amazon. The carrier automatically provides a tracking number for the shipment of the device. The tracking number appears in the Amazon Snow Family Management Console. You can access the tracking number and a link to the carrier's tracking website by viewing the job's status details in the console. For more information, see Return shipping for Snowball Edge devices.

The carrier delivers the device to an Amazon sorting facility and the device is forwarded to the Amazon data center. At the data center, Amazon will ensure the device has not been tampered with during shipping and that the device is healthy. If the device contains data to import into Amazon S3, Amazon will begin importing it. Otherwise, the data on the device will be securely erased. You can track the status changes as Amazon processes the device in the Amazon Snow Family Management Console. You will receive Amazon SNS notifications of status changes if you selected that option when you created the job to order the device. For more information, see Monitoring the Import Status.

The final status values include when the Amazon Snowball Edge device has been received by Amazon, when data import begins, and when the job is completed.



#### Note

If the device contains data you intended to import into Amazon S3 and you do not want the data on the device to be imported, contact Amazon Web Services Support to request to cancel the Snow job. If you cancel the job, we will skip the data transfer and securely erase the device following the established processes. We are not able to hold a device containing your data at our facilities due to our strict chain of custody and operating procedures.

#### To prepare an Amazon Snowball Edge device for return shipping

- Power off the device. For more information, see Powering off the Snowball Edge. 1.
- 2. Disconnect any network cables connected to the device.

Returning the device

- Disconnect the power cable. Stow it in the cable nook on top of the Amazon Snowball Edge device.
- Close the doors on the back, top, and front of the Amazon Snowball Edge device. Press each door in until you hear and feel a click.

**Next:** Return shipping for Snowball Edge

### **Return shipping for Snowball Edge**

The Amazon Snowball Edge device is shipped from and delivered to an Amazon data center. The prepaid shipping information on the E Ink screen on the device includes the address to return the Amazon Snowball Edge device. The shipping speed for the return matches the original shipping speed when you received the device. You can track status changes using the Amazon Snow Family Management Console, and track the package's progress through your region's carrier.

#### Important

Unless instructed otherwise by Amazon, never affix a separate shipping label to the Amazon Snowball Edge device. Always use the shipping information that's displayed on the Amazon Snowball Edge device E Ink display.

### Amazon Snowball Edge device Pickups in China

In the China regions, keep the following information in mind for S.F. Express to pick up an Amazon Snowball Edge device:

- You arrange for S.F. Express to pick up the Amazon Snowball Edge device by scheduling a pickup with S.F. Express directly.
- The prepaid S.F. Express shipping label on the E Ink display contains the correct address to return the Amazon Snowball Edge device.
- The Amazon Snowball Edge device will be delivered to an Amazon sorting facility and forwarded to the Amazon data center. S.F. Express will automatically report back a tracking number for your job.

Return shipping

#### Important

Unless personally instructed otherwise by Amazon, never affix a separate shipping label to the Amazon Snowball Edge device. Always use the shipping label that is displayed on the Amazon Snowball Edge device's E Ink display.

### Shipping speeds for receiving Snowball Edge

Each country has different shipping speeds available. These shipping speeds are based on the country in which you're shipping an Amazon Snowball Edge device. Shipping speeds are as follows:

• China – When shipping within China, you have access to standard shipping speeds.

### Monitoring the import status from the Snowball Edge

To monitor the status of your import job in the console, sign in to the Amazon Snow Family Management Console in the Amazon Web Services Region where the job was created. Choose the job you want to track from the table, or search for it by your chosen parameters in the search bar above the table. After you select the job, detailed information appears for that job within the table, including a bar that shows real-time status of your job.



#### Note

If we are unable to import data to our data centers from the Snow device due to any issue with access permissions you have configured, we will attempt to notify you and you will have 30 days from the date we provide the notification to resolve the issue. If the issue is not resolved, we may cancel your Snowball Edge job and delete data from the device.

After your device arrives at Amazon, your job status changes from In transit to Amazon to At **Amazon**. On average, it takes a day for your data import into Amazon S3 to begin. When it does, the status of your job changes to **Importing**. It will take approximately the same amount of time for Amazon to import your data from the Snowball Edge as it did for you to move it to the Snowball Edge. After your data is imported, the job status changes to **Completed** status.

Now your first data import job into Amazon S3 using Amazon Snowball Edge is complete. You can get a report about the data transfer from the console. To access this report from the console, select

Shipping speeds 67 the job from the table, and expand it to reveal the job's detailed information. Choose **Get report** to download your job completion report as a PDF file. For more information, see <u>Getting your data</u> transfer job completion report and logs.

Next: Getting your data transfer job completion report and logs

## Getting your data transfer job completion report and logs

When you use a Snowball Edge to import data to or export data from Amazon S3, you get a downloadable PDF job report. For import jobs, this report becomes available at the very end of the import process. For export jobs, your job report typically becomes available for you while the Amazon Snowball Edge device for your job part is being delivered to you. Job completion reports are not available for local compute and storage only jobs.

The job report provides you insight into the state of your Amazon S3 data transfer. The report includes details about your job or job part for your records. The job report also includes a table that provides a high-level overview of the total number of objects and bytes transferred between the device and Amazon S3.

For deeper visibility into the status of your transferred objects, you can look at the two associated logs: a success log and a failure log. The logs are saved in comma-separated value (CSV) format, and the name of each log includes the ID of the job or job part that the log describes.

You can download the report and the logs from the Amazon Snow Family Management Console. Below is a sample report.

#### **Snow Family Job Completion Report**



Region: us-gov-east-1(OSU)

Job ID: JIDd6d95004-fe1a-42d3-895d-684f357ef840

Snow Device Serial ID: 207117851234

Job type: IMPORT

Device type: Snowball Edge Storage Optimized

Storage type: S3

Job creation date: 2022-06-02 19:32:27.831 GMT

Job state: Completed Customer address: 123 Any Street

Any Town, USA

#### Transfer details:

Transfer type	Total	Success	Failed
Objects	2,635	2,635	0
Bytes	32.2 TB	32.2 TB	0 B

#### Job state transition details:

The job was created on 2022-06-02 19:32:27.831 GMT

The snowball got allocated on 2022-06-06 19:10:43.670 GMT

The snowball was shipped on 2022-06-07 21:59:50.937 GMT

The snowball was at customer on 2022-06-08 14:04:45.856 GMT

The snowball was shipped to AWS on 2022-06-28 20:57:42.246 GMT

The snowball was at our sorting facility on 2022-06-29 14:06:20.737 GMT

The snowball was at AWS on 2022-06-30 23:12:45.017 GMT

The data transfer started on 2022-06-30 23:21:34.805 GMT

The data transfer was completed on +54473-09-10 22:23:46 GMT

Please review your job's status from the console.

For Snow job details, please see: https://docs.aws.amazon.com/snowball/

#### To get your job report and logs

- 1. Sign in to the Amazon Web Services Management Console and open the <u>Amazon Snow Family</u> Management Console.
- 2. Choose your job or job part from the table and expand the status pane.

Three options appear for getting your job report and logs: **Get job report**, **Download success log**, and **Download failure log**.

3. Choose the log you want to download.

The following list describes the possible values for the report:

- **Completed** The transfer was completed successfully. You can find more detailed information in the success log.
- **Completed with errors** Some or all of your data was not transferred. You can find more detailed information in the failure log.

## Large data migration with Snowball Edge

Large data migration from on-premises locations requires careful planning, orchestration, and execution to ensure that your data is successfully migrated to Amazon.

We recommend that you have a data migration strategy in place before starting your migration to avoid the potential for missed deadlines, exceeding budgets and migration failures. Amazon Snow services helps you to place, order, and track your large data migration projects via the Snowball Edge Large Data Migration Manager (LDMM) feature in the Amazon Snow Family Management Console.

The topics, <u>Planning your large transfer with Snowball Edge</u> and <u>Calibrating a large transfer with Snowball Edge</u> describe a manual data migration process. You can streamline the manual steps using the Snowball Edge LDMM migration plan.

#### **Topics**

- Planning your large transfer with Snowball Edge
- Calibrating a large transfer with Snowball Edge
- Creating a large data migration plan with Snowball Edge
- Using the large data migration plan with Snowball Edge

### Planning your large transfer with Snowball Edge

We recommend that you plan and calibrate large data transfers between the Amazon Snowball Edge devices that you have on site and your servers using the guidelines in the following sections.

#### **Topics**

- Step 1: Understand what you're moving to the cloud
- Step 2: Calculate your target transfer rate
- Step 3: Determine how many Snowball Edge you need
- Step 4: Create your jobs
- Step 5: Separate your data into transfer segments

Planning your large transfer 71

### Step 1: Understand what you're moving to the cloud

Before you create your first job using the Amazon Snow Family Management Console, ensure that you assess the volume of data you need to transfer, where it is currently stored, and the destination that you want to transfer it to. For data transfers that are a petabyte in scale or larger, this administrative housekeeping makes it much easier when your Snowball Edge arrive.

If you're migrating data into the Amazon Web Services Cloud for the first time, we recommend that you design a cloud migration model. Cloud migration doesn't happen overnight. It requires a careful planning process to ensure that all systems work as expected.

When you're done with this step, you should know the total amount of data that you're going to move into the cloud.

### Step 2: Calculate your target transfer rate

It's important to estimate how quickly you can transfer data to the Snowball Edge that are connected to each of your servers. This estimated speed in MB/Sec determines how fast you can transfer the data from your data source to Snowball Edge devices using your local network infrastructure.



#### Note

For large data transfers, we recommend using the Amazon S3 data transfer method. You must select this option when the you order devices in the Amazon Snow Family Management Console.

To determine a baseline transfer rate, transfer a small subset of your data to the Snowball Edge device, or transfer a 10 GB sample file and observe the throughput.

While determining your target transfer speed, keep in mind that you can improve the throughput by tuning your environment, including network configuration, by changing the network speed, the size of the files being transferred, and the speed at which data can be read from your local servers. The Amazon S3 adapter copies data to Snowball Edge as quickly as your conditions allow.

### Step 3: Determine how many Snowball Edge you need

Using the total amount of data that you plan to move into the cloud, the estimated transfer speed, and the number of days that you want to allow to move the data into Amazon, determine how

many Snowball Edge you need for your large-scale data migration. Depending on the device type, Snowball Edge devices have approximately 39.5 TB or 210 TB of usable storage space. For example, if you want to move 300 TB of data to Amazon over 10 days and you have a transfer speed of 250 MB/s, you need 2 Snowball Edge devices with 210 TB of storage.



#### Note

The Snowball Edge LDMM provides a wizard to estimate the number of Snowball Edge that can be supported concurrently. For more information, see Creating a large data migration plan with Snowball Edge.

### **Step 4: Create your jobs**

After you know how many Snowball Edge you need, you need to create an import job for each device. Creation of multiple jobs are simplified by the Snowball Edge LDMM. For more information, see Placing your next job order.



#### Note

You can place your next job order and automatically add it to your plan directly from the **Recommended job ordering** schedule. For more information, see Recommended job ordering schedule.

### **Step 5: Separate your data into transfer segments**

As a best practice for large data transfers involving multiple jobs, we recommend that you logically split your data into a number of smaller, more manageable data sets. This allows you to transfer each partition at a time, or multiple partitions in parallel. When planning your partitions, make sure that the data for the partitions combined fit on the Snowball Edge for the job. For example, you can separate your transfer into partitions in any of the following ways:

- You can create 10 partitions of 20 TB each for use with a Snowball Edge device with 210 TB of storage, for example.
- For large files, each file can be an individual partition up to the 5 TB size limit for objects in Amazon S3.

Step 4: Create your jobs 73 • Each partition can be a different size, and each individual partition can be made up of the same kind of data—for example, small files in one partition, compressed archives in another, large files in another partition, and so on. This approach can help you to determine your average transfer rate for different types of files.

#### Note

Metadata operations are performed for each file that's transferred. Regardless of a file's size, this overhead remains the same. Therefore, you get faster performance by compressing small files into a larger bundle, batching your files, or transferring larger individual files.

Creating data transfer segments can make it easier for you to guickly resolve transfer issues because trying to troubleshoot a large, heterogeneous transfer after the transfer runs for a day or more can be complex.

When you've finished planning your petabyte-scale data transfer, we recommend that you transfer a few segments onto the Snowball Edge device from your server to calibrate your speed and total transfer time.

### Calibrating a large transfer with Snowball Edge

You can calibrate the transfer performance by transferring a representative set of your data partitions. Choose multiple partitions that you have defined and transfer them to a Snowball Edge device. Make a record of the transfer speed and total transfer time for each operation. If the calibration's results are less than the target transfer rate, you may be able to copy multiple parts of your data transfer at the same time. In this case, repeat the calibration with the additional partitions of your data set.

Continue adding parallel copy operations during calibration until you see diminishing returns in the sum of the transfer speed of all instances currently transferring data. End the last active instance and make a note of your new target transfer rate.

You can transfer data faster to Snowball Edge by transferring data in parallel using one of the following scenarios:

- Using multiple sessions of the S3 adapter on a workstation against a single Snowball Edge device.
- Using multiple sessions of the S3 adapter on multiple workstations against a single Snowball Edge device.
- Using multiple sessions of the S3 interface (using a single or multiple workstations) targeting multiple Snowball Edge.

When you complete these steps, you should know how quickly you can transfer data to a Snowball Edge device.

## Creating a large data migration plan with Snowball Edge

The Snowball Edge large data migration plan feature enables you to plan, track, monitor, and manage large data migrations from 500 TB to multiple petabytes using multiple Snowball Edge service products.

Use the large data migration plan feature to collect information about data migration goals, such as the size of the data to move to Amazon and the number of Snowball Edge needed to migrate the data simultaneously. Use the plan to create a projected schedule for your data migration project and the recommended job ordering schedule to meet your goals.



#### Note

Currently, the data migration plan is available for import jobs larger than 500 TB.

#### **Topics**

- Step 1: Choose your migration details
- Step 2: Choose your shipping, security, and notification preferences
- Step 3: Review and create your plan

### **Step 1: Choose your migration details**

#### Note

A large data migration plan is available for data migrations larger than 500 TB. Create job orders individually on Snowball Edge for your data transfer projects that are less than 500 TB. For more information, see Creating a job to order a Snowball Edge device in this guide.

- Sign in to the Amazon Snow Family Management Console. If this is your first time using the Amazon Snow Family Management Console in this Amazon Web Services Region, you see the Snowball Edge page. Otherwise, you see the list of existing jobs.
- If this is your first data migration plan, choose **Create your large data migration plan** from the main page. Otherwise, choose Large data migration plan. Choose Create data migration **plan** to open the plan creation wizard.
- In Name your data migration plan, provide a Data migration plan name. The plan name can have up to 64 characters. Valid characters are A-Z, a-z, 0-9, and . - (hyphen). A plan name must not start with aws:.
- For **Total data to be migrated to Amazon**, enter the amount of data that you want to migrate to Amazon.
- In **Snow devices**, choose a Snowball Edge device.



#### Note

Supported device options might vary based on device availability in certain Amazon Web Services Regions.

- For **Concurrent devices**, enter the number of Snowball Edge to which you can simultaneously copy data at your location. If you're not sure, skip to the next section for information about using the concurrent devices estimator wizard to determine this.
- 7. Choose **Next**.

### Using the concurrent devices estimator wizard

The concurrent devices estimator wizard helps you to determine the number of concurrent devices that you can use during large data migrations.


#### **Prerequisites:**

- You performed a proof of concept to test your data transfer methodology and measured performance with a Snowball Edge device in your environment.
- You know about the network and connection to back-end storage.

#### Step 1: Enter data source information

First, determine the maximum theoretical throughput for copying data from your storage source.

- 1. For **Total data to be migrated**, enter the amount of data that you plan to migrate.
  - For **Unit**, choose the unit of measurement (GB or TB) for the amount of data you plan to migrate.
- For Number of active network interfaces, enter the number of active network interfaces that you have available for data migration from the storage source.

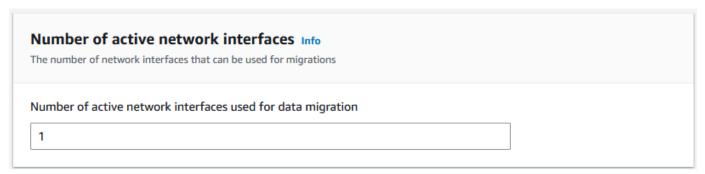

3. For **Network interface speed**, choose the speed of the network interface for the storage source. Network speeds are in Gb/s.




4. For **Maximum network throughput**, enter the maximum tested network throughput to your storage source that you determined during the proof of concept. Throughput is in MB/S.



- 5. For **Storage backend network usage**, indicate whether the storage source shares a network with the back-end storage.
  - Choose **Yes** if the network is not shared. You don't need to enter the speed of the storage interconnection for a single stream.
  - Choose No if the network is shared. Enter the speed of the storage interconnection for a single stream in MB/s.

Based on your choice, the wizard updates the **Max migration throughput for the data source** (MB/s) value at the bottom of the page.

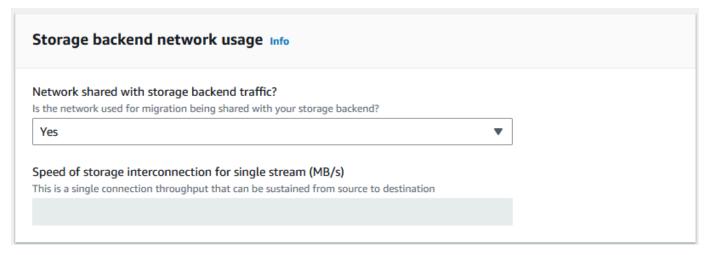

#### Choose Next.

#### **Step 2: Input migration workstation parameters**


You can connect yourSnowball Edge directly to your storage source (a Microsoft Windows server, for example). You might choose instead to connect yourSnowball Edge to one or more workstations to copy data from the storage source.

1. For **Migration workstation usage**, indicate your workstation usage choice.

- Choose **None Use data source directly** to transfer data directly from a data source without using a workstation, and then choose **Next**.
- Choose **Other Use copy workstation(s)** to use one or more workstations for transferring data.




2. For **Number of active network interfaces**, enter the number of ports to use for data migration.

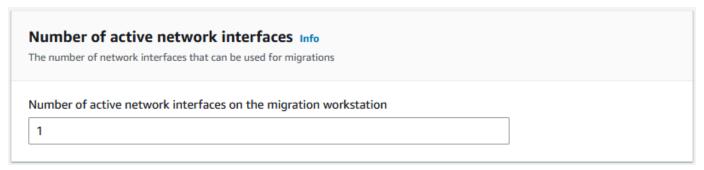


3. For **Network interface speed**, choose the speed in Gb/s of the network interfaces.



- 4. In **Storage backend network usage**, indicate whether the network that the workstations are on is shared with back-end storage.
  - Choose **Yes** if it's shared.
  - Choose No if it's not shared. Enter the speed of the storage interconnection for a single stream in MB/s.

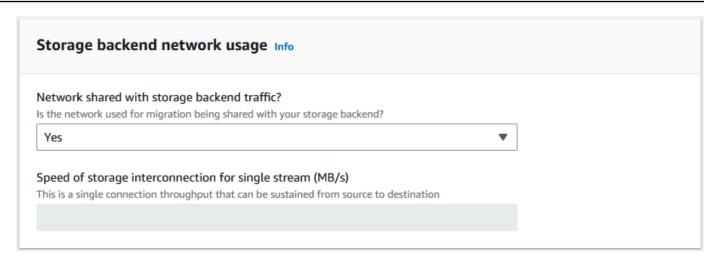


Based on your input, the wizard displays a recommendation in **Number of migration workstations**. You can manually change the number if you disagree with the recommendation. This number will appear in **Concurrent devices** in the large data migration plan.

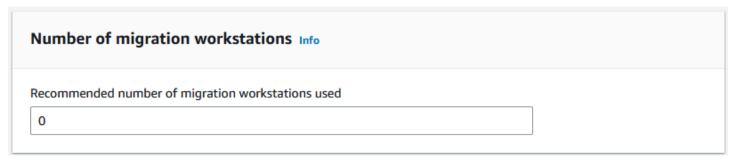

### Step 3: Input average transfer throughput of Snowball Edge

1. In the **Average Snow device transfer throughput** field, enter the transfer throughput in MB/s that you saw during your proof of concept.

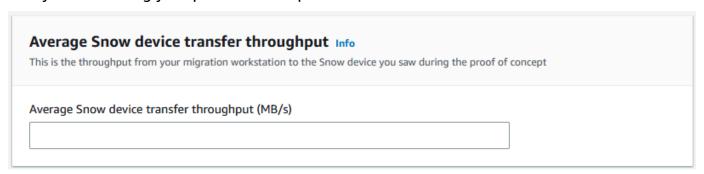

Based on your average throughput, the wizard updates the **Recommended number of concurrent Snow devices** and **Maximum number of concurrent devices** in the migration plan details.

2. Choose **Use this number** to continue and return to choosing your migration details. Choose **Next** and go the next step (<u>Step 2: Choose your shipping, security, and notification preferences</u>).

### Note

You can use up to 5 concurrent Snow devices.

### Step 2: Choose your shipping, security, and notification preferences

- 1. In the **Shipping Address** section, choose an existing address or create a new one.
  - (i) Note

The country in the address must match the destination country for the device, and must be valid for that country.

- 2. In **Choose service access type**, do one of the following:
  - Allow Snowball Edge to create a new service-linked role for you with all of the necessary permissions to publish CloudWatch metrics and Amazon SNS notifications for your Snowball Edge jobs.
  - Add an existing service role that has the necessary permissions. For an example of how to set up this role, see Example 4: Expected Role Permissions and Trust Policy.
- 3. For **Send notifications**, choose whether to send notifications. Note that if you choose **Do not send notification about data migration plans**, you won't receive notifications from this plan, but you will still receive job notifications.
- 4. For **Set notifications**,
  - choose Use an existing SNS topic
  - or Create a new SNS topic.

### Step 3: Review and create your plan

- Review your information in Plan details and Shipping, security, and notification preferences, and edit if necessary.
- 2. Choose **Create data migration plan** to create the plan.

### Using the large data migration plan with Snowball Edge


After you create your large data migration plan, you can use the resulting schedule and dashboard to guide you through the rest of the migration process.

### Recommended job ordering schedule

After you create an Snowball Edge large migration plan, you can use the recommended job ordering schedule to create new jobs.

#### Note

Manual updates that you make to the data size or number of concurrent devices cause the schedule to adjust. The schedule automatically adjusts if a job has not been ordered by the recommended order date or has been ordered before the recommended order date. If a job is returned before the recommended order date, the schedule automatically adjusts.

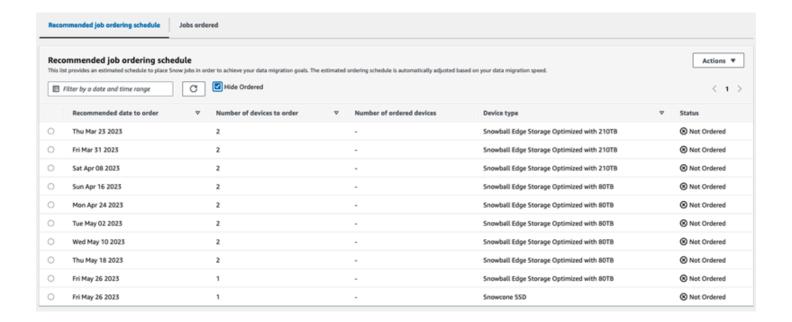

### Placing your next job order


To place you next order, instead of manually creating a job and then adding it to your plan, you have the option to either clone a previously ordered job or create a pre-populated one.

#### To clone a job:


- Choose the next order (the first recommendation with a Not Ordered status) from the Recommended job ordering schedule, then choose Clone Job from the Actions menu. The Clone Job window appears.
- In the Clone Job window, in the Jobs ordered section, choose the job to clone.
- In the New jobs details section, choose the devices you want to order. For each device chosen, the Job name will automatically populate based on the chosen job. You can overwrite the job name.
- Choose Confirm to place the job order for the chosen devices. The system clones the job for each device.

#### To create new jobs:

 Choose the next order (the first recommendation with a Not Ordered status) from the Recommended job ordering schedule, then choose Create New Jobs from the Actions menu. The Create new jobs window appears.

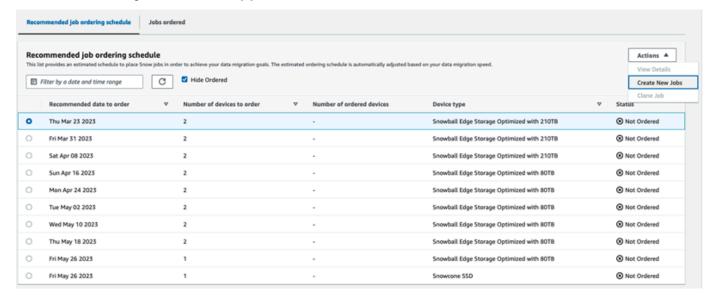

2. In the **Device Selection** section, choose the devices you want to order. Choose **Continue**.

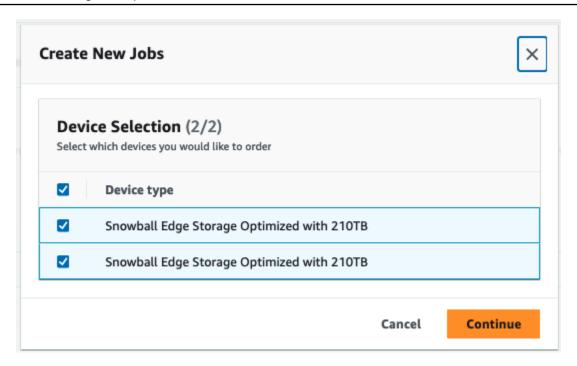

3. The **Create new** page appears. Most parameters, such as the job type, shipping address, and the device type are set based on the plan. The system creates the job for each device.

You can see whether the job or jobs were successfully created or not. Successfully created jobs are automatically added to the plan.

### Jobs ordered list

Each plan displays a job ordered list. This is empty at first. When you start to order jobs, you can add jobs to your plan by selecting **Add job** from the **Actions** menu. Jobs that you add here are tracked on the monitoring dashboard.

Similarly, you may remove the job from the job ordered list by selecting **Remove job** from the **Actions** menu.

We recommend using the job ordering schedule provided in the plan for a smooth data migration.

### Monitoring dashboard

After you add jobs to your plan, you can see metrics on the dashboard as the jobs return to Amazon for ingestion. These metrics can help you to track your progress:

- Data migrated to Amazon The amount of data that's been migrated to Amazon so far..
- Average data migrated per job The average amount of data per job in terabytes.

Jobs ordered list 84

- **Total Snow Jobs** The number of Snowball Edge jobs ordered compared to the remaining jobs to be ordered.
- Average duration for a migration job The average duration of a job in days.
- Snow Job Status The number of jobs in each status.

Monitoring dashboard 85

## **Using Amazon OpsHub to Manage Devices**

The Snowball Edge now offer a user-friendly tool, Amazon OpsHub, that you can use to manage your devices and local Amazon services. You use Amazon OpsHub on a client computer to perform tasks such as unlocking and configuring single or clustered devices, transferring files, and launching and managing instances running on Snowball Edge. You can use Amazon OpsHub to manage both the Storage Optimized and Compute Optimized Snow device types. The Amazon OpsHub application is available at no additional cost to you.

Amazon OpsHub takes all the existing operations available in the Snowball API and presents them as a graphical user interface. This interface helps you quickly migrate data to the Amazon Web Services Cloud and deploy edge computing applications on Snowball Edge.

Amazon OpsHub provides a unified view of the Amazon services that are running on Snowball Edge and automates operational tasks through Amazon Systems Manager. With Amazon OpsHub, users with different levels of technical expertise can manage a large number of Snowball Edge. With a few clicks, you can unlock devices, transfer files, manage Amazon EC2-compatible instances, and monitor device metrics.

When your Snow device arrives at your site, you download, install, and launch the Amazon OpsHub application on a client machine, such as a laptop. After installation, you can unlock the device and start managing it and using supported Amazon services locally. Amazon OpsHub provides a dashboard that summarizes key metrics such as storage capacity and active instances on your device. It also provides a selection of Amazon services that are supported on the Snowball Edge. Within minutes, you can begin transferring files to the device.

#### **Topics**

- Downloading Amazon OpsHub for Snowball Edge
- Unlocking a Snowball Edge device with Amazon OpsHub
- Verifying the PGP signature of Amazon OpsHub (optional)
- Managing Amazon services on the Snowball Edge with Amazon OpsHub
- Rebooting the device with Amazon OpsHub
- Managing profiles with Amazon OpsHub
- Shutting down the device with Amazon OpsHub
- Editing the device alias with Amazon OpsHub
- Managing public key certificates using OpsHub

- Getting updates for the Snowball Edge
- Updating the Amazon OpsHub application
- Automating your management tasks with Amazon OpsHub
- Setting the NTP time servers for the device with Amazon OpsHub

### **Downloading Amazon OpsHub for Snowball Edge**

#### To download Amazon OpsHub

Navigate to the Amazon Snowball resources website.



In the Amazon OpsHub section, choose Download for your operating system, and follow the installation steps.

### Unlocking a Snowball Edge device with Amazon OpsHub

When your device arrives at your site, the first step is to connect and unlock it. Amazon OpsHub lets you sign in, unlock, and manage devices using the following methods:

• **Locally** – To sign in to a device locally, you must power on the device and connect it to your local network. Then provide an unlock code and a manifest file.

• Remotely – To sign in to a device remotely, you must power on the device and make sure that it can connect to device-order-region. amazonaws.com through your network. Then provide the Amazon Identity and Access Management (IAM) credentials (access key and secret key) for the Amazon Web Services account that is linked to your device.

For information on enabling remote management and creating an associated account, see Activating Snowball Edge Device Management on a Snowball Edge.

### **Topics**

- Unlocking a Snowball Edge device locally with Amazon OpsHub
- Unlocking a Snowball Edge device remotely with Amazon OpsHub

### Unlocking a Snowball Edge device locally with Amazon OpsHub

#### To connect and unlock your device locally

- 1. Open the flap on your device, locate the power cord, and connect it to a power source.
- 2. Connect the device to your network using a network cable (typically an Ethernet RJ45 cable), then open the front panel and power on the device.
- 3. Open the Amazon OpsHub application. If you are a first-time user, you are prompted to choose a language. Then choose **Next**.
- 4. On the **Get started with OpsHub** page, choose **Sign in to local devices**, and then choose **Sign in**.

Unlocking a device locally 88



# Get started with OpsHub

- Sign into local devices
   You'll need an unlock code and manifest file
- Sign into remote devices
   You'll need an access key & secret key

Sign in


- 5. On the **Sign in to local devices** page, choose your Snowball Edge type, and then choose **Sign in**.
- 6. On the **Sign in** page, enter the **Device IP address** and **Unlock code**. To select the device manifest, choose **Choose file**, and then choose **Sign in**.

Unlocking a device locally 89



# Sign into your Snowball Edge

Sign in with an unlock code and manifest file

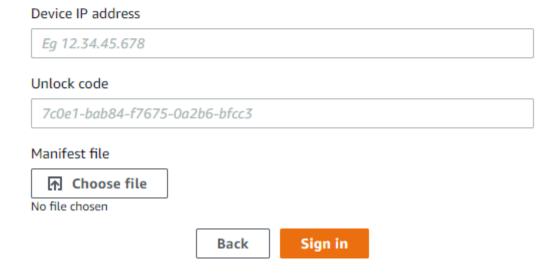

- 7. (Optional) Save your device's credentials as a *profile*. Name the profile and choose **Save profile** name. For more information about profiles, see <u>Managing profiles</u> with <u>Amazon OpsHub</u>.
- 8. On the **Local devices** tab, choose a device to see its details, such as the network interfaces and Amazon services that are running on the device. You can also see details for clusters from this tab, or manage your devices just as you do with the Amazon Command Line Interface (Amazon CLI). For more information, see <a href="Managing Amazon services">Managing Amazon services on the Snowball Edge with Amazon OpsHub.</a>

Unlocking a device locally 90

For devices that have Amazon Snowball Edge Device Management installed, you can choose **Enable remote management** to turn on the feature. For more information, see Using Amazon Snowball Edge Device Management to manage Snowball Edge.

### Unlocking a Snowball Edge device remotely with Amazon OpsHub

To unlock a Snowball Edge not

#### To connect and unlock your device remotely

- Open the flap on your device, locate the power cord, and connect it to a power source. 1.
- 2. Connect the device to your network using an Ethernet cable (typically an RJ45 cable), then open the front panel and power on the device.




### Note

To be unlocked remotely, your device must be able to connect to device-orderregion.amazonaws.com.

- Open the Amazon OpsHub application. If you are a first-time user, you are prompted to choose a language. Then choose Next.
- On the **Get started with OpsHub** page, choose **Sign into remote devices**, and then choose Sign in.

Unlocking a device remotely 91

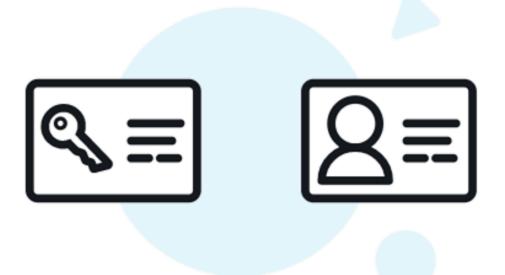

# Get started with OpsHub

 Sign into local devices
 You'll need an unlock code and manifest file  Sign into remote devices You'll need an access key & secret key

Sign in

5. On the **Sign in to remote devices** page, enter the Amazon Identity and Access Management (IAM) credentials (access key and secret key) for the Amazon Web Services account that is linked to your device, and then choose **Sign in**.

Unlocking a device remotely 92




# Sign into remote devices

Sign in with an access key and secret key




6. At the top of the **Remote devices** tab, choose the region of the Snow device to unlock remotely.

Unlocking a device remotely 93

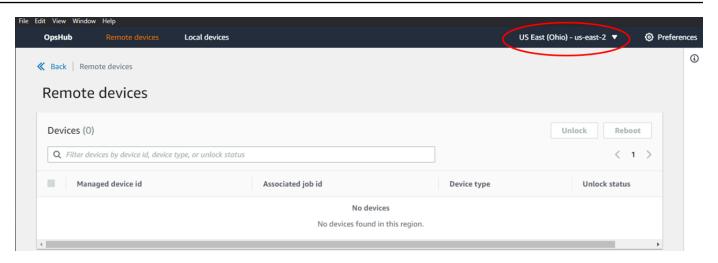

 On the Remote devices tab, choose your device to see its details, such as its state and network interfaces. Then choose Unlock to unlock the device.

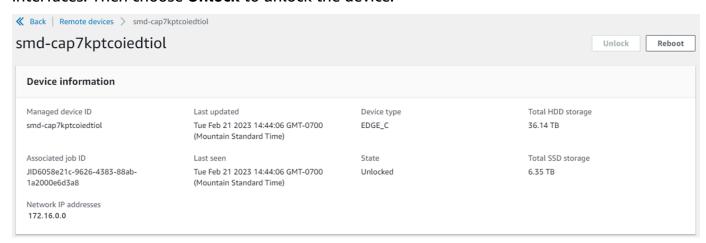

From the remote device's details page, you can also reboot your devices and manage them just as you do with the Amazon Command Line Interface (Amazon CLI). To view remote devices in different Amazon Web Services Regions, choose the current Region on the navigation bar, and then choose the Region that you want to view. For more information, see <a href="Managing Amazon">Managing Amazon</a> services on the Snowball Edge with Amazon OpsHub.

## Verifying the PGP signature of Amazon OpsHub (optional)

The Amazon OpsHub application installer package for the Linux operating system are cryptographically signed. You can use a public key to verify that the installer package is original and unmodified. If the files are damaged or altered, the verification fails. You can verify the signature of the installer package using GNU Privacy Guard (GPG). This verification is optional. If you choose to verify the signature of the application, you can do it at any time.

You can download the SIGNATURE file for the Linux operating system installer from <u>Amazon</u> Snowball Edge Resources or Snowball Edge Resources.

#### To verify the Amazon OpsHub install package on for the Linux operating system

1. Copy the following public key, save it to a file, and name the file. For example, opshub-public-key.pgp.

----BEGIN PGP PUBLIC KEY BLOCK---xsFNBF/hGf8BEAC9HCDV8uljDX02Jxspi6kmPu4xqf4ZZLQsSqJcHU61oL/c /zAN+mUqJT9aJ1rr0QFGVD1bMogecUPflTWlDkEEpG8ZbX5P8vR+EEl0/rW/ WtgizSudy6gy59ZRK+YVSDx7DZyuJmI07j00UADCL+95ZQN9vgwHNjBHsgfQ 1/1Tghy81ozTZXcI/+u+99YLaugJIP6ZYIeDfpxnghgyVtaappBFTAyfG67Y N/5mea1VqJzd8liFpIFQnl+X7U2x6emDbM01yJWV3aMmPwhtQ7iBdt5a4x82 EF5bZJ8HSRMvANDILD/9VTN8VfUQGKFjFY2GdX9ERwvfTb47bbv9Z28V1284 41w2w1Bl007FoO2v/Y0ukrN3VHCpmJQS1IiqZbYRa0DVK6UR5QNvUlj5fwWs 4qW9UDPhT/HDuaMrMFCejEn/7wvRUrGVtzCT9F56Al/dwRSxBejQQEb1AC8j uuyi7qJaPdyNntR0EFTD7i02L6X2jB4YLfvGxP7Xeq1Y37t8NKF8CYTpOry/ Wvw0iKZFbo4AkiI0aLyBCk9HBXhUKa9x06qOnhh1UFQrPGrk60RPQKqL76HA E2ewzGDa90wlRBUAt2nRQpyNYjoASBvz/cAr3e0nuWsIzopZIenrxI5ffcjY f6UWA/OK3ITHtYHewVhseDyEqTQ4MUIWQS4NAwARAQABzTlBV1MgT3BzSHVi IGZvciBTbm93IEZhbWlseSA8YXdzLW9wc2h1Yi1zaWduZXJAYW1hem9uLmNv bT7CwY0EEAEIACAFA1/hGf8GCwkHCAMCBBUICgIEFgIBAAIZAQIbAwIeAQAh CRAhqc9adPNF8RYhBDcvpelIaY930bOvqiGBz1p080XxGbcP+qPZX7LzKc1Y w9CT3UHgkAIaw0SXYktujzoYVxAz8/j3jEkCY0dKnfyqvWZDiJAXnzmxWWbg cxg1g0GXNXCM4lAd68CmbAOLoLTaWSQX30ZbswzhbtX2ADAlopV8RLBik7fm bS9FyuubDRhfYRQq0fpjUGXFiEgwq6aMFxsrGLlv4QD7t+6ftFIe/mxLbjR4 iMgtr8FIPXbgn05YYY/LeF4NIgX4iLEqRbAnfWjPzqQ1spFWAotIzDmZqby+ WdWThrH4K1rwtYM8sDhqRnMnqJrGFZzk7aDhVPwF+F0VMmPeEN5JRazEeUrl VZaSw6mu0n4FMGSXuwGgdvmkgnMe6I5/xLdU4I0PNhp0UmakDW0g/a1dREDE ZLMQDMINphmeQno4inGmwbRo63gitD4ZNR5sWwfuwty25lo8Ekv7jkkp3mSv pdxn5tptttnPaSPcSIX/4EDl19Tu0i7aup+v30t7eikYDSZG6g9+jHB3Va9e /VWShFSgy8Jm2+qq/ujUQDAGTCfSuY9jg1ITsog6ayEZa/2upDJ1m+40HK4p 8DrEzP/3jTahT8g5ofFWSRDL17d3lTSU+JBmPE3mz311FNXgi08w+taY320z +irHtb3iSiiukbjS8s0maVgzszRqS9mhaEn4LL0zoqrUicmXgTyFB7n2LuYv 07vxM05xxhGQwsF2BBABCAAJBQJf4RoCAhsDACEJEBFZvzT/tDi5FiEEi+09 V+UAYN9Gnw36EVm/NP+00LnnEQ/+J4C0Mn8j0AebXrwBiFs83sQo2q+WHL1S MRc1g5gRFDXs6h1Gv+TGXRen7j1oeaddWvg0tUBxqmC0jr+8AKH00tiBWSu0 lsS8JU5rindEsKUrKTwcG2wyZFoe1zlE8xPkLRSRN5ZbbgKsTz16l1HgCCId Do+WJdDkWGWxmtDvzjM32EI/PVBd108ga9aPwXdhLwOdKAjZ4JrJXLUQJjRI IVDSyMObEHOUM6a/+mWNZazNfo0LsGWqGVa6Xn5WJWlwR1S78vPNf03BQYu0 YRjaVQR+kPtB9aSAZNi5sWfk6NrRNd1Q78d067uhhejsjRt7Mja2fEL4Kb1X nK4U/ps7Xl03o/VjblneZ0hJK6kAKU172tnPJTJ31Jb0xX73wsMWDYZRZVcK

9X9+GFrpwhKHWKKPjpMOt/FRxNepvqRl72TkgBPqGH2TMOFdB1f/uQprvqge PBbS0JrmBIH9/anIqqtMdtcNQB/0erLdCDqI5afOuD10LcLwdJwG9/bSrfwT TVEE3WbXmJ8pZgMzlHUiZE6V2DSadV/YItk50I0jjr0VH0HvlFMwGCEAIFzf 9P/pNi8hpEmlRphRi0VVcdQ30bH0M0gPHu5V9flIhyCL1zU3LjYTHkq0yJD5 YDA1x01MYq3DcSM5130VBbLmuVS2GpcsTCYqlqQA6h/zzMwz+/70wU0EX+EZ /wEQAOAY8ULmcJIQWIr14V0jylpJeD3qwj7wd+QsBzJ+m0pOB/3ZFAhQiNO1 9yCDlHeiZeAmWYX90IXrNiIdcHy+WTAp4G+NaMpqE52qhbDjz+IbvLpl1yDH bYEHPjnTHXEy21bvKAJ0Kkw/2RcQ0i4dodGnq5icyYj+9gcuHvnVwbrQ96Ia 0D7c+b5T+bzFqk90nIcztrMRuhDLJnJpi70jpvQwfq/TkkZA+mzupxfSkq/Y N9qXNEToT/VI2qn/LS0X4Ar112KxBjzNEsQkwGSiWSYtMA5J+Tj5ED0uZ/qe omNblAlD4bm7Na8NAoLxCtAiDq/f3To9Xb18lHsndOmfLCb/BVgP4edQKTIi C/OZHy9QJlfmN0aq7JVLQAuvQNEL88RKW6YZBqkPd3P6zdc7sWDLTMXMOd3I e6NUvU7pW0E9NyRfUF+oT4s9wAJhAodinAi8Zi9rEfhK1VCJ76j7bcQqYZe0 jXD3IJ7T+X2XA8M/BmypwMW0Soljzhwh044RAasr/fAzpKNPB318JwcQunIz u2N3CeJ+zrsomjcPxzehwsSVq1lzaL2ureJBL0KkBqYxUJYXpbS01ax1TsFG 091dANOs9Ej8CND37GsNnuygj0gWXbX6MNgbvPs3H3zi/AbMunQ1VBlw07JX zdM1hBQZh6w+NeiEsK1T6wHi7IhxABEBAAHCwXYEGAEIAAkFAl/hGf8CGwwA IQkQIYHPWnTzRfEWIQQ3L6XpSGmPd9Gzr6ohgc9adPNF8TMBD/9TbU/+PVbF ywKvwi3GLOlpY7BXn8lQaHyunMGuavmO8OfaRROynkH0ZqLHCp6bIajFOfvF b7c0Jamzx8Hg+SId16yRpRY+fA4RQ6PNnnmT93ZgWW3EbjPyJGlm0/rt03SR +0yn4/ldlg2KfBX4pqMoPCMKUdWxGrmDETXsGihwZ0gmCZqXe8lK122PYkSN JQQ+L1fjKvCaxfPKEjXYTbIbfyyhCR6NzAOVZxCrzSz2xDrYWp/V002Klxda 0ix6r2aEHf+xYEUh0aBt80HY5nXTuRReCVU789MUVtCMqD2u6amdo4BR0kWA QNg4yavKwV+LVtyYh2Iju9VSyv4xL1Q4xKHvcAUrSH73bHG7b7jkUJckD0f4 twhiJk/Lfwe6RdnVo2WoeTvE93w+NAq2FXmvbiG7eltl0Xf0ecv0U30NbRvH U8B96W0w8UXJdvTKg4f0NbjSw7iJ3x5naixQ+rA8hLV8x0gn2LX6wvxT/SEu mn20KX+fPtJELK7v/NheFLX1jsKLXYo4jHrkfIXNsNUhq/x2E71kAjbeT3s+ t9kCtxt2iXDDZvpIbmG04QkvLFvoROaSmN6+8fupe3e+e2yN0e6xGTuE60gX I2+X1p1q9IduDYTpoI20XleHyyMqGEeIb4qOiiSloTp5oi3EuAYRGflXuqAT VA19bKnpkBsJ0A== =tD2T

----END PGP PUBLIC KEY BLOCK----

2. Use a cryptographic software suite such as GNU Privacy Guard to import the public key into your keyring, and note the returned key value.

```
gpg --import opshub-public-key.pgp
```

### **Example output of command**

gpg: key 1655BBDE2B770256: public key "Amazon OpsHub for Snowball Edge <aws-opshubsigner@amazon.com>" imported

3. Verify the fingerprint. Be sure to replace *key-value* with the value from the preceding step. We recommend that you use GPG to verify the fingerprint.

```
gpg --fingerprint key-value
```

This command returns output similar to the following.

The fingerprint should match the following:

```
372F A5E9 4869 8F77 D1B3 AFAA 2181 CF5A 74F3 45F1
```

If the fingerprint doesn't match, don't install the Amazon OpsHub application. Contact Amazon Web Services Support.

- 4. Verify the installer package, and download the SIGNATURE file according to your instance's architecture and operating system if you haven't already done so.
- Verify the installer package signature. Be sure to replace signature-filename and OpsHub-download-filename with the values that you specified when downloading the SIGNATURE file and Amazon OpsHub application.

**GPG** 

```
gpg --verify signature-filename OpsHub-download-filename
```

This command returns output similar to the following.

**GPG** 

```
gpg: Signature made Mon Dec 21 13:44:47 2020 PST gpg: using RSA key 1655BBDE2B770256
```

```
gpg: Good signature from "Amazon OpsHub for Snowball Edge <aws-opshub-
signer@amazon.com>" [unknown]
gpg: WARNING: This key is not certified with a trusted signature!
gpg: There is no indication that the signature belongs to the owner.
Primary key fingerprint: 9C93 4C3B 61F8 C434 9F94 5CA0 1655 BBDE 2B77 0256
```


When using GPG, if the output includes the phrase BAD signature, check whether you performed the procedure correctly. If you continue to get this response, contact Amazon Web Services Support and don't install the agent. The warning message about the trust doesn't mean that the signature is not valid, only that you have not verified the public key. A key is trusted only if you or someone who you trust has signed it.

# Managing Amazon services on the Snowball Edge with Amazon OpsHub

With Amazon OpsHub, you can use and manage Amazon services on your Snowball Edge. Currently, Amazon OpsHub supports the following resources:

- Amazon Elastic Compute Cloud (Amazon EC2) instances Use Amazon EC2-compatible instances
  to run software installed on a virtual server without sending it to the Amazon Web Services
  Cloud for processing.
- Network File System (NFS) Use file shares to move data to your device. You can ship the device
  to Amazon to transfer your data to the Amazon Web Services Cloud, or use DataSync to transfer
  to other Amazon Web Services Cloud locations.
- Amazon S3 compatible storage on Snowball Edge Delivers secure object storage with increased resiliency, scale, and an expanded Amazon S3 API feature-set to rugged, mobile edge, and disconnected environments. Using Amazon S3 compatible storage on Snowball Edge, you can store data and run highly available applications on Snowball Edge for edge computing.

Managing Amazon services 98

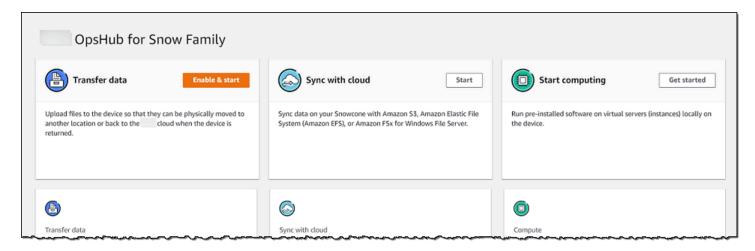

### **Topics**

- Launching an Amazon EC2-compatible instance on a Snowball Edge with Amazon OpsHub
- Stopping an Amazon EC2-compatible instance on a Snowball Edge with Amazon OpsHub
- Starting an Amazon EC2-compatible instance on an Snowball Edge with Amazon OpsHub
- Working with key pairs for EC2-compatible instances in Amazon OpsHub
- Terminating an Amazon EC2-compatible instance with Amazon OpsHub
- Using storage volumes locally on Snowball Edge with Amazon OpsHub
- Importing an image as an Amazon EC2-compatible AMI with Amazon OpsHub
- Deleting a snapshot from a Snowball Edge with Amazon OpsHub
- Deregistering an AMI on a Snowball Edge with Amazon OpsHub
- Managing an Amazon EC2 cluster on Snowball Edge with Amazon OpsHub
- Set up Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub
- Managing Amazon S3 adapter storage with Amazon OpsHub
- Managing the NFS interface with Amazon OpsHub


## Launching an Amazon EC2-compatible instance on a Snowball Edge with Amazon OpsHub

Follow these steps to launch an Amazon EC2-compatible instance using Amazon OpsHub.

#### To launch an Amazon EC2-compatible instance

1. Open the Amazon OpsHub application.

- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page. All your compute resources appear in the **Resources** section.
- 3. If you have Amazon EC2-compatible instances running on your device, they appear in the **Instance name** column under **Instances**. You can see details of each instance on this page.
- 4. Choose **Launch instance**. The launch instance wizard opens.
- 5. For **Device**, choose the Snow device that you want to launch the Amazon EC2-compatible.

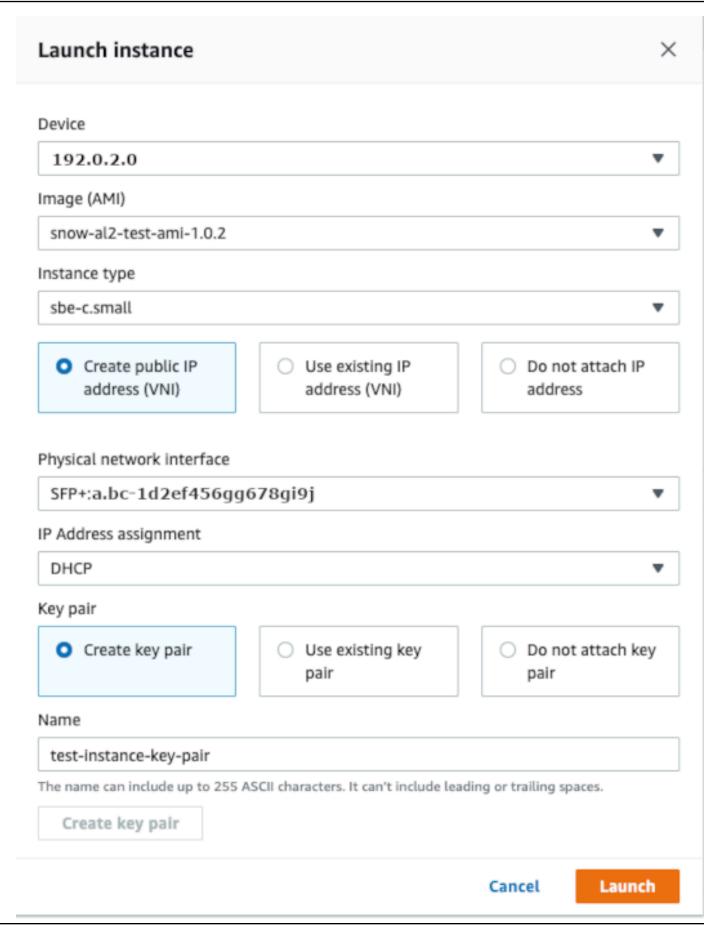

- 6. For **Image (AMI)**, choose an Amazon Machine Image (AMI) from the list. This AMI is used to launch your instance.
- 7. For **Instance type**, choose one from the list.
- 8. Choose how you want to attach an IP address to the instance. You have the following options:
  - Create public IP address (VNI) Choose this option to create a new IP address using a physical network interface. Choose a physical network interface and IP address assignment.
  - **Use existing IP address (VNI)** Choose this option to use an existing IP address and then use existing virtual network interfaces. Choose a physical network interface and a virtual network interface.
  - Do not attach IP address Choose this option if you don't want to attach an IP address.
- 9. Choose how you want to attach a key pair to the instance. You have the following options:

**Create key pair** – Choose this option to create a new key pair and launch the new instance with this key pair.

**Use existing key pair** – Choose this option to use an existing key pair to launch the instance.

**Do not attach IP address** – Choose this option if you don't want to attach a key pair. You must acknowledge that you won't able to connect to this instance unless you already know the password that is built into this AMI.

For more information, see <u>Working with key pairs for EC2-compatible instances in Amazon</u> OpsHub.

10. Choose **Launch**. You should see your instance launching in the **Compute instances** section. The **State** is **Pending** and then changes to **Running** when done.

## Stopping an Amazon EC2-compatible instance on a Snowball Edge with Amazon OpsHub


Use the following steps to use Amazon OpsHub to stop an Amazon EC2-compatible instance.

### To stop an Amazon EC2-compatible instance

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section of the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page.

All your compute resources appear in the **Resources** section.

- 3. If you have Amazon EC2-compatible instances running on your device, they appear in the **Instance name** column under **Instances**.
- Choose the instance that you want to stop, choose the Actions menu, and choose Stop. The State changes to Stopping, and then to Stopped when done.

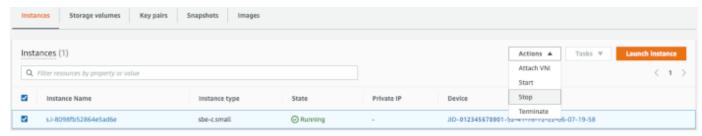

## Starting an Amazon EC2-compatible instance on an Snowball Edge with Amazon OpsHub


Use these steps to start an Amazon EC2-compatible instance using Amazon OpsHub.

### To start an Amazon EC2-compatible instance

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section of the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute** (**EC2**) to open the **Compute** page.

Your compute resources appear in the **Resources** section.

- 3. In the **Instance name** column, under **Instances**, find the instance that you want to start.
- 4. Choose the instance, and then choose **Start**. The **State** changes to **Pending**, and then changes to **Running** when done.

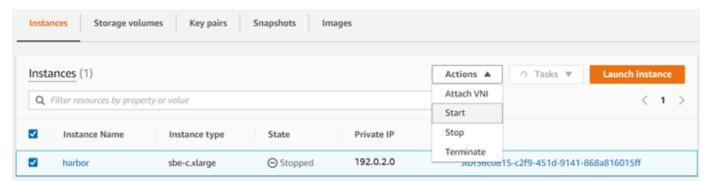

## Working with key pairs for EC2-compatible instances in Amazon OpsHub

When you launch an Amazon EC2-compatible instance and intend to connect to it using SSH, you have to provide a key pair. You can use Amazon EC2 to create a new key pair, or you can import an existing key pair or manage your key pairs.

### To create, import, or manage key pairs


- 1. Open **Compute** on the Amazon OpsHub dashboard.
- In the navigation pane, choose the Compute (EC2) page, and then choose the Key Pairs tab.
   You are redirected to the Amazon EC2 console where you can create, import, or manage your key pairs.
- 3. For instructions on how to create and import key pairs, see <u>Amazon EC2 key pairs and Linux</u> instances in the *Amazon EC2 User Guide*.

## Terminating an Amazon EC2-compatible instance with Amazon OpsHub

After you terminate an Amazon EC2-compatible instance, you can't restart the instance.


### To terminate an Amazon EC2-compatible instance

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page. You can see all your compute resources in the **Resources** section.
- 3. In the **Instance name** column, under **Instances**, find the instance that you want to terminate.
- 4. Choose the instance, and choose the **Actions**menu. From the **Actions** menu, choose **Terminate**.

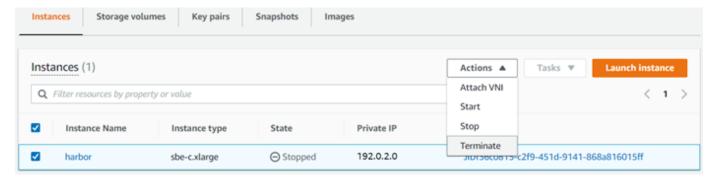

Working with key pairs 104

5. In the Terminate instances window, choose Confirm terminate.

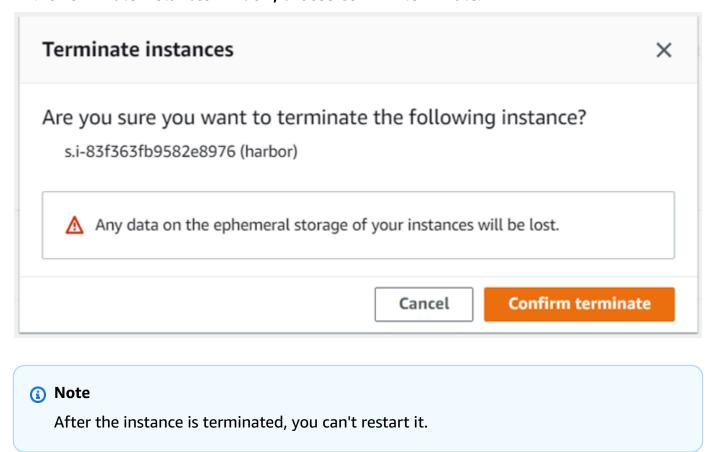

The **State** changes to **Terminating**, and then to **Terminated** when done.


## Using storage volumes locally on Snowball Edge with Amazon OpsHub

Amazon EC2-compatible instances use Amazon EBS volumes for storage. In this procedure, you create a storage volume and attach it to your instance using Amazon OpsHub.

### To create a storage volume

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page.
- 3. Choose the **Storage volumes** tab. If you have storage volumes on your device, the details about the volumes appear under **Storage volumes**.
- 4. Choose **Create volume** to open the **Create volume** page.


Managing EBS volumes 105

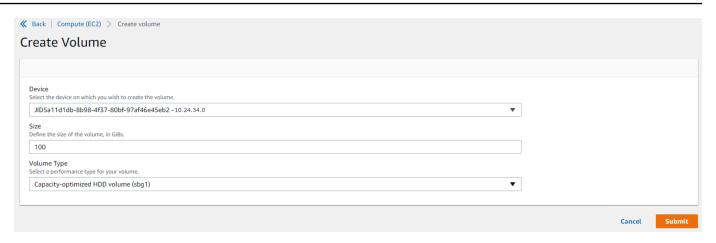

- 5. Choose the device that you want to create the volume on, enter the size (in GiBs) that you want to create, and choose the type of volume.
- Choose Submit. The State is Creating, and changes to Available when done. You can see your volume and details about it in the Volumes tab.

### To attach a storage volume to your instance

1. Choose the volume that you created, and then choose **Attach volume**.

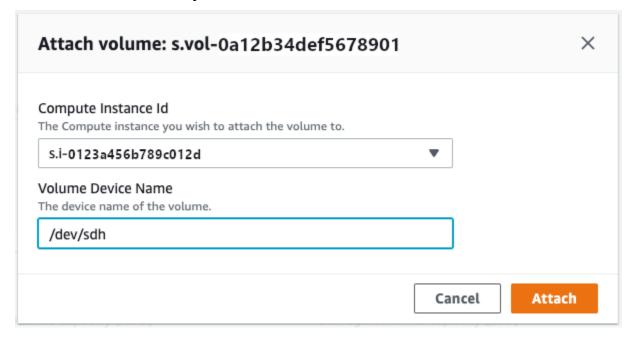

- 2. For **Compute instance Id**, choose the instance you want to attach the volume to.
- 3. For **Volume Device Name**, enter the device name of your volume (for example, **/dev/sdh** or **xvdh**).
- 4. Choose Attach.

Managing EBS volumes 106

If you no longer need the volume, you can detach it from the instance and then delete it.

## Importing an image as an Amazon EC2-compatible AMI with Amazon OpsHub

You can import a snapshot of your image into your Snowball Edge device and register it as an Amazon EC2-compatible Amazon Machine Image (AMI). A snapshot is basically a copy of your storage volume that you can use to create an AMI or another storage volume. By doing this, you can bring your own image from an external source onto your device and launch it as an Amazon EC2-compatible instance.

Follow these steps to complete the import of your image.

- 1. Upload your snapshot into an Amazon S3 bucket on your device.
- 2. Set up the required permissions to grant access to Amazon S3, Amazon EC2, and VM Import/ Export, the feature that is used to import and export snapshots.
- 3. Import the snapshot from the S3 bucket into your device as an image.
- 4. Register the image as an Amazon EC2-compatible AMI.
- 5. Launch the AMI as an Amazon EC2-compatible instance.

### Note

Be aware of the following limitations when uploading snapshots to Snowball Edge.

- Snowball Edge currently only support importing snapshots that are in the RAW image format.
- Snowball Edge currently only support importing snapshots with sizes from 1 GB to 1 TB.

## Step 1: Upload a snapshot into an S3 bucket on your device

You must upload your snapshot to Amazon S3 on your device before you import it. This is because snapshots can only be imported from Amazon S3 available on your device or cluster. During the import process, you choose the S3 bucket on your device to store the image in.

### To upload a snapshot to Amazon S3

To create an S3 bucket, see Creating Amazon S3 Storage.

To upload a snapshot to an S3 bucket, see Uploading Files to Amazon S3 Storage.

### Step 2: Import the snapshot from an S3 bucket

When your snapshot is uploaded to Amazon S3, you can import it to your device. All snapshots that have been imported or are in the process of being imported are shown in **Snapshots** tab.

### To import the snapshot to your device

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page. All your compute resources appear in the **Resources** section.
- 3. Choose the **Snapshots** tab to see all the snapshots that have been imported to your device. The image file in Amazon S3 is a .raw file that is imported to your device as a snapshot. You can filter by snapshot ID or the state of the snapshot to find specific snapshots. You can choose a snapshot ID to see details of that snapshot.
- 4. Choose the snapshot that you want to import, and choose **Import snapshot** to open the **Import snapshot** page.
- 5. For **Device**, choose the IP address of the Snow Family device that you want to import to.
- 6. For **Import description** and **Snapshot description**, enter a description for each.
- 7. In the **Role** list, choose a role to use for the import. Snowball Edge use VM Import/Export to import snapshots. Amazon assumes this role and uses it to import the snapshot on your behalf. If you don't have a role configured on your Amazon Snowball Edge, open the Amazon Identity and Access Management (IAM in Amazon OpsHub where you can create a local IAM role. The role also needs a policy that has the required VM Import/Export permissions to perform the import. You must attach this policy to the role. For more details on this please refer to Using IAM Locally.

The following is an example of the policy.

Sign in to the Amazon Web Services Management Console and open the IAM console at https://console.amazonaws.cn/iam/.

The role you create should have minimum permissions to access Amazon S3 The following is example of a minimum policy.

```
{
   "Version": "2012-10-17",
   "Statement":[
      {
         "Effect": "Allow",
         "Action":[
            "s3:GetBucketLocation",
            "s3:GetObject",
            "s3:ListBucket",
            "s3:GetMetadata"
         ],
         "Resource":[
            "arn:aws:s3:::import-snapshot-bucket-name",
            "arn:aws:s3:::import-snapshot-bucket-name/*"
         ]
      }
   ]
}
```


8. Choose **Browse S3** and choose the S3 bucket that contains the snapshot that you want to import. Choose the snapshot, and choose **Submit**. The snapshot begins to download onto your device. You can choose the snapshot ID to see the details. You can cancel the import process from this page.

### Step 3: Register the snapshot as an Amazon EC2-compatible AMI

The process of creating an Amazon EC2-compatible AMI from an image imported as a snapshot is known as *registering*. Images that are imported to your device must be registered before they can be launched as Amazon EC2-compatible instances.

### To register an image imported as a snapshot

- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page. All your compute resources appear in the **Resources** section.
- 3. Choose the **Images** tab. You can filter the images by name, ID, or state to find a specific image.
- 4. Choose the image that you want to register, and choose **Register image**.

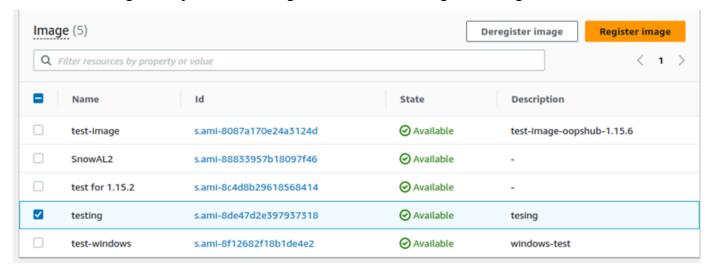

- 5. On the **Register image** page, provide a **Name** and **Description**.
- 6. For **Root volume**, specify the name of the root device.

In the **Block device** section, you can change the size of the volume and the volume type.

- 7. If you want the volume to be deleted when the instance is terminated, choose **Delete on termination**.
- 8. If you want to add more volumes, choose **Add new volume**.
- 9. When you are done, choose **Submit**.

## Step 4: Launch the Amazon EC2-compatible AMI


For more information, see Launching an Amazon EC2-compatible instance.

## Deleting a snapshot from a Snowball Edge with Amazon OpsHub

If you no longer need a snapshot, you can delete it from your device. The image file in Amazon S3 is a .raw file that is imported to your device as a snapshot. If the snapshot that you are deleting is used by an image, it can't be deleted. After import is completed, you can also delete the .raw file that you uploaded to Amazon S3 on your device.

### To delete a snapshot

- 1. Open the Amazon OpsHub application.
- In the Start computing section on the dashboard, choose Get started. Or, choose the Services
  menu at the top, and then choose Compute (EC2) to open the Compute page. All your
  compute resources appear in the Resources section.
- Choose the Snapshot tab to see all snapshots that have been imported. You can filter by snapshot ID or state of the snapshot to find specific snapshots.
- 4. Choose the snapshot that you want to delete, and choose **Delete**. You can choose multiple snapshots.



5. In the **Delete snapshot confirmation** box, choose **Delete snapshot**. If your deletion is successful, the snapshot is removed from the list under the **Snapshots** tab.


## Deregistering an AMI on a Snowball Edge with Amazon OpsHub

### To deregister an AMI


- 1. Open the Amazon OpsHub application.
- 2. In the **Start computing** section on the dashboard, choose **Get started**. Or, choose the **Services** menu at the top, and then choose **Compute (EC2)** to open the **Compute** page. All your compute resources appear in the **Resources** section.

Deleting a snapshot 111

- 3. Choose the **Images** tab. All your images are listed. You can filter the images by name, ID, or state to find a specific image.
- 4. Choose the image that you want to deregister, and choose **Deregister**.

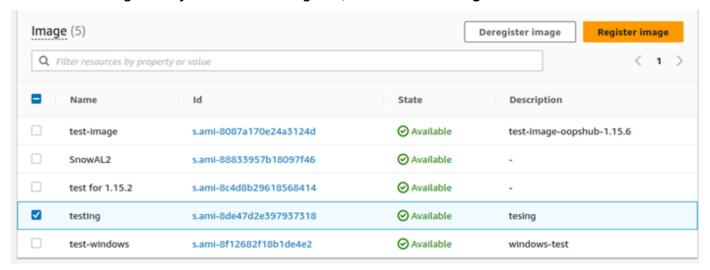

5. In the **Confirm deregister image** window, confirm the image ID and choose **Deregister image**. When deregistering is successful, the image is removed from the list of images.

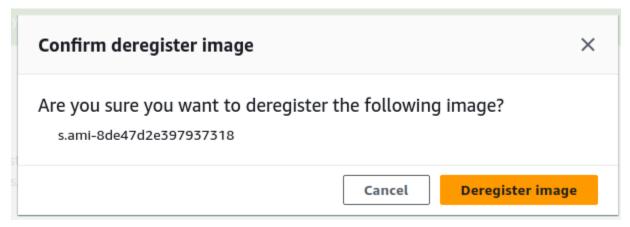

# Managing an Amazon EC2 cluster on Snowball Edge with Amazon OpsHub

An Amazon EC2 *cluster* is a group of devices that provision together as a cluster of devices. To use a cluster, the Amazon services on your device must be running at your default endpoint. You also must choose the specific device in the cluster that you want to talk to. You use a cluster on a perdevice basis.

Managing clusters 112

#### To create an Amazon EC2 cluster

- Connect and log in to your Snow device. For instructions on how to log in to your device, see Unlocking a Snowball Edge device with Amazon OpsHub.
- 2. On the **Choose device** page, choose **Snowball Edge cluster**, and then choose **Next**.
- 3. On the **Connect to your device** page, provide the IP address of the device and the IP addresses of other devices in the cluster.
- 4. Choose Add another device to add more devices, and then choose Next.
- 5. On the **Provide the keys** page, enter the device client unlock code, upload the device manifest, and choose **Unlock device**.
  - Snowball Edge devices use 256-bit encryption to help ensure both security and full chain-of-custody for your data.
- (Optional) Enter a name to create a profile, and then choose Save profile name. You are directed to the dashboard, where you see all your clusters.

You can now start using Amazon services and managing your cluster. You manage instances in the cluster the same way you manage individual instances. For instructions, see <a href="Managing">Managing</a> Amazon services on the Snowball Edge with Amazon OpsHub.

## Set up Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub

The Amazon S3 compatible storage on Snowball Edge service is not active by default. To start the service on a device or cluster, you must create two virtual network interfaces (VNICs) on each device to attach to the s3control and s3api endpoints.

### **Topics**

- Amazon S3 compatible storage on Snowball Edge prerequisites for Amazon OpsHub
- <u>Using the Amazon S3 compatible storage on Snowball Edge simple setup option in Amazon</u>
   <u>OpsHub</u>
- Using the Amazon S3 compatible storage on Snowball Edge advanced setup option using Amazon OpsHub
- Configuring Amazon S3 compatible storage on Snowball Edge to autostart using Amazon
   OpsHub

- Creating a bucket in Amazon S3 compatible storage on Snowball Edge using Amazon OpsHub
- Upload files and folders to Amazon S3 compatible storage on Snowball Edge buckets using Amazon OpsHub
- Remove files and folders from Amazon S3 compatible storage on Snowball Edge buckets with Amazon OpsHub with Amazon OpsHub
- Delete buckets from Amazon S3 compatible storage on Snowball Edge

## Amazon S3 compatible storage on Snowball Edge prerequisites for Amazon OpsHub

Before you can set up your device or cluster using Amazon OpsHub, do the following:

- Power on your Snowball Edge device and connect it to your network.
- On your local machine, download and install the latest version of Amazon OpsHub. Connect to the device or cluster to unlock it with a manifest file. For more information, see unlocking a device.

## Using the Amazon S3 compatible storage on Snowball Edge simple setup option in Amazon OpsHub

Use the simple setup option if your network uses DHCP. With this option, the VNICs are created automatically on each device when you start the service.

Log in to Amazon OpsHub, then choose Manage Storage. 1.

This takes you to the Amazon S3 compatible storage on Snowball Edge landing page.


- 2. For **Start service setup type**, choose **Simple**.
- Choose **Start service**. 3.



### Note

This takes a few minutes to complete and depends on the number of devices you're using.

After the service starts, the Service state is active, and there are endpoints.

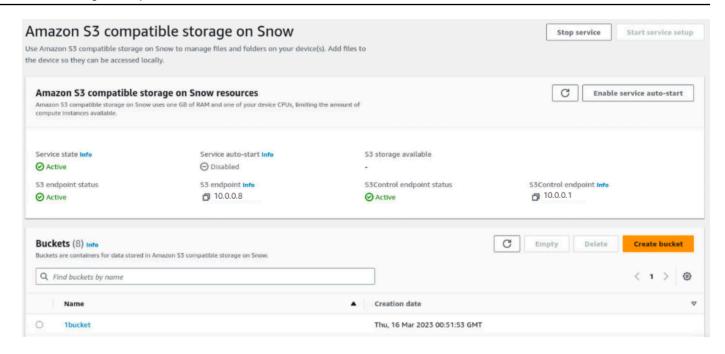

## Using the Amazon S3 compatible storage on Snowball Edge advanced setup option using Amazon OpsHub

Use the advanced setup option if your network uses static IP addresses or if you want to reuse existing VNIs. With this option, you create VNICs for each device manually.

Log in to Amazon OpsHub, then choose **Manage Storage**.

This takes you to the Amazon S3 compatible storage on Snowball Edge landing page.

- For **Start service setup type**, choose **Advanced**. 2.
- 3. Select the devices that you need to create VNICs for.

For clusters, you need a minimum quorum of devices to start the Amazon S3 compatible storage on Snowball Edge service. The quorum is two for a three-node cluster.



### Note

For the initial start of the service in a cluster setup, you must have all devices in the cluster configured and available for the service to start. For subsequent starts, you can use a subset of the devices if you meet quorum, but the service will start in a degraded state.

For each device, choose an existing VNIC or select Create VNI. 4.

Each device needs a VNIC for the S3 endpoint for object operations and another for the **S3Control endpoint** for bucket operations.

- If you're creating a VNIC, choose a physical network interface and enter the status IP address and subnet mask, then choose Create virtual network interface.
- After you create your VNICS, choose **Start service**. 6.



### Note

This takes a few minutes to complete and depends on the number of devices you're using.


After the service starts, the Service state is active, and there are endpoints.

## Configuring Amazon S3 compatible storage on Snowball Edge to autostart using **Amazon OpsHub**

Log in to Amazon OpsHub, then choose **Manage Storage**.

This takes you to the Amazon S3 compatible storage on Snowball Edge landing page.

In Amazon S3 compatible storage on Snow resources, choose Enable service auto-start. The system configures the service to automatically start in the future.

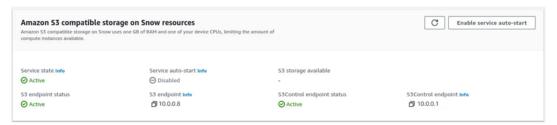


## Creating a bucket in Amazon S3 compatible storage on Snowball Edge using **Amazon OpsHub**

Use the Amazon OpsHub interface to create an Amazon S3 bucket on your Snowball Edge device.

Open Amazon OpsHub. 1.

- In Manage storage, choose Get started. The Amazon S3 compatible storage on Snow page 2. appears.
- In **Buckets**, choose **Create bucket**. The **Create bucket** screen appears.

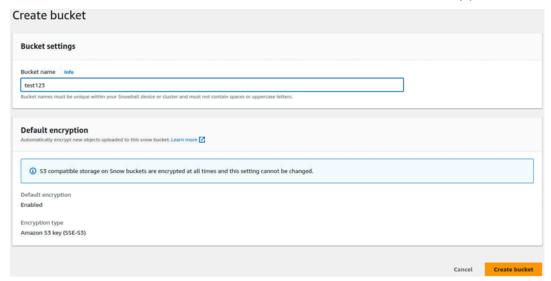

In **Bucket name**, enter a name for the bucket.



### Note


Bucket names must be unique within your Snowball device or cluster and must not contain spaces or uppercase letters.

Choose **Create bucket**. The system creates the bucket and it appears in **Buckets** in the **Amazon** S3 compatible storage on Snow page.

## Upload files and folders to Amazon S3 compatible storage on Snowball Edge buckets using Amazon OpsHub

Use the Amazon OpsHub interface to upload files and folders to Amazon S3 compatible storage on Snowball Edge buckets. Files and folders may be uploaded separately or together.

- 1. Open Amazon OpsHub
- In Manage storage, in Buckets, choose a bucket in which to upload files. The page for that 2. bucket appears.
- In the bucket page, choose **Upload files**. The **Upload** page appears.

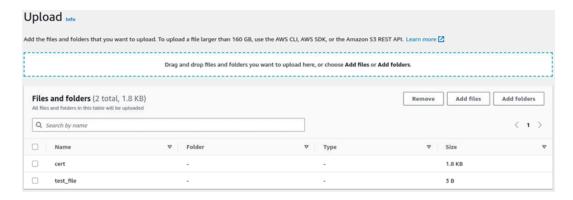

- 4. Upload files or folders by dragging them from an operating system file manager to the Amazon OpsHub window or do the following:
  - a. Select Add files or Add folders.
  - b. Select one or more files or folders to upload. Select **Open**.

The system uploads the selected files and folders to the bucket on the device. After the upload is complete, the names of the files and folders appear in the **Files and folders** list.

## Remove files and folders from Amazon S3 compatible storage on Snowball Edge buckets with Amazon OpsHub with Amazon OpsHub

Use the Amazon OpsHub interface to remove and permanently delete files and folders from buckets on the Snowball Edge device.


- 1. Open Amazon OpsHub.
- 2. In **Manage storage**, in **Buckets**, select the name of a bucket from which to delete files and folders. The page for that bucket appears.
- 3. In **Files and folders** select the check boxes of the files and folders to permanently delete.
- 4. Select **Remove**. The system removes the files or folders from the bucket on the device.

## Delete buckets from Amazon S3 compatible storage on Snowball Edge

Before you can delete a bucket from a device, the bucket must be empty. Either remove files and folders from the bucket or use the empty bucket tool. To remove files and folders, see Remove files and folders from Amazon S3 compatible storage on Snowball Edge buckets with Amazon OpsHub with Amazon OpsHub.

### To use the empty bucket tool


- 1. Open Amazon OpsHub.
- 2. In Manage storage, in Buckets, select the radio button of the bucket to empty.
- 3. Select **Empty**. The **Empty bucket** page appears.

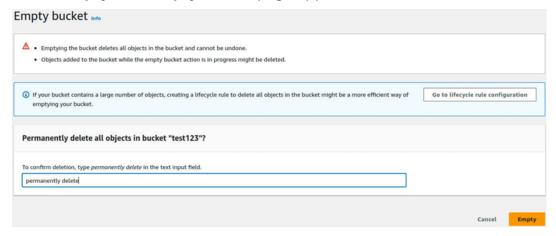

- 4. In the text box in the **Empty bucket** page, type **permanently delete**.
- 5. Select **Empty**. The system empties the bucket.

### To delete an empty bucket

- 1. In Manage storage, in Buckets, select the radio button of the bucket to delete.
- 2. Select **Delete**. The **Delete bucket** page appears.



- 3. In the text box in the **Delete bucket** page, type the name of the bucket.
- 4. Select **Delete**. The system deletes the bucket from the device.

## Managing Amazon S3 adapter storage with Amazon OpsHub

You can use Amazon OpsHub to create and manage Amazon Simple Storage Service (Amazon S3) storage on your Snowball Edge using the S3 adapter for import and export jobs.

### **Topics**

- Accessing Amazon S3 storage with Amazon OpsHub
- Uploading files to Amazon S3 storage with Amazon OpsHub
- Downloading files from Amazon S3 storage with Amazon OpsHub
- Deleting files from Amazon S3 storage with Amazon OpsHub

### Accessing Amazon S3 storage with Amazon OpsHub

You can upload files to your device and access the files locally. You can physically move them to another location on the device, or import them back to the Amazon Web Services Cloud when the device is returned.

Snowball Edge use Amazon S3 buckets to store and manage files on your device.

### To access an S3 bucket


- 1. Open the Amazon OpsHub application.
- 2. In the Manage file storage section of the dashboard, choose **Get started**.

If your device has been ordered with the Amazon S3 transfer mechanism, they appear in the Buckets section of the File & object storage page. On the File & object storage page, you can see details of each bucket.



### Note


If the device was ordered with the NFS transfer mechanism, the bucket name will appear under the mount points section after NFS service is configure and activated. For more information on using the NFS interface, see Managing the NFS interface with Amazon OpsHub.

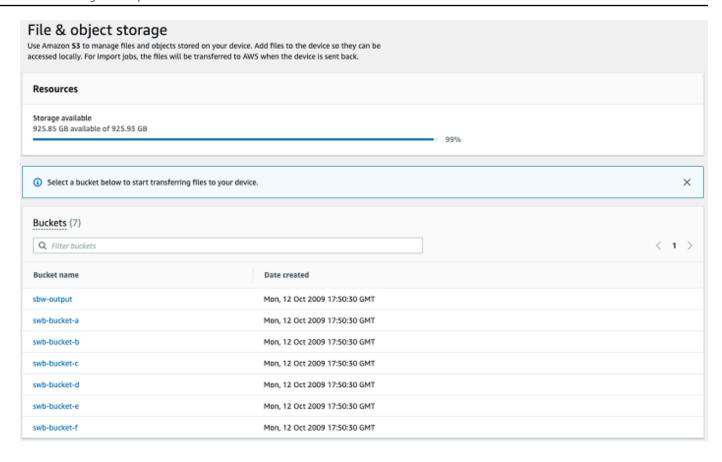

## Uploading files to Amazon S3 storage with Amazon OpsHub

### To upload a file

- In the Manage file storage section on the dashboard, choose Get started. If you have Amazon S3 buckets on your device, they appear in the Buckets section on the File storage page. You can see details of each bucket on the page.
- 2. Choose the bucket that you want to upload files into.
- 3. Choose **Upload** then **Upload files** or drag and drop the files in the bucket, and choose **OK**.

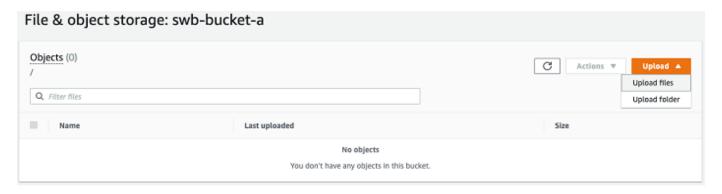


### Note

To upload larger files, you can use the multipart upload feature in Amazon S3 using the Amazon CLI. For more information about configuring S3 CLI settings, see CLI S3 Configuration. For more information on multipart upload, see Multipart Upload Overview in the Amazon Simple Storage Service User Guide Uploading a folder from a local machine to Snowball Edge using the Amazon OpsHub is supported. If the folder size is very large, it takes some time for OpsHub to read the file/folder selection. While OpsHub is reading the files and folders, it does not display a progress tracker. However, it does display a progress tracker is displayed once the upload process begins.

### Downloading files from Amazon S3 storage with Amazon OpsHub

### To download a file

- In the Manage file storage section of the dashboard, choose Get started. If you have S3 buckets on your device, they appear in the **Buckets** section on the **File storage** page. You can see details of each bucket on the page.
- Choose the bucket that you want to download files from and navigate to the file that you want to download. Choose one or more files.

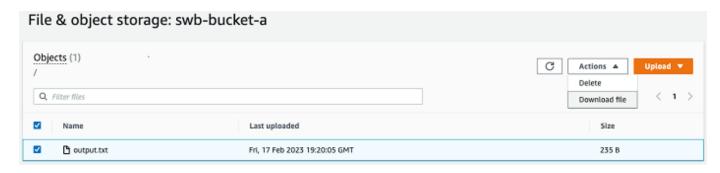

- In the Actions menu, choose Download.
- 4. Choose a location to download the file to, and choose **OK**.

### Deleting files from Amazon S3 storage with Amazon OpsHub

If you no longer need a file, you can delete it from your Amazon S3 bucket.

### To delete a file

- In the Manage file storage section of the dashboard, choose Get started. If you have Amazon S3 buckets on your device, they appear in the Buckets section on the File storage page. You can see details of each bucket on the page.
- Choose the bucket you want to delete files from, and navigate to the file that you want to delete.
- On the Actions menu, choose Delete.
- 4. In the dialog box that appears, choose **Confirm delete**.

## Managing the NFS interface with Amazon OpsHub

Use the Network File System (NFS) interface to upload files to the Snowball Edge as if the device is local storage to your operating system. This allows for a more user-friendly approach to transferring data because you can use features of your operating system, like copying files, dragging and dropping them, or other graphical user interface features. Each S3 bucket on the device is available as an NFS interface endpoint and can be mounted to copy data to. The NFS interface is available for import jobs.

You can use the NFS interface if the Snowball Edge device was configured to include it when the job to order the device was created. If the device is not configured to include the NFS interface, use the S3 adapter or Amazon S3 compatible storage on Snowball Edge to transfer data. For

more information about the S3 adapter, see <u>Managing Amazon S3 adapter storage with Amazon OpsHub</u>. For more information about Amazon S3 compatible storage on Snowball Edge, see <u>Set up Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub</u>.

When started, the NFS interface uses 1 GB of memory and 1 CPU. This may limit the number of other services running on the Snowball Edge or the number of EC2-compatible instances that can run.

Data transferred through the NFS interface is not encrypted in transit. When configuring the NFS interface, you can provide CIDR blocks and the Snowball Edge will restrict access to the NFS interface from client computers with addresses in those blocks.

Files on the device will be transferred to Amazon S3 when it is returned to Amazon. For more information, see Importing Jobs into Amazon S3.

For more information about using NFS with your computer operating system, see the documentation for your operating system.

Keep the following details in mind when using the NFS interface.

- The NFS interface provides a local bucket for data storage on the device. For import jobs, no data from the local bucket will be imported to Amazon S3.
- File names are object keys in your local S3 bucket on the Snowball Edge. The key name is
  a sequence of Unicode characters whose UTF-8 encoding is at most 1,024 bytes long. We
  recommend using NFSv4.1 where possible and encode file names with Unicode UTF-8 to ensure
  a successful data import. File names that are not encoded with UTF-8 might not be uploaded to
  S3 or might be uploaded to S3 with a different file name depending on the NFS encoding you
  use.
- Ensure that the maximum length of your file path is less than 1024 characters. Snowball Edge do not support file paths that are greater that 1024 characters. Exceeding this file path length will result in file import errors.
- For more information, see Object keys in the Amazon Simple Storage Service User Guide.
- For NFS based transfers, standard POSIX style metadata will be added to your objects as they get imported to Amazon S3 from Snowball Edge. In addition, you will see meta-data "x-amz-meta-user-agent aws-datasync" as we currently use Amazon DataSync as part of the internal import mechanism to Amazon S3 for Snowball Edge import with NFS option.
- You can transfer up to 40M files using a single Snowball Edge device. If you require to transfer more than 40M files in a single job, please batch the files in order to reduce the file numbers per

each transfer. Individual files can be of any size with a maximum file size of 5 TB for Snowball Edge devices with the enhanced NFS interface or the S3 interface.

You can also configure and manage the NFS interface with the Snowball Edge client, a command line interface (CLI) tool. For more information, see Managing the NFS interface.

### **Topics**

- Starting the NFS service on a Windows operating system
- Configuring the NFS interface automatically with Amazon OpsHub
- Configuring the NFS interface manually with Amazon OpsHub
- Managing NFS endpoints on the Snowball Edge with Amazon OpsHub
- Mounting NFS endpoints on client computers
- Stopping the NFS interface with Amazon OpsHub

### Starting the NFS service on a Windows operating system

If your client computer is using the Windows 10 Enterprise or Windows 7 Enterprise operating system, start the NFS service on the client computer before configuring NFS in the Amazon OpsHub application.

- 1. On your client computer, open **Start**, choose **Control Panel** and choose **Programs**.
- Choose Turn Windows features on or off. 2.



### (i) Note

To turn Windows features on, you may need to provide an admin user name and password for your computer.

Under Services for NFS, choose Client for NFS and choose OK.

## Configuring the NFS interface automatically with Amazon OpsHub

The NFS interface is not running on the Snowball Edge device by default, so you need to start it to enable data transfer on the device. With a few clicks, your Snowball Edge can guickly and automatically configure the NFS interface for you. You can also configure the NFS interface yourself. For more information, see Configuring the NFS interface manually with Amazon OpsHub.

In the Transfer data section on the dashboard, choose Enable & start. This could take a minute or two to complete.



- When the NFS service is started, the IP address of the NFS interface is shown on the dashboard and the **Transfer data** section indicates that the service is active.
- Choose Open in Explorer (if using a Windows or a Linux operating system) to open the file share in your operating system's file browser and start transferring files to the Snowball Edge. You can copy and paste or drag and drop files from your client computer into the file share. In Windows operating system, your file share looks like the following buckets (\ \12.123.45.679)(Z:).



#### Note

In Linux operating systems, mounting NFS endpoints requires root permissions.


### Configuring the NFS interface manually with Amazon OpsHub

The NFS interface is not running on the Snowball Edge device by default, so you need to start it to enable data transfer on the device. You can manually configure the NFS interface by providing the IP address of a Virtual Network Interface (VNI) running on the Snowball Edge device and restricting access to your file share, if required. Before configuring the NFS interface manually, set up a virtual network interface (VNI) on your Snowball Edge device. For more information, see Network Configuration for Compute Instances.

You can also have the Snowball Edge device configure the NFS interface automatically. For more information, see Configuring the NFS interface automatically with Amazon OpsHub.

At the bottom of **Transfer data** section, on the dashboard, choose **Configure manually**.

2. Choose **Enable & start** to open the **Start NFS** wizard. The **Physical network interface** field is populated.

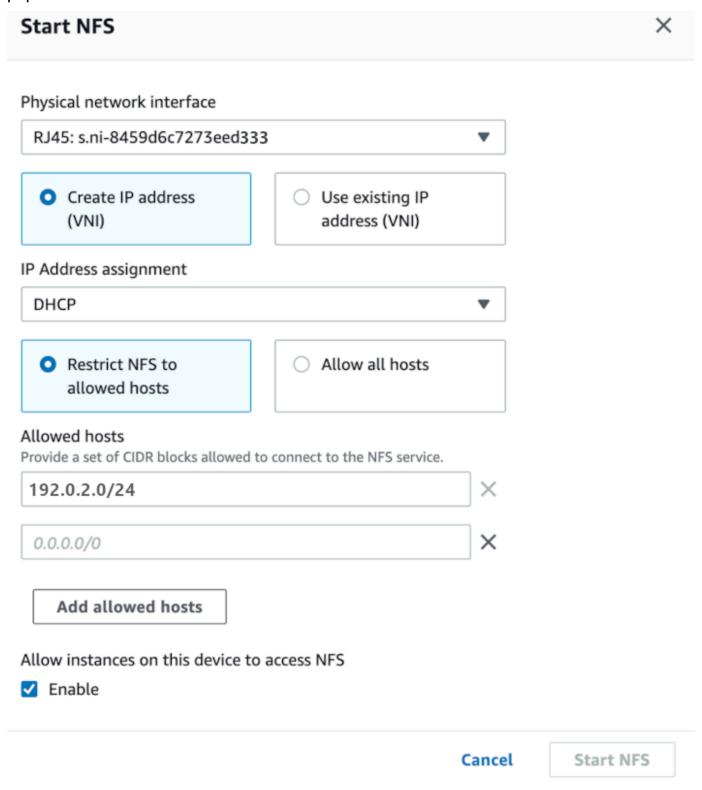

3. Choose Create IP address (VNI) or choose Use existing IP address.

If you choose Create IP address (VNI), then choose DHCP or Static IP in the IP Address assignment list box.

### Important

If you use a DHCP network, it is possible that the NFS interface's IP address could be reassigned by the DCHP server. This can happen after the device has been disconnected and the IP addresses are recycled. If you set an allowed host range and the address of the client changes, another client can pick up that address. In this case, the new client will have access to the share. To prevent this, use DHCP reservations or static IP addresses.

If you choose **Use existing IP address**, then choose a virtual network interface from the Virtual network interface list box.

- Choose to restrict access to the NFS interface and provide a block of allowed network addresses, or allow any devices on the network to access the NFS interface on the Snowball Edge.
  - To restrict access to the NFS interface on the Snowball Edge, choose **Restrict NFS to** allowed hosts. In Allowed hosts enter a set of CIDR blocks. If you want to allow access to more than one CIDR block, enter another set of blocks. To remove a set of blocks, choose X next to the field containing the blocks. Choose **Add allowed hosts**.



### Note

If you choose Restrict NFS to allowed hosts and do not provide allowed CIDR blocks, the Snowball Edge will deny all requests to mount the NFS interface.

- To allow any device on the network to access the NFS interface, choose Allow all hosts.
- To allow EC2-compatible instances running on the Snowball Edge to access the NFS adapter, choose Enable.
- Choose **Start NFS**. It could take about a minute or two to start.



### Important

Don't turn off the Snowball Edge while the NFS interface is starting.

From the Network File System (NFS) Resources section, the State of the NFS interface shows as Active. You will need the IP address listed to mount the interface as local storage on client computers.

### Managing NFS endpoints on the Snowball Edge with Amazon OpsHub

Each S3 bucket on the Snowball Edge is represented as an endpoint and listed in **Mount paths**. After the NFS interface is started, mount an endpoint to transfer files to or from that endpoint. Only one endpoint can be mounted at a time. To mount a different endpoint, unmount the current endpoint first.

### To mount an endpoint

- In the **Mount paths** section, do one of the following to select an endpoint:
  - In the **Filter endpoints** field, enter all or part a bucket name to filter the list of available endpoints on your entry, then choose the endpoint.
  - Choose the endpoint to mount in the Mount paths list.
- 2. Choose **Mount NFS endpoint**. The Snowball Edge mounts the endpoint for use.

### To unmount an endpoint

- In the **Mount paths** section, choose the endpoint to unmount. 1.
- 2. Choose **Unmount endpoint**. The Snowball Edge unmounts the endpoint and it is no longer available for use.



### Note

Before unmounting an endpoint, ensure no data is being copied from or to it.

## Mounting NFS endpoints on client computers

After the NFS interface is started and an endpoint mounted, mount the endpoint as local storage on client computers.

- 1. In **Mount paths**, choose the copy icon of the endpoint to mount. Paste it in your operating system when mounting the endpoint.
- 2. The following are the default mount commands for Windows, Linux, and macOS operating systems.
  - Windows:

```
mount -o nolock rsize=128 wsize=128 mtype=hard nfs-interface-ip-address:/
buckets/BucketName *
```

• Linux:

```
mount -t nfs nfs-interface-ip-address:/buckets/BucketName mount_point
```

macOS:

```
mount -t nfs -o vers=3,rsize=131072,wsize=131072,nolocks,hard,retrans=2 nfs-
interface-ip-address:/buckets/$bucketname mount_point
```

## Stopping the NFS interface with Amazon OpsHub

Stop the NFS interface on the Snowball Edge device when you are done transferring files to or from it.

- 1. From the dashboard, choose **Services** and then choose **File Storage**.
- 2. On the **File Storage** page, choose **Disable data transfer**. It usually takes up to 2 minutes for the NFS endpoints to disappear from the dashboard.

## Rebooting the device with Amazon OpsHub

Follow these steps to use Amazon OpsHub to reboot your Snow device.

Rebooting the device 130



### Important


We highly recommend that you suspend all activities on the device before you reboot the device. Rebooting a device stops running instances and interrupts any writing to Amazon S3 buckets on the device.

#### To reboot a device

- On the Amazon OpsHub dashboard, find your device under **Devices**. Then choose the device to open the device details page.
- 2. Choose the **Device Power** menu, then choose **Reboot**. A dialog box appears.




In the dialog box, choose **Reboot**. Your device starts to reboot.

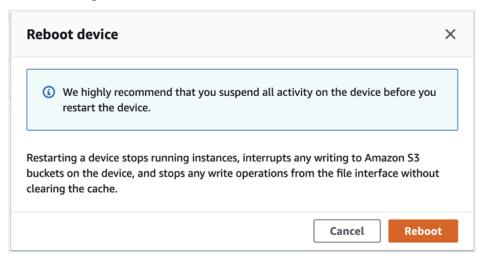

While the device shuts down, the LCD screen displays a message indicating the device is shutting down.

Rebooting the device 131

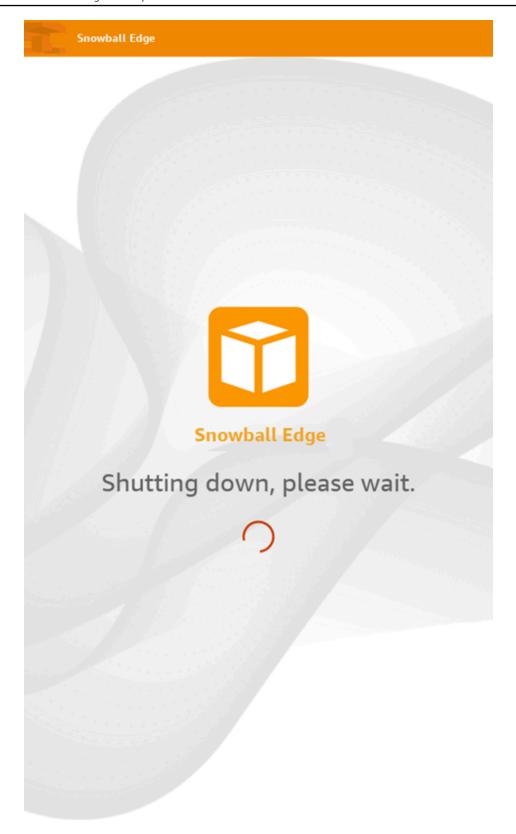

Rebooting the device 132

# Managing profiles with Amazon OpsHub

You can create a *profile* for persistent storage of your credentials on your local file system. Using Amazon OpsHub, you have the option to create a new profile any time you unlock the device using the device IP address, unlock code, and manifest file.

You can also use the Snowball Edge Client to create a profile at any time. See Configuring a profile for the Snowball Edge Client.

# To create a profile

- Unlock your device locally and sign in according to the instructions in Unlocking a Snowball Edge device with Amazon OpsHub.
- Name the profile and choose **Save profile name**.

# Shutting down the device with Amazon OpsHub

Follow these steps to use Amazon OpsHub to shut down your Snow device.

#### Important


We highly recommend that you suspend all activities on the device before you shut down the device. Shutting down a device stops running instances and interrupts any writing to Amazon S3 buckets on the device.

#### To shut down a device

- On the Amazon OpsHub dashboard, find your device under **Devices**. Then choose the device to open the device details page.
- Choose the **Device Power** menu, then choose **Shutdown**. A dialog box appears.




In the dialog box, choose **Shutdown**. Your device starts to shut down.

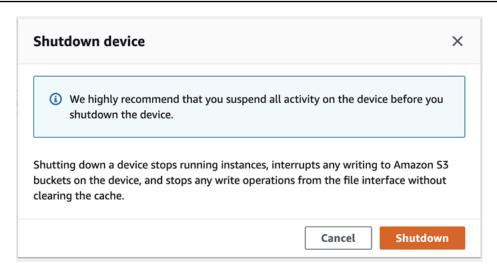

While the device shuts down, the LCD screen displays a message indicating the device is shutting down.

Shutting down the device 134

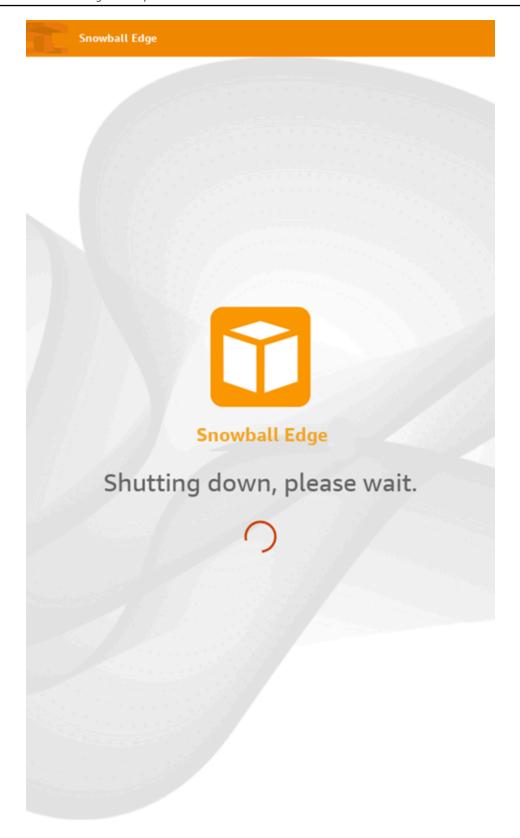

Shutting down the device 135

# Editing the device alias with Amazon OpsHub


Use these steps to edit your device alias using Amazon OpsHub.

# To edit your device's alias

- 1. On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.
- 2. Choose the **Edit device alias** tab.



3. For **Device alias**, enter a new name, and choose **Save alias**.

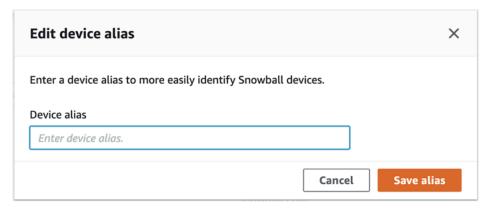

# Managing public key certificates using OpsHub

You can securely interact with Amazon services running on a Snowball Edge device or a cluster of Snowball Edge devices through the HTTPS protocol by providing a public key certificate. You can use the HTTPS protocol to interact with Amazon services such as IAM, Amazon EC2, S3 adapter, Amazon S3 compatible storage on Snowball Edge, Amazon EC2 Systems Manager, and Amazon STS on Snowball Edge devices. In the case of a cluster of devices, a single certificate is required and can be generated by any device in the cluster. Once a Snowball Edge device generates the certificate and you unlock the device, you can use Snowball Edge client commands to list, get, and delete the certificate.

A Snowball Edge device generates a certificate when the following events occur:

Editing the device alias 136

- The Snowball Edge device or cluster is unlocked for the first time.
- The Snowball Edge device or cluster is unlocked after deleting the certificate (using the delete-certificate command or Renew certificate in Amazon OpsHub).
- The Snowball Edge device or cluster is rebooted and unlocked after the certificate expires.

Whenever a new certificate is generated, the old certificate is no longer valid. A certificate is valid for a period of one year from the day it was generated.

You can also use the Snowball Edge client to manage public key certificates. For more information, see Managing public key certificates.

#### **Topics**

- Download the public key certificate using OpsHub
- Renewing the public key certificate using OpsHub

# Download the public key certificate using OpsHub

You can download the active public key certificate to your computer.


- 1. On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.
- 2. In the device details page, choose the **Manage certificate** menu. From the menu, choose **Download certificate**.
- 3. A window appears in which you can name the certificate file to download and choose the location on your computer where it will be downloaded. Choose **Save**.

# Renewing the public key certificate using OpsHub

Before renewing the public key certificate, stop all data transfers to or from the Snowball Edge device and stop any EC2-compatible that are running. For more information, see <a href="Stopping an Amazon EC2-compatible">Stopping an Amazon EC2-compatible instance in this guide.</a>

- 1. On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.
- 2. In the device details page, choose the **Manage certificate** menu. From the menu, choose **Renew certificate**.

3. In the **Renew certificate** window, enter **Renew** in the field and choose **Renew**. The Snowball Edge device deletes the existing public key certificate and reboots the device or cluster.



# The following certificate will be deleted:

arn:aws:snowball-device:::certificate/example



Stop all activity on the Snow device or cluster before proceeding.

Clicking Renew will automatically reboot all devices attached to this certificate and terminate any ongoing data transfers and other running processes. A new certificate will be generated when you unlock the device or cluster after it reboots.

To confirm, enter <b>Renew</b> in the field and then choose <b>Renew</b>	

Cancel

Renew

# **Getting updates for the Snowball Edge**

You can check for updates for your device and install them. version.

# **Updating the device**

Follow these steps to use Amazon OpsHub to update your Snow device.


# To update the device

1. On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.

Getting device updates 138

2. Choose the **Check for updates** tab.

The **Check for updates** page displays the current software version on your device and the latest software version, if there is one.

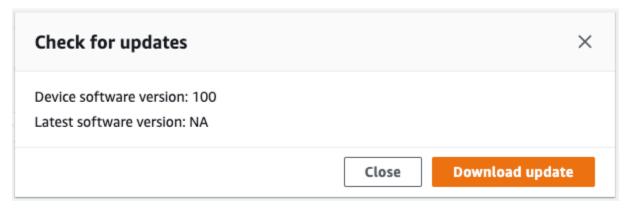

3. If there is an update, choose **Download update**. Otherwise, choose **Close**.

# **Updating the Amazon OpsHub application**

To verify that automatic updates are enabled for Amazon OpsHub

- 1. On the Amazon OpsHub dashboard, choose **Preferences**.
- 2. Open the **Updates** tab.
- 3. Verify that Automatic updates enabled is selected. Automatic update is enabled by default.



If **Automatic updates enabled** is not selected, you will not get the latest version of the Amazon OpsHub application.

# Automating your management tasks with Amazon OpsHub

You can use Amazon OpsHub to automate operational tasks that you perform frequently on your Snowball Edge. You can create a task for reoccurring actions that you might want to perform on resources, such as restarting virtual servers, stopping Amazon EC2-compatible instances, and so

Updating Amazon OpsHub 139

on. You provide an automation document that safely performs operational tasks and runs the operation on Amazon resources in bulk. You can also schedule common IT workflows.



# Note

Automating tasks is not supported on clusters.

To use tasks, the Amazon EC2 Systems Manager service must be started first. For more information, see Activating Snowball Edge Device Management on a Snowball Edge.

# **Topics**

- Creating and starting a task with Amazon OpsHub
- Viewing details of a task in Amazon OpsHub
- Deleting a task in Amazon OpsHub

# Creating and starting a task with Amazon OpsHub

When you create a task, you specify the types of resources that the task should run on, and then provide a task document that contains the instructions that run the task. The task document is either in YAML or JSON format. You then provide the required parameters for the task and start the task.

#### To create a task

- In the **Launch tasks** section of the dashboard, choose **Get started** to open the **Tasks** page. If you have created tasks, they appear under Tasks.
- 2. Choose Create task and provide details for the task.
- For **Name**, enter a unique name for the task.



The name must be between 3 and 128 characters. Valid characters are a-z, A-Z, 0-9, ., \_, and -.

Optionally, you can choose a target type from the **Target type-optional** list. This is the type of resource that you want the task to run on.

Creating and starting a task 140 For example, you can specify **/AWS::EC2::Instance** for the tasks to run on an Amazon EC2-compatible instance or **/** to run on all resource types.

- 5. In the **Content** section, choose **YAML** or **JSON**, and provide the script that performs the task. You have two options, YAML or JSON format. For examples, see <u>Task examples in Amazon OpsHub</u>.
- 6. Choose **Create**. The task that you created then appears on the **Tasks** page.

#### To start a task

- In the Launch tasks section of the dashboard, choose Get started to open the Tasks page.
   Your tasks appear under Tasks.
- 2. Choose your task to open the **Start task** page.
- 3. Choose **Simple execution** to run on targets.

Choose **Rate control** to run safely on multiple targets and define concurrency and error thresholds. For this option, you provide the additional target and error threshold information in the **Rate control** section.

4. Provide the required input parameters, and choose **Start task**.

The status of the task is **Pending**, and changes to **Success** when the task has run successfully.

# Task examples in Amazon OpsHub

The following example restarts an Amazon EC2-compatible instance. It requires two input parameters: endpoint and instance ID.

#### YAML example

```
description: Restart EC2 instance
schemaVersion: '0.3'
parameters:
    Endpoint:
    type: String
    description: (Required) EC2 Service Endpoint URL
    Id:
        type: String
```

Creating and starting a task 141

```
description: (Required) Instance Id
mainSteps:
  - name: restartInstance
    action: aws:executeScript
    description: Restart EC2 instance step
    inputs:
      Runtime: python3.7
      Handler: restart_instance
      InputPayload:
        Endpoint: "{{ Endpoint }}"
        Id: "{{ Id }}"
      TimeoutSeconds: 30
      Script: |-
        import boto3
        import time
        def restart_instance(payload, context):
            ec2_endpoint = payload['Endpoint']
            instance_id = payload['Id']
            ec2 = boto3.resource('ec2', endpoint_url=ec2_endpoint)
            instance = ec2.Instance(instance_id)
            if instance.state['Name'] != 'stopped':
                instance.stop()
                instance.wait_until_stopped()
            instance.start()
            instance.wait_until_running()
            return {'InstanceState': instance.state}
```

#### JSON example

```
"description" : "Restart EC2 instance",
"schemaVersion" : "0.3",
"parameters" : {
    "Endpoint" : {
        "type" : "String",
        "description" : "(Required) EC2 Service Endpoint URL"
    },
    "Id" : {
        "type" : "String",
        "description" : "(Required) Instance Id"
    }
},
```

Creating and starting a task 142

```
"mainSteps" : [ {
    "name" : "restartInstance",
    "action" : "aws:executeScript",
    "description" : "Restart EC2 instance step",
    "inputs" : {
      "Runtime" : "python3.7",
      "Handler" : "restart_instance",
      "InputPayload" : {
        "Endpoint" : "{{ Endpoint }}",
        "Id" : "{{ Id }}"
      },
      "TimeoutSeconds" : 30,
      "Script" : "import boto3\nimport time\ndef restart_instance(payload, context):\n
            ec2_endpoint = payload['Endpoint']\n
                                                     instance_id = payload['Id']\n
            ec2 = boto3.resource('ec2', endpoint_url=ec2_endpoint)\n
            instance = ec2.Instance(instance_id)\n
            if instance.state['Name'] != 'stopped':\n
            instance.stop()\n
            instance.wait_until_stopped()\n
            instance.start()\n
            instance.wait_until_running()\n
            return {'InstanceState': instance.state}"
    }
  } ]
}
```

# Viewing details of a task in Amazon OpsHub

You can view details of a management task, such as the description and the parameters that are required to run the task.

#### To view details of a task

- 1. In the **Launch tasks** section of the dashboard, choose **Get started** to open the **Tasks** page.
- 2. On the **Tasks** page, locate and choose the task that you want to see details of.
- 3. Choose **View details**, and choose one of the tabs to see the details. For example, the **Parameters** tab shows you the input parameters in the script.

Viewing details of a task 143

# **Deleting a task in Amazon OpsHub**

Follow these steps to delete a management task.

#### To delete a task

- 1. In the **Launch tasks** section of the dashboard, choose **Get started** to open the **Tasks** page.
- 2. Locate the task that you want to delete. Choose the task, and then choose **Delete**.

# Setting the NTP time servers for the device with Amazon OpsHub

Follow these steps to view and update which time servers your device must synchronize time with.

#### To check time sources

- On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.
- You will see a list of time sources that your device is synchronizing time with in the Time sources table.

The **Time sources** table has four columns:

- Address: The DNS name / IP address of the time source
- **State**: The current connection status between the device and that time source, there are 5 possible states:
  - CURRENT: Time source is currently being used to synchronize time
  - COMBINED: Time source is combined with the current source
  - **EXCLUDED**: Time source is excluded by the combining algorithm
  - LOST: Connection with the time source has been lost
  - **UNAVAILABILITY**: An invalid time source where the combining algorithm has deemed to be either a falseticker or has too much variability
- **Type**: Network Time Protocol (NTP) sources can be a server or peer. A server can be set by the user using the **update-time-server** command, whereas a peer can only be set up using


Deleting a task 144

other Snowball Edge devices in the cluster and are automatically set up when the cluster is associated.

• **Stratum**: The stratum of the source. **Stratum 1** indicates a source with a locally attached reference clock. A source that is synchronized to a Stratum 1 source is set at **Stratum 2**. A source that is synchronized to a stratum 2 source is set at **Stratum 3**, and so on.

#### To update the time servers

- On the Amazon OpsHub dashboard, find your device under **Devices**. Choose the device to open the device details page.
- You will see a list of time sources that your device is synchronizing time with in the Time sources table.
- 3. Choose **Update time servers** on the **Time sources** table.
- 4. Provide the DNS name or the IP address of the time servers you would like your device to synchronize time with, and choose **Update**.

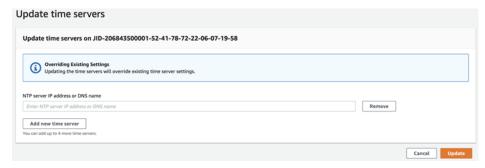

# Supported NTP device types and software versions

NTP isn't available on any version 2 storage and compute device types. Snowball Edge version 3 storage and compute device types with software version 77 or later support NTP, however. To check if NTP is enabled, use the Snowball Edge CLI command describe-time-sources.

# Configuring and using the Snowball Edge Client

The Snowball Edge Client is a command-line interface (CLI) tool from Amazon that you can use to work with a Snowball Edge or a cluster of Snowball Edge. You can use the client to unlock a Snowball Edge or cluster of devices, set up Snowball Edge, start and stop services on devices, and transfer data to or from devices. The Snowball Edge client is compatible with computers running on Linux, macOS, and Windows operating systems.

# **Topics**

- Downloading and installing the Snowball Edge Client
- Configuring a profile for the Snowball Edge Client
- Finding Snowball Edge client version
- Getting credentials for a Snowball Edge
- Starting a service on a Snowball Edge
- Stopping a service on a Snowball Edge
- Viewing and downloading logs from Snowball Edge
- Viewing status of a Snowball Edge
- Vieiwing status of services running on Snowball Edge
- Viewing status of features of Snowball Edge
- Setting time servers for Snowball Edge
- Getting a QR code to validate Snowball Edge NFC tags
- **Updating MTU size**

# Downloading and installing the Snowball Edge Client

Install and configure the client according to the instructions below.

#### Linux



# Note

The Snowball Edge client is only supported on 64-bit Linux distributions.

- Extract the snowball-client-linux.tar.gz file. It creates the /snowball-client-linux-build\_number/bin folder structure and extracts the files there.
- 2. Run the following commands to configure the folders.

```
chmod u+x snowball-client-linux-build_number/bin/snowballEdge

chmod u+x snowball-client-linux-build_number/jre/bin/java
```

3. Add /snowball-client-linux-build\_number/bin to your operating system's \$PATH environment variable to run Snowball Edge Client commands from any directory. For more information, see the documentation for your device's operating system or your shell.

#### macOS

- 1. Extract the snowball-client-mac.tar.gz file. It creates the /snowball-client-linux-build\_number/bin folder structure and extracts the files there.
- 2. Run the following commands to configure the folders.

```
chmod u+x snowball-client-mac-build_number/bin/snowballEdge

chmod u+x snowball-client-mac-build_number/jre/bin/java
```

3. Add /snowball-client-mac-build\_number/bin to your operating system's \$PATH environment variable to run Snowball Edge Client commands from any directory. For more information, see the documentation for your device's operating system or your shell.

#### Windows

The client is packaged as Microsoft Software Installer (MSI) file. Open the file and follow the prompts in the installation wizard. When the client has been installed, you can run it from any directory without any additional preparation.

# Configuring a profile for the Snowball Edge Client

Every time you run a command for the Snowball Edge Client, you provide your manifest file, unlock code, and the IP address of the Snowball Edge. Instead of providing these each time you run a command, you can use the configure command to store the path to the manifest file, the 29-character unlock code, and the endpoint (the IP address of the Snowball Edge) as a profile. After configuration, you can use Snowball Edge Client commands without having to manually enter these values for each command by including the profile name with the command. After you configure the Snowball Edge Client, the information is saved in a plaintext JSON format to home directory/.aws/snowball/config/snowball-edge.config. Make sure your environment is configured to allow you to create this file.

# Important

Anyone who can access the configuration file can access the data on your Snowball Edge devices or clusters. Managing local access control for this file is one of your administrative responsibilities.

You can also use Amazon OpsHub to create a profile. Profiles created in Amazon OpsHub are available to use with the Snowball Edge Client and profiles created in Amazon OpsHub are available to use with the Snowball Edge Client. For more information, see Managing profiles.

# To create a profile

Enter the command in the command line interface for your operating system. The value of the profile-name parameter is the name of the profile. You will provide it in the future when running Snowball Edge Client commands.

snowballEdge configure --profile profile-name

The Snowball Edge Client will prompt you for each parameter. When prompted, enter the 2. information for your environment and the Snowball Edge.



#### (i) Note

The value of the endpoint parameter is the IP address of the Snowball Edge, prefaced by https://. You can locate the IP address for the Snowball Edge device on the LCD screen on the front of the device.

# Example output of configure command

```
Configuration will stored at home directory\.aws\snowball\config\snowball-
edge.config
Snowball Edge Manifest Path: /Path/to/manifest/file
Unlock Code: 29 character unlock code
Default Endpoint: https://192.0.2.0
```

The Snowball Edge Client will check that the unlock code is correct for the manifest file. If they do not match, the command stops and does not create the profile. Check the unlock code and manifest file and run the command again.

To use the profile, include --profile profile-name after the command syntax.

If you are using multiple, standalone Snowball Edge, you can create a profile for each. To create another profile, run the configure command again, provide a different value for the --profile prameter, and provide the information for another device.

# Example Example snowball-edge.config file

This example shows a profile file containing three profiles—SnowDevice1profile, SnowDevice2profile, and SnowDevice3profile.

```
{"version":1, "profiles":
    "SnowDevice1profile":
        {
             "name": "SnowDevice1profile",
```

```
"jobId":"JID12345678-136f-45b4-b5c2-847db8adc749",
            "unlockCode": "db223-12345-dbe46-44557-c7cc2",
            "manifestPath":"C:\\Users\\Administrator\\.aws\\ops-hub\\manifest\
\JID12345678-136f-45b4-b5c2-847db8adc749_manifest-1670622989203.bin",
            "defaultEndpoint": "https://10.16.0.1",
            "isCluster":false,
            "deviceIps":[]
        },
    },
    "SnowDevice2profile":
        "name": "SnowDevice2profile",
        "jobId":"JID12345678-fdb2-436a-a4ff-7c510dec1bae",
        "unlockCode": "b893b-54321-0f65c-6c5e1-7f748",
        "manifestPath":"C:\\Users\\Administrator\\.aws\\ops-hub\\manifest\\JID12345678-
fdb2-436a-a4ff-7c510dec1bae_manifest-1670623746908.bin",
        "defaultEndpoint": "https://10.16.0.2",
        "isCluster":false,
        "deviceIps":[]
    },
    "SnowDevice3profile":
        "name": "SnowDevice3profile",
        "jobId":"JID12345678-c384-4a5e-becd-ab5f38888463",
        "unlockCode": "64c89-13524-4d054-13d93-c1b80",
        "manifestPath": "C:\\Users\\Administrator\\.aws\\ops-hub\\manifest\\JID12345678-
c384-4a5e-becd-ab5f38888463_manifest-1670623999136.bin",
        "defaultEndpoint": "https://10.16.0.3",
        "isCluster":false,
        "deviceIps":[]
    }
}
```

To edit or delete profiles, edit the profile file in a text editor.

# To edit a profile

In a text editor, open snowball-edge.config from home directory\.aws\snowball\config.



# Note

Make sure your environment is configured to allow you to access to read and write this file.

- Edit the file as necessary. For example, to change the IP address of the Snowball Edge associated with the profile, change the defaultEndpoint entry.
- Save and close the file.

# To delete a profile

Using a text editor, open snowball-edge.config from home directory\.aws\snowball \config.



#### Note

Make sure your environment is configured to allow you to access to read and write this file.

- Delete the line that contains the profile name, the curly brackets { } that follow the profile name, and the contents within the those brackets.
- Save and close the file.

# **Finding Snowball Edge client version**

Use the version command to see the version of the Snowball Edge command line interface (CLI) client.

# **Usage**

snowballEdge version

# **Example output**

```
Snowball Edge client version: 1.2.0 Build 661
```

# Getting credentials for a Snowball Edge

Using the snowballEdge list-access-keys and snowballEdge get-secret-access-key commands, you can get the credentials of the admin user of your Amazon Web Services account on Snowball Edge. You can use these credentials to create Amazon Identity and Access Management (IAM users) and roles, and to authenticate your requests when using the Amazon CLI or with an Amazon SDK. These credentials are only associated with an individual job for Snowball Edge, and you can use them only on the device or cluster of devices. The device or devices don't have any IAM permissions in the Amazon Web Services Cloud.



#### Note

If you're using the Amazon CLI with the Snowball Edge, you must use these credentials when you configure the CLI. For information about configuring credentials for the Amazon CLI, see Configuring the Amazon CLI in the Amazon Command Line Interface User Guide.

# **Usage (configured Snowball Edge client)**

```
snowballEdge list-access-keys
```

# **Example Output**

```
"AccessKeyIds" : [ "AKIAIOSFODNN7EXAMPLE" ]
}
```

# **Usage (configured Snowball Edge client)**

```
snowballEdge get-secret-access-key --access-key-id Access Key
```

# **Example Output**

```
[snowballEdge]
```

Getting credentials 152

```
aws_access_key_id = AKIAIOSFODNN7EXAMPLE
aws_secret_access_key = wJalrXUtnFEMI/K7MDENG/bPxRfiCYEXAMPLEKEY
```

# Starting a service on a Snowball Edge

Snowball Edge devices support multiple services. These include compute instances, the Network File System (NFS) interface, Snowball Edge Device Management, and Amazon IoT Greengrass. The Amazon S3 adapter service, Amazon EC2, Amazon STS, and IAM are started by default and can't be stopped or restarted. However, the NFS interface, Snowball Edge Device Management, and Amazon IoT Greengrass can be started by using its service ID with the start-service command. To get the service ID for each service, you can use the list-services command.

Before you run this command, create a single virtual network interface to bind to the service that you're starting. For more information, see Creating a Virtual Network Interface on a Snowball Edge.

```
snowballEdge start-service --service-id service_id --virtual-network-interface-
arns virtual-network-interface-arn --profile profile-name
```

# Example output of start-service command

Starting the Amazon service on your Snowball Edge. You can determine the status of the Amazon service using the describe-service command.

# Stopping a service on a Snowball Edge

To stop a service running on a Snowball Edge, you can use the stop-service command.

The Amazon S3 adapter, Amazon EC2, Amazon STS, and IAM services cannot be stopped.

#### Marning

Data loss can occur if the Network File System (NFS) service is stopped before remaining buffered data is written to the device. For more information on using the NFS service, see Managing the NFS interface on Snowball Edge.



#### Note

Stopping the Amazon S3 compatible storage on Snowball Edge service disables access to the data stored in your S3 buckets on the device or cluster. Access is restored when the Amazon S3 compatible storage on Snowball Edge is started again. For devices enabled with Amazon S3 compatible storage on Snowball Edge, it is recommended to start the service after the Snowball Edge device is powered up. See Setting up Snowball Edge in this guide.

```
snowballEdge stop-service --service-id service_id --profile profile-name
```

# Example output of stop-service command

Stopping the Amazon service on your Snowball Edge. You can determine the status of the Amazon service using the describe-service command.

# Viewing and downloading logs from Snowball Edge

When you transfer data between your on-premises data center and a Snowball Edge, logs are automatically generated. If you encounter unexpected errors during data transfer to the device, you can use the following commands to save a copy of the logs to your local server.

There are three commands related to logs:

 list-logs – Returns a list of logs in JSON format. This list reports the size of the logs in bytes, the ARN for the logs, the service ID for the logs, and the type of logs.

#### Usage

```
snowballEdge list-logs --profile profile-name
```

# Example output of the list-logs command

```
"LogArn" : "arn:aws:snowball-device:::log/s3-storage-JIEXAMPLE2f-1234-4953-a7c4-
dfEXAMPLE709",
```

```
"LogType" : "SUPPORT",
    "ServiceId" : "s3",
    "EstimatedSizeBytes" : 53132614
}, {
    "LogArn" : "arn:aws:snowball-device:::log/fileinterface-JIDEXAMPLEf-1234-4953-a7c4-dfEXAMPLE709",
    "LogType" : "CUSTOMER",
    "ServiceId" : "fileinterface",
    "EstimatedSizeBytes" : 4446
}]
}
```

 get-log – Downloads a copy of a specific log from the Snowball Edge to your device at a specified path. CUSTOMER logs are saved in the .zip format, and you can extract this type of log to view its contents. SUPPORT logs are encrypted and can only be read by Amazon Web Services Support. You have the option of specifying a name and a path for the log.

# Usage

```
snowballEdge get-log --log-arn arn:aws:snowball-device:::log/fileinterface-
JIDEXAMPLEf-1234-4953-a7c4-dfEXAMPLE709 --profile profile-name
```

# Example output of get-log command

```
Logs are being saved to download/path/snowball-edge-logs-1515EXAMPLE88.bin
```

 get-support-logs – Downloads a copy of all the SUPPORT type of logs from the Snowball Edge to your service at a specified path.

# Usage

```
snowballEdge get-support-logs --profile profile-name
```

# Example output of get-support-logs command

```
Logs are being saved to download/path/snowball-edge-logs-1515716135711.bin
```

# 

CUSTOMER type might contain sensitive information about your own data. To protect this potentially sensitive information, we strongly suggest that you delete these logs once you're done with them.

# Viewing status of a Snowball Edge

You can determine the status and general health of Snowball Edge with the describe-device command.

```
snowballEdge describe-device --profile profile-name
```

# Example output of describe-device command

```
"DeviceId": "JID-EXAMPLE12345-123-456-7-890",
"UnlockStatus": {
  "State": "UNLOCKED"
"ActiveNetworkInterface": {
  "IpAddress": "192.0.2.0"
},
"PhysicalNetworkInterfaces": [
    "PhysicalNetworkInterfaceId": "s.ni-EXAMPLEd9ecbf03e3",
    "PhysicalConnectorType": "RJ45",
    "IpAddressAssignment": "STATIC",
    "IpAddress": "0.0.0.0",
    "Netmask": "0.0.0.0",
    "DefaultGateway": "192.0.2.1",
    "MacAddress": "EX:AM:PL:E0:12:34"
  },
    "PhysicalNetworkInterfaceId": "s.ni-EXAMPLE4c3840068f",
    "PhysicalConnectorType": "QSFP",
    "IpAddressAssignment": "STATIC",
    "IpAddress": "0.0.0.0",
    "Netmask": "0.0.0.0",
```

Viewing device status 156

```
"DefaultGateway": "192.0.2.2",
    "MacAddress": "EX:AM:PL:E0:56:78"
},
{
    "PhysicalNetworkInterfaceId": "s.ni-EXAMPLE0a3a6499fd",
    "PhysicalConnectorType": "SFP_PLUS",
    "IpAddressAssignment": "DHCP",
    "IpAddress": "192.168.1.231",
    "Netmask": "255.255.255.0",
    "DefaultGateway": "192.0.2.3",
    "MacAddress": "EX:AM:PL:E0:90:12"
}
]
```

# Vieiwing status of services running on Snowball Edge

You can determine the status and general health of the services running on Snowball Edge devices with the describe-service command. You can first run the list-services command to see what services are running.

list-services

# Usage

```
snowballEdge list-services --profile profile-name
```

# Example output of list-services command

```
{
    "ServiceIds" : [ "greengrass", "fileinterface", "s3", "ec2", "s3-snow" ]
}
```

• describe-service

This command returns a status value for a service. It also includes state information that might be helpful in resolving issues you encounter with the service. Those states are as follows.

- ACTIVE The service is running and available for use.
- ACTIVATING The service is starting up, but it is not yet available for use.
- DEACTIVATING The service is in the process of shutting down.

- DEGRADED For Amazon S3 compatible storage on Snowball Edge, this status indicates one
  or more disks or devices in cluster is down. The Amazon S3 compatible storage on Snowball
  Edge service is running uninterrupted, but you should recover or replace the affected device
  before the cluster quorum is lost to minimize the risk of lost data. See <u>Clustering overview</u> in
  this guide.
- INACTIVE The service is not running and is not available for use.

# Usage

```
snowballEdge describe-service --service-id service-id --profile profile-name
```

# Example output of describe-service command

```
{
  "ServiceId": "s3",
  "Status": {
    "State": "ACTIVE"
  },
  "Storage": {
    "TotalSpaceBytes": 99608745492480,
    "FreeSpaceBytes": 99608744468480
  },
  "Endpoints": [
    {
      "Protocol": "http",
      "Port": 8080,
      "Host": "192.0.2.0"
    },
      "Protocol": "https",
      "Port": 8443,
      "Host": "192.0.2.0",
      "CertificateAssociation": {
        "CertificateArn": "arn:aws:snowball-
device:::certificate/6d955EXAMPLEdb71798146EXAMPLE3f0"
      }
    }
  ]
}
```

# Example Amazon S3 compatible storage on Snowball Edge service output

The describe-service command provides the following output for the <u>\$3-snow</u> value of the service-id parameter.

```
{
  "ServiceId" : "s3-snow",
  "Autostart" : false,
  "Status" : {
    "State" : "ACTIVE"
  },
  "ServiceCapacities" : [ {
    "Name" : "S3 Storage",
    "Unit" : "Byte",
    "Used": 640303104,
    "Available" : 219571981512
  } ],
  "Endpoints" : [ {
    "Protocol" : "https",
    "Port": 443,
    "Host": "10.0.2.123",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow bucket API endpoint",
    "DeviceId": "JID6ebd4c50-c3a1-4b16-b32c-b254f9b7f2dc",
    "Status" : {
      "State" : "ACTIVE"
  }, {
    "Protocol" : "https",
    "Port": 443,
    "Host": "10.0.3.202",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description" : "s3-snow object API endpoint",
    "DeviceId": "JID6ebd4c50-c3a1-4b16-b32c-b254f9b7f2dc",
    "Status" : {
```

```
"State" : "ACTIVE"
   }
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host": "10.0.3.63",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow bucket API endpoint",
    "DeviceId": "JID2a1e0deb-38b1-41f8-b904-a396c62da70d",
    "Status" : {
     "State" : "ACTIVE"
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host": "10.0.2.243",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow object API endpoint",
    "DeviceId" : "JID2a1e0deb-38b1-41f8-b904-a396c62da70d",
    "Status" : {
     "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host": "10.0.2.220",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description" : "s3-snow bucket API endpoint",
    "DeviceId": "JIDcc45fa8f-b994-4ada-a821-581bc35d8645",
    "Status" : {
     "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port" : 443,
```

```
"Host": "10.0.2.55",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow object API endpoint",
    "DeviceId": "JIDcc45fa8f-b994-4ada-a821-581bc35d8645",
    "Status" : {
     "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host": "10.0.3.213",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow bucket API endpoint",
    "DeviceId": "JID4ec68543-d974-465f-b81d-89832dd502db",
    "Status" : {
     "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host" : "10.0.3.144",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow object API endpoint",
    "DeviceId": "JID4ec68543-d974-465f-b81d-89832dd502db",
    "Status" : {
      "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port" : 443,
    "Host": "10.0.2.143",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
```

```
"Description": "s3-snow bucket API endpoint",
    "DeviceId": "JID6331b8b5-6c63-4e01-b3ca-eab48b5628d2",
    "Status" : {
      "State" : "ACTIVE"
    }
  }, {
    "Protocol" : "https",
    "Port": 443,
    "Host": "10.0.3.224",
    "CertificateAssociation" : {
      "CertificateArn" : "arn:aws:snowball-device:::certificate/
a65ba817f2c5ac9683fc3bc1ae123456"
    },
    "Description": "s3-snow object API endpoint",
    "DeviceId" : "JID6331b8b5-6c63-4e01-b3ca-eab48b5628d2",
    "Status" : {
      "State" : "ACTIVE"
  } ]
}
```

# Viewing status of features of Snowball Edge

To list the status of features available on a Snowball Edge use the describe-features command.

RemoteManagementState indicates the status of Snowball Edge Device Management and returns one of the following states:

- INSTALLED\_ONLY The feature is installed but not enabled.
- INSTALLED\_AUTOSTART The feature is enabled and the device will attempt to connect to its Amazon Web Services Region when it is powered on.
- NOT\_INSTALLED The device does not support the feature or was already in the field before its launch.

#### Usage

Viewing status of features 162

```
snowballEdge describe-features --profile profile-name
```

# Example output of describe-features command

```
{
   "RemoteManagementState" : String
}
```

# **Setting time servers for Snowball Edge**

You can use Snowball Edge Client commands to view the current Network Time Protocol (NTP) configuration and choose a server or peer to provide time. You can use the Snowball Edge Client commands when the device is in both locked and unlocked states.

It is your responsibility to provide a secure NTP time server. To set which NTP time servers the device connects to, use the update-time-servers command.

# **Checking time sources of Snowball Edge**

To see which NTP time sources the device are currently connected to, use the describe-time-sources command.

```
snowballEdge describe-time-sources --profile profile-name
```

# Example output of describe-time-sources command

```
{
   "Sources" : [ {
        "Address" : "172.31.2.71",
        "State" : "LOST",
        "Type" : "PEER",
        "Stratum" : 10
}, {
        "Address" : "172.31.3.203",
        "State" : "LOST",
        "Type" : "PEER",
```

Setting time servers 163

```
"Stratum" : 10
  }, {
    "Address" : "172.31.0.178",
    "State" : "LOST",
    "Type" : "PEER",
    "Stratum" : 10
  }, {
    "Address": "172.31.3.178",
    "State" : "LOST",
    "Type" : "PEER",
    "Stratum" : 10
  }, {
    "Address": "216.239.35.12",
    "State" : "CURRENT",
    "Type" : "SERVER",
    "Stratum" : 1
  } ]
}
```

The describe-time-sources command returns a list of time source states. Each time source state contains the Address, State, Type, and Stratum fields. Following are the meanings of these fields.

- Address The DNS name / IP address of the time source.
- State The current connection status between the device and that time source. There are five possible states:.
  - CURRENT The time source is currently being used to synchronize time.
  - COMBINED The time source is combined with the current source.
  - EXCLUDED The time source is excluded by the combining algorithm.
  - LOST The connection with the time source has been lost.
  - UNACCEPTABLE An invalid time source where the combining algorithm has deemed to be either a falseticker or has too much variability.
- Type An NTP time source can be either a server or a peer. Servers can be set by the updatetime-servers command. Peers can only be other Snowball Edge Edge devices in the cluster and are automatically set up when the cluster is associated.
- Stratum This field shows the stratum of the source. Stratum 1 indicates a source with a locally attached reference clock. A source that is synchronized to a stratum 1 source is at stratum 2. A source that is synchronized to a stratum 2 source is at stratum 3, and so on..

Checking time sources 164

An NTP time source can either be a server or a peer. A server can be set by the user with the update-time-servers command, whereas a peer could only be other Snowball Edge Edge devices in the cluster. In the example output, describe-time-sources is called on a Snowball Edge Edge that is in a cluster of 5. The output contains 4 peers and 1 server. The peers have a stratum of 10 while the server has a stratum of 1; therefore, the server is selected to be the current time source.

# **Updating time servers**

Use the update-time-servers command and the time server address to configure the Snowball Edge to use an NTP server or peer for NTP.

snowballEdge update-time-servers time-server-address --profile profile-name



# Note

The update-time-servers command will override the previous NTP time servers settings.

# Example output of update-time-servers command

Updating time servers now.

# Getting a QR code to validate Snowball Edge NFC tags

You can use this command to generate a device-specific QR code for use with the Amazon Snowball Edge Verification App. For more information about NFC validation, see Validating NFC Tags.

#### Usage

```
snowballEdge get-app-qr-code --output-file ~/downloads/snowball-qr-code.png --
profile profile-name
```

#### Example Output

QR code is saved to ~/downloads/snowball-gr-code.png

165 Updating time servers

# **Updating MTU size**

Use the update-mtu-size command to modify the size in bytes of the maximum transmission unit (MTU) of a physical interface of a Snowball Edge device. All virtual network interfaces and direct network interface associated with this physical network interface will be configured with the same MTU size.



#### Note

The minimum MTU size is 1500 bytes and the maximum size is 9216 bytes.

You can use the describe-device command to retrieve the physical network interface IDs and current MTU sizes of those interfaces. For more information, see Viewing status of a Snowball Edge.

You can use the descibe-direct-network-interface and describe-virtual-networkinterface commands to retrieve the current MTU sizes of those interfaces.

# **Usage**

```
snowballEdge update-mtu-size --physical-network-interface-id physical-network-
interface-id --mtu-size size-in-bytes --profile profile-name
```

# Example of update-mtu-size output

```
{
    "PhysicalNetworkInterface": {
        "PhysicalNetworkInterfaceId": "s.ni-8c1f891d7f5b87cfe",
        "PhysicalConnectorType": "SFP_PLUS",
        "IpAddressAssignment": "DHCP",
        "IpAddress": "192.0.2.0",
        "Netmask": "255.255.255.0",
        "DefaultGateway": "192.0.2.255",
        "MacAddress": "8A:2r:5G:9p:6Q:4s",
        "MtuSize": "5743"
    }
}
```

Updating MTU size 166

# Transferring files using the Amazon S3 adapter for data migration to or from Snowball Edge

Following is an overview of the Amazon S3 adapter, which you can use to transfer data programmatically to and from S3 buckets already on the Amazon Snowball Edge device using Amazon S3 REST API actions. This Amazon S3 REST API support is limited to a subset of actions. You can use this subset of actions with one of the Amazon SDKs to transfer data programmatically. You can also use the subset of supported Amazon Command Line Interface (Amazon CLI) commands for Amazon S3 to transfer data programmatically.

If your solution uses the Amazon SDK for Java version 1.11.0 or newer, you must use the following S3ClientOptions:

- disableChunkedEncoding() Indicates that chunked encoding is not supported with the interface.
- setPathStyleAccess(true) Configures the interface to use path-style access for all requests.

For more information, see Class S3ClientOptions.Builder in the Amazon AppStream SDK for Java.

#### 

We recommend that you use only one method at a time to read and write data to a local bucket on an Amazon Snowball Edge device. Using both the NFS interface and the Amazon S3 adapter on the same bucket at the same time can result in read/write conflicts. Amazon Snowball Edge quotas details the limits.

For Amazon services to work properly on a Snowball Edge, you must allow the ports for the services. For details, see Port requirements for Amazon services on a Snowball Edge.

# **Topics**

- Downloading and installing the Amazon CLI version 1.16.14 for use with the Amazon S3 adapter
- Using the Amazon CLI and API operations on Snowball Edge devices
- Getting and using local Amazon S3 credentials on Snowball Edge
- Unsupported Amazon S3 features for the Amazon S3 adapter on Snowball Edge

- Batching small files to improve data transfer performance to Snowball Edge
- Supported Amazon CLI commands for data transfer to or from Snowball Edge
- Supported Amazon S3 REST API actions on Snowball Edge for data transfer

# Downloading and installing the Amazon CLI version 1.16.14 for use with the Amazon S3 adapter

Currently, Snowball Edge devices support only version 1.16.14 and earlier of the Amazon CLI for use with the Amazon S3 adapter. Newer versions of the Amazon CLI are not compatible with the Amazon S3 adapter because they do not support all of the functionality of the S3 adapter.



### Note

If you are using Amazon S3 compatible storage on Snowball Edge, you can use the latest version of the Amazon CLI. To download and use the latest version, see Amazon Command Line Interface User Guide.

# Install the Amazon CLI on Linux operating systems

Run this chained command:

curl "https://s3.amazonaws.com/aws-cli/awscli-bundle-1.16.14.zip" -o "awsclibundle.zip";unzip awscli-bundle.zip;sudo ./awscli-bundle/install -i /usr/local/aws -b / usr/local/bin/aws;/usr/local/bin/aws --version;

# Install the Amazon CLI on Windows operating systems

Download and run the installer file for your operating system:

- 32-bit installer bundled with Python 2
- 32-bit installer bundled with Python 3
- 64-bit installer bundled with Python 2
- 64-bit installer bundled with Python 3

• Setup file including 32- and 64-bit installers that will automatically install the correct version

# Using the Amazon CLI and API operations on Snowball Edge devices

When using the Amazon CLI or API operations to issue IAM, Amazon S3, and Amazon EC2 commands on Snowball Edge, you must specify the Region as "snow." You can do this using Amazon configure or within the command itself, as in the following examples.

```
aws configure --profile abc
Amazon Access Key ID [None]: AKIAIOSFODNN7EXAMPLE
Amazon Secret Access Key [None]: 1234567
Default region name [None]: snow
Default output format [None]: json
```

Or

```
aws s3 ls --endpoint http://192.0.2.0:8080 --region snow --profile snowballEdge
```

# Authorization with the Amazon S3 API interface for Amazon Snowball Edge

When you use the Amazon S3 adapter, every interaction is signed with the Amazon Signature Version 4 algorithm by default. This authorization is used only to verify the data traveling from its source to the interface. All encryption and decryption happens on the device. Unencrypted data is never stored on the device.

When using the interface, keep the following in mind:

To get the local Amazon S3 credentials to sign your requests to the Amazon Snowball Edge device, run the snowballEdge list-access-keys and snowballEdge get-secret-access-keys Snowball Edge client commands. For more information, see <u>Configuring and using the Snowball Edge Client</u>. These local Amazon S3 credentials include a pair of keys: an access key and a secret key. These keys are only valid for the devices associated with your job. They can't be used in the Amazon Web Services Cloud because they have no Amazon Identity and Access Management (IAM) counterpart.

• The encryption key is not changed by what Amazon Web Services credentials you use. Signing with the Signature Version 4 algorithm is only used to verify the data traveling from its source to the interface. Thus, this signing never factors into the encryption keys used to encrypt your data on the Snowball.

# Getting and using local Amazon S3 credentials on Snowball Edge

Every interaction with a Snowball Edge is signed with the Amazon Signature Version 4 algorithm. For more information about the algorithm, see <u>Signature Version 4 Signing Process</u> in the *Amazon Web Services General Reference*.

You can get the local Amazon S3 credentials to sign your requests to the Snowball Edge client Edge device by running the snowballEdge list-access-keys and snowballEdge get-secret-access-key Snowball Edge client information, see Getting credentials for a Snowball Edge. These local Amazon S3 credentials include a pair of keys: an access key ID and a secret key. These credentials are only valid for the devices that are associated with your job. They can't be used in the Amazon Web Services Cloud because they have no IAM counterpart.

You can add these credentials to the Amazon Web Services credentials file on your server. The default credential profiles file is typically located at ~/.aws/credentials, but the location can vary per platform. This file is shared by many of the Amazon SDKs and by the Amazon CLI. You can save local credentials with a profile name as in the following example.

```
[snowballEdge]
aws_access_key_id = AKIAIOSFODNN7EXAMPLE
aws_secret_access_key = wJalrXUtnFEMI/K7MDENG/bPxRfiCYEXAMPLEKEY
```

# Configuring the Amazon CLI to use the S3 adapter on a Snowball Edge as the endpoint

When you use the Amazon CLI to issue a command to the Amazon Snowball Edge device, you specify that the endpoint is the Amazon S3 adapter. You have the choice of using the HTTPS endpoint, or an unsecured HTTP endpoint, as shown following.

#### **HTTPS** secured endpoint

aws s3 ls --endpoint https://192.0.2.0:8443 --ca-bundle path/to/certificate --profile snowballEdge

### **HTTP unsecured endpoint**

```
aws s3 ls --endpoint http://192.0.2.0:8080 --profile snowballEdge
```

If you use the HTTPS endpoint of 8443, your data is securely transferred from your server to the Snowball Edge. This encryption is ensured with a certificate that's generated by the Snowball Edge when it gets a new IP address. After you have your certificate, you can save it to a local cabundle.pem file. Then you can configure your Amazon CLI profile to include the path to your certificate, as described following.

#### To associate your certificate with the interface endpoint

- 1. Connect the Snowball Edge to power and the network, and turn it on.
- 2. After the device has finished booting up, make a note of its IP address on your local network.
- 3. From a terminal on your network, make sure you can ping the Snowball Edge.
- 4. Run the snowballEdge get-certificate command in your terminal. For more information on this command, see Managing public key certificates on Snowball Edge.
- 5. Save the output of the snowballEdge get-certificate command to a file, for example ca-bundle.pem.
- 6. Run the following command from your terminal.

```
aws configure set profile.snowballEdge.ca_bundle /path/to/ca-bundle.pem
```

After you complete the procedure, you can run CLI commands with these local credentials, your certificate, and your specified endpoint, as in the following example.

```
aws s3 ls --endpoint https://192.0.2.0:8443 --profile snowballEdge
```

# Unsupported Amazon S3 features for the Amazon S3 adapter on Snowball Edge

Using the Amazon S3 adapter, you can programmatically transfer data to and from a Snowball Edge with Amazon S3 API actions. However, not all Amazon S3 transfer features and API actions are supported for use with a Snowball Edge device when using the Amazon S3 adapter. For example, the following features and actions are not supported for use with Snowball Edge:

- <u>TransferManager</u> This utility transfers files from a local environment to Amazon S3 with the SDK for Java. Consider using the supported API actions or Amazon CLI commands with the interface instead.
- GET Bucket (List Objects) Version 2 This implementation of the GET action returns some or all (up to 1,000) of the objects in a bucket. Consider using the GET Bucket (List Objects) Version 1 action or the ls Amazon CLI command.
- <u>ListBuckets</u> The ListBuckets with the object endpoint is not supported. The following command does not work with Amazon S3 compatible storage on Snowball Edge:

```
aws s3 ls --endpoint <a href="https://192.0.2.0">https://192.0.2.0</a> --profile <a href="profile">profile</a>
```

# Batching small files to improve data transfer performance to Snowball Edge

Each copy operation has some overhead because of encryption. To speed up the process of transferring small files to your Amazon Snowball Edge device, you can batch them together in a single archive. When you batch files together, they can be auto-extracted when they are imported into Amazon S3, if they were batched in one of the supported archive formats.

Typically, files that are 1 MB or smaller should be included in batches. There's no hard limit on the number of files you can have in a batch, though we recommend that you limit your batches to about 10,000 files. Having more than 100,000 files in a batch can affect how quickly those files import into Amazon S3 after you return the device. We recommend that the total size of each batch be no larger than 100 GB.

Batching files is a manual process, which you manage. After you batch your files, transfer them to a Snowball Edge device using the Amazon CLI cp command with the --metadata snowballauto-extract=true option. Specifying snowball-auto-extract=true automatically extracts the contents of the archived files when the data is imported into Amazon S3, so long as the size of the batched file is no larger than 100 GB.



#### Note

Any batches larger than 100 GB are not extracted when they are imported into Amazon S3.

#### To batch small files

- Decide on what format you want to batch your small files in. The auto-extract feature supports the TAR, ZIP, and tar.gz formats.
- Identify which small files you want to batch together, including their size and the total number of files that you want to batch together.
- Batch your files on the command line as shown in the following examples. 3.
  - For Linux, you can batch the files in the same command line used to transfer your files to the device.

```
tar -cf - /Logs/April | aws s3 cp - s3://amzn-s3-demo-bucket/batch01.tar --
metadata snowball-auto-extract=true --endpoint http://192.0.2.0:8080
```



### Note

Alternatively, you can use the archive utility of your choice to batch the files into one or more large archives. However, this approach requires extra local storage to save the archives before you transfer them to the Snowball Edge.

• For Windows, use the following example command to batch the files when all files are in the same directory from which the command is run:

```
7z a -tzip -so "test" | aws s3 cp - s3://amzn-s3-demo-bucket/batch01.zip --
metadata snowball-auto-extract=true --endpoint http://192.0.2.0:8080
```

Batching small files 173

To batch files from a different directory from which the command is run, use the following example command:

```
7z a -tzip -so "test" "c:\temp" | aws s3 cp - s3://amzn-s3-demo-bucket/
batch01.zip --metadata snowball-auto-extract=true --endpoint http://10.x.x.x:8080
```

#### Note

For Microsoft Windows 2016, tar is not available, but you can download it from the Tar for Windows website.

You can download 7 ZIP from the 7ZIP website.

- Repeat until you've archived all the small files that you want to transfer to Amazon S3 using a 4. Snowball Edge.
- Transfer the archived files to the Snowball. If you want the data to be auto-extracted, and you used one of the supported archive formats mentioned previously in step 1, use the Amazon CLI cp command with the --metadata snowball-auto-extract=true option.



#### (i) Note

If there are non-archive files, don't use this command.

When creating the archive files, the extraction will maintain the current data structure. This means if you create an archive file that contains files and folders, Snowball Edge will recreate this during the ingestion to Amazon S3 process.

The archive file will be extracted in the same directory it is stored in and the folder structures will be built out accordingly. Keep in mind that when copying archive files, it is important to set the flag --metadata snowball-auto-extract=true. Otherwise, Snowball Edge will not extract the data when it's imported into Amazon S3.

Using the example in step 3, if you have the folder structure of /Logs/April/ that contains files a.txt, b.txt and c.txt. If this archive file was placed in the root of /amzn-s3-demo-bucket/ then the data would look like the following after the extraction:

```
/amzn-s3-demo-bucket/Logs/April/a.txt
```

Batching small files 174

```
/amzn-s3-demo-bucket/Logs/April/b.txt
/amzn-s3-demo-bucket/Logs/April/c.txt
```

If the archive file was placed into /amzn-s3-demo-bucket/Test/, then the extraction would look as like the following:

```
/amzn-s3-demo-bucket/Test/Logs/April/a.txt
/amzn-s3-demo-bucket/Test/Logs/April/b.txt
/amzn-s3-demo-bucket/Test/Logs/April/c.txt
```

# Supported Amazon CLI commands for data transfer to or from **Snowball Edge**

Following, you can find information about how to specify the Amazon S3 adapter or Amazon S3 compatible storage on Snowball Edge as the endpoint for applicable Amazon Command Line Interface (Amazon CLI) commands. You can also find the list of Amazon CLI commands for Amazon S3 that are supported for transferring data to the Amazon Snowball Edge device with the adapter or Amazon S3 compatible storage on Snowball Edge.



### Note

For information about installing and setting up the Amazon CLI, including specifying what Regions you want to make Amazon CLI calls against, see Amazon Command Line Interface User Guide.

Currently, Snowball Edge devices support only version 1.16.14 and earlier of the Amazon CLI when using the Amazon S3 adapter. See Finding Snowball Edge client version. If you are using Amazon S3 compatible storage on Snowball Edge, you can use the lastest version of the Amazon CLI. To download and use the latest version, see Amazon Command Line Interface User Guide.



#### Note

Be sure to install version 2.6.5+ or 3.4+ of Python before you install version 1.16.14 of the Amazon CLI.

# Supported Amazon CLI commands for data transfer with Amazon S3 and Snowball Edge

Following is a description of the subset of Amazon CLI commands and options for Amazon S3 that the Amazon Snowball Edge device supports. If a command or option isn't listed, it's not supported. You can declare some unsupported options, like --sse or --storage-class, along with a command. However, these are ignored and have no impact on how data is imported.

- <u>cp</u> Copies a file or object to or from the Amazon Snowball Edge device. The following are options for this command:
  - --dryrun (Boolean) The operations that would be performed using the specified command are displayed without being run.
  - --quiet (Boolean) Operations performed by the specified command are not displayed.
  - --include (string) Don't exclude files or objects in the command that match the specified pattern. For details, see <u>Use of Exclude and Include Filters</u> in the *Amazon CLI Command Reference*.
  - --exclude (string) Exclude all files or objects from the command that matches the specified pattern.
  - --follow-symlinks | --no-follow-symlinks (Boolean) Symbolic links (symlinks) are followed only when uploading to Amazon S3 from the local file system. Amazon S3 doesn't support symbolic links, so the contents of the link target are uploaded under the name of the link. When neither option is specified, the default is to follow symlinks.
  - --only-show-errors (Boolean) Only errors and warnings are displayed. All other output is suppressed.
  - --recursive (Boolean) The command is performed on all files or objects under the specified directory or prefix.
  - --page-size (integer) The number of results to return in each response to a list operation.
     The default value is 1000 (the maximum allowed). Using a lower value might help if an operation times out.
  - --metadata (map) A map of metadata to store with the objects in Amazon S3. This map is applied to every object that is part of this request. In a sync, this functionality means that files that haven't changed don't receive the new metadata. When copying between two Amazon S3 locations, the metadata-directive argument defaults to REPLACE unless otherwise specified.

- <u>Is</u> Lists objects on the Amazon Snowball Edge device. The following are options for this command:
  - --human-readable (Boolean) File sizes are displayed in human-readable format.
  - --summarize (Boolean) Summary information is displayed. This information is the number of objects and their total size.
  - --recursive (Boolean) The command is performed on all files or objects under the specified directory or prefix.
  - --page-size (integer) The number of results to return in each response to a list operation.
     The default value is 1000 (the maximum allowed). Using a lower value might help if an operation times out.
- <u>rm</u> Deletes an object on the Amazon Snowball Edge device. The following are options for this command:
  - --dryrun (Boolean) The operations that would be performed using the specified command are displayed without being run.
  - --include (string) Don't exclude files or objects in the command that match the specified pattern. For details, see <u>Use of Exclude and Include Filters</u> in the *Amazon CLI Command Reference*.
  - --exclude (string) Exclude all files or objects from the command that matches the specified pattern.
  - --recursive (Boolean) The command is performed on all files or objects under the specified directory or prefix.
  - --page-size (integer) The number of results to return in each response to a list operation.
     The default value is 1000 (the maximum allowed). Using a lower value might help if an operation times out.
  - --only-show-errors (Boolean) Only errors and warnings are displayed. All other output is suppressed.
  - --quiet (Boolean) Operations performed by the specified command are not displayed.
- <u>sync</u> Syncs directories and prefixes. This command copies new and updated files from the source directory to the destination. This command only creates directories in the destination if they contain one or more files.

#### Important

Syncing from one directory to another directory on the same Snowball Edge isn't supported.

Syncing from one Amazon Snowball Edge device to another Amazon Snowball Edge device isn't supported.

You can only use this option to sync the contents between your on-premises data storage and a Snowball Edge.

- --dryrun (Boolean) The operations that would be performed using the specified command are displayed without being run.
- --quiet (Boolean) Operations performed by the specified command are not displayed.
- --include (string) Don't exclude files or objects in the command that match the specified pattern. For details, see Use of Exclude and Include Filters in the Amazon CLI Command Reference.
- --exclude (string) Exclude all files or objects from the command that matches the specified pattern.
- --follow-symlinks or --no-follow-symlinks (Boolean) Symbolic links (symlinks) are followed only when uploading to Amazon S3 from the local file system. Amazon S3 doesn't support symbolic links, so the contents of the link target are uploaded under the name of the link. When neither option is specified, the default is to follow symlinks.
- --only-show-errors (Boolean) Only errors and warnings are displayed. All other output is suppressed.
- --no-progress (Boolean) File transfer progress is not displayed. This option is only applied when the --quiet and --only-show-errors options are not provided.
- --page-size (integer) The number of results to return in each response to a list operation. The default value is 1000 (the maximum allowed). Using a lower value might help if an operation times out.
- --metadata (map) A map of metadata to store with the objects in Amazon S3. This map is applied to every object that is part of this request. In a sync, this functionality means that files that haven't changed don't receive the new metadata. When copying between two Amazon S3 locations, the metadata-directive argument defaults to REPLACE unless otherwise specified.

#### Important

Syncing from one directory to another directory on the same Snowball Edge isn't supported.

Syncing from one Amazon Snowball Edge device to another Amazon Snowball Edge device isn't supported.

You can only use this option to sync the contents between your on-premises data storage and a Snowball Edge.

- --size-only (Boolean) With this option, the size of each key is the only criterion used to decide whether to sync from source to destination.
- --exact-timestamps (Boolean) When syncing from Amazon S3 to local storage, samesized items are ignored only when the timestamps match exactly. The default behavior is to ignore same-sized items unless the local version is newer than the Amazon S3 version.
- --delete (Boolean) Files that exist in the destination but not in the source are deleted during sync.

You can work with files or folders with spaces in their names, such as my photo.jpg or My Documents. However, make sure that you handle the spaces properly in the Amazon CLI commands. For more information, see Specifying parameter values for the Amazon CLI in the Amazon Command Line Interface User Guide.

# Supported Amazon S3 REST API actions on Snowball Edge for data transfer

Following, you can find the list of Amazon S3 REST API actions that are supported for using the Amazon S3 adapter. The list includes links to information about how the API actions work with Amazon S3. The list also covers any differences in behavior between the Amazon S3 API action and the Amazon Snowball Edge device counterpart. All responses coming back from an Amazon Snowball Edge device declare Server as AWSSnowball, as in the following example.

```
HTTP/1.1 201 OK
```

x-amz-id-2: JuKZqmXuiwFeDQxhD7M8KtsKobSzWA1QEjLbTMTagkKdBX2z7I1/jGhDeJ3j6s80

x-amz-request-id: 32FE2CEB32F5EE25 Date: Fri, 08 2016 21:34:56 GMT

Server: AWSSnowball

Amazon S3 REST API calls require SigV4 signing. If you're using the Amazon CLI or an Amazon SDK to make these API calls, the SigV4 signing is handled for you. Otherwise, you need to implement your own SigV4 signing solution. For more information, see <a href="Authenticating requests">Authenticating requests</a> (Amazon Signature Version 4) in the Amazon Simple Storage Service User Guide.

- <u>GET Bucket (List Objects) version 1</u> Supported. However, in this implementation of the GET operation, the following is not supported:
  - Pagination
  - Markers
  - Delimiters
  - When the list is returned, the list is not sorted

Only version 1 is supported. GET Bucket (List Objects) version 2 is not supported.

- GET Service
- HEAD Bucket
- HEAD Object
- GET Object is a DOWNLOAD of an object from the Snow device's S3 bucket.
- <u>PUT Object</u> When an object is uploaded to an Amazon Snowball Edge device using PUT Object, an ETag is generated.

The ETag is a hash of the object. The ETag reflects changes only to the contents of an object, not its metadata. The ETag might or might not be an MD5 digest of the object data. For more information about ETags, see <a href="Common Response Headers">Common Response Headers</a> in the Amazon Simple Storage Service API Reference.

- DELETE Object
- <u>Initiate Multipart Upload</u> In this implementation, initiating a multipart upload request for an object already on the Amazon Snowball Edge device first deletes that object. It then copies it in parts to the Amazon Snowball Edge device.
- List Multipart Uploads
- Upload Part
- Complete Multipart Upload
- Abort Multipart Upload



# Note

Any Amazon S3 adapter REST API actions not listed here are not supported. Using any unsupported REST API actions with your Snowball Edge returns an error message saying that the action is not supported.

# Managing the NFS interface on Snowball Edge

Use the Network File System (NFS) interface to upload files to the Snowball Edge as if the device is local storage to your operating system. This allows for a more user-friendly approach to transferring data because you can use features of your operating system, like copying files, dragging and dropping them, or other graphical user interface features. Each S3 bucket on the device is available as an NFS interface endpoint and can be mounted to copy data to. The NFS interface is available for import jobs.

You can use the NFS interface if the Snowball Edge device was configured to include it when the job to order the device was created. If the device is not configured to include the NFS interface, use the S3 adapter or Amazon S3 compatible storage on Snowball Edge to transfer data. For more information about the S3 adapter, see <a href="Managing Amazon S3 adapter storage with Amazon OpsHub">Managon S3 adapter storage with Amazon OpsHub</a>. For more information about Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub.

When started, the NFS interface uses 1 GB of memory and 1 CPU. This may limit the number of other services running on the Snowball Edge or the number of EC2-compatible instances that can run.

Data transferred through the NFS interface is not encrypted in transit. When configuring the NFS interface, you can provide CIDR blocks and the Snowball Edge will restrict access to the NFS interface from client computers with addresses in those blocks.

Files on the device will be transferred to Amazon S3 when it is returned to Amazon. For more information, see Importing Jobs into Amazon S3.

For more information about using NFS with your computer operating system, see the documentation for your operating system.

Keep the following details in mind when using the NFS interface.

- The NFS interface provides a local bucket for data storage on the device. For import jobs, no data from the local bucket will be imported to Amazon S3.
- File names are object keys in your local S3 bucket on the Snowball Edge. The key name is a sequence of Unicode characters whose UTF-8 encoding is at most 1,024 bytes long. We recommend using NFSv4.1 where possible and encode file names with Unicode UTF-8 to ensure a successful data import. File names that are not encoded with UTF-8 might not be uploaded to

S3 or might be uploaded to S3 with a different file name depending on the NFS encoding you use.

- Ensure that the maximum length of your file path is less than 1024 characters. Snowball Edge do not support file paths that are greater that 1024 characters. Exceeding this file path length will result in file import errors.
- For more information, see Object keys in the Amazon Simple Storage Service User Guide.
- For NFS based transfers, standard POSIX style metadata will be added to your objects as they get imported to Amazon S3 from Snowball Edge. In addition, you will see meta-data "x-amz-meta-user-agent aws-datasync" as we currently use Amazon DataSync as part of the internal import mechanism to Amazon S3 for Snowball Edge import with NFS option.
- You can transfer up to 40M files using a single Snowball Edge device. If you require to transfer
  more than 40M files in a single job, please batch the files in order to reduce the file numbers per
  each transfer. Individual files can be of any size with a maximum file size of 5 TB for Snowball
  Edge devices with the enhanced NFS interface or the S3 interface.

You can also configure and manage the NFS interface with Amazon OpsHub, a GUI tool. For more information, see Managing the NFS interface.

# NFS configuration for Snowball Edge

The NFS interface is not running on the Snowball Edge device by default, so you need to start it to enable data transfer to the device. You can configure the NFS interface by providing the IP address of a Virtual Network Interface (VNI) running on the Snowball Edge and restricting access to your file share, if required. Before configuring the NFS interface, set up a virtual network interface (VNI) on your Snowball Edge. For more information, see Network Configuration for Compute Instances.

# **Configure Snowball Edge for the NFS interface**

Use the describe-service command to determine if the NFS interface is active.

snowballEdge describe-service --service-id nfs

The command will return the state of the NFS service, ACTIVE or INACTIVE.

```
{
    "ServiceId" : "nfs",
    "Status" : {
    "State" : "ACTIVE"
    }
}
```

If the value of the State name is ACTIVE, the NFS interface service is active and you can mount the Snowball Edge NFS volume. For more information, see

After the NFS interface is started, mount the endpoint as local storage on client computers.

The following are the default mount commands for Windows, Linux, and macOS operating systems.

· Windows:

```
mount -o nolock rsize=128 wsize=128 mtype=hard nfs-interface-ip-address:/
buckets/BucketName *
```

Linux:

```
mount -t nfs nfs-interface-ip-address:/buckets/BucketName mount_point
```

macOS:

```
mount -t nfs -o vers=3,rsize=131072,wsize=131072,nolocks,hard,retrans=2 nfs-
interface-ip-address:/buckets/$bucketname mount_point
```

. If the value is INACTIVE, you have to start the service.

# Starting the NFS service on the Snowball Edge

Start a virtual network interface (VNI), if necessary, then start the NFS service on the Snowball Edge. If necessary, when starting the NFS service, provide a block of allowed network addresses. If you don't provide any addresses, access to the NFS endpoints will be unrestricted.

1. Use the describe-virtual-network-interface command to see the VNIs available on the Snowball Edge.

```
snowballEdge describe-virtual-network-interfaces
```

If one or more VNIs are active on the Snowball Edge, the command returns the following.

```
snowballEdge describe-virtual-network-interfaces
Γ
 {
    "VirtualNetworkInterfaceArn" : "arn:aws:snowball-device:::interface/
s.ni-8EXAMPLE8EXAMPLE8",
    "PhysicalNetworkInterfaceId" : "s.ni-8EXAMPLEaEXAMPLEd",
    "IpAddressAssignment": "DHCP",
    "IpAddress" : "192.0.2.0",
    "Netmask": "255.255.255.0",
    "DefaultGateway" : "192.0.2.1",
    "MacAddress" : "EX:AM:PL:E1:23:45"
 },{
    "VirtualNetworkInterfaceArn" : "arn:aws:snowball-device:::interface/
s.ni-1EXAMPLE1EXAMPLE1",
    "PhysicalNetworkInterfaceId" : "s.ni-8EXAMPLEaEXAMPLEd",
    "IpAddressAssignment" : "DHCP",
    "IpAddress" : "192.0.2.2",
    "Netmask" : "255.255.255.0",
    "DefaultGateway" : "192.0.2.1",
    "MacAddress" : "12:34:5E:XA:MP:LE"
 }
]
```

Note the value of the VirtualNetworkInterfaceArn name of the VNI to use with the NFS interface.

- 2. If no VNIs are available, use the create-virtual-network-interface command to create a VNI for the NFS interface. For more information, see <a href="Setting up a Virtual Network Interface">Setting up a Virtual Network Interface</a> (VNI).
- 3. Use the start-service command to start the NFS service and associate it with the VNI. To restrict access to the NFS interface, include the service-configuration and AllowedHosts parameters in the command.

```
snowballEdge start-service --virtual-network-interface-arns arn-of-vni --service-id
nfs --service-configuration AllowedHosts=CIDR-address-range
```

4. Use the describe-service command to check the service status. It is running when the value of the State name is ACTIVE.

```
snowballEdge describe-service --service-id nfs
```

The command returns the service state, as well as the IP address and port number of the NFS endpoint and the CIDR ranges allowed to access the endpoint.

```
{
    "ServiceId" : "nfs",
    "Status" : {
        "State" : "ACTIVE"
    },
    "Endpoints" : [ {
        "Protocol" : "nfs",
        "Port" : 2049,
        "Host" : "192.0.2.0"
        } ],
        "ServiceConfiguration" : {
        "AllowedHosts" : [ "10.24.34.0/23", "198.51.100.0/24" ]
        }
    }
}
```

# Mounting NFS endpoints on client computers

After the NFS interface is started, mount the endpoint as local storage on client computers.

The following are the default mount commands for Windows, Linux, and macOS operating systems.

• Windows:

```
mount -o nolock rsize=128 wsize=128 mtype=hard nfs-interface-ip-address:/
buckets/BucketName *
```

• Linux:

```
mount -t nfs nfs-interface-ip-address:/buckets/BucketName mount_point
```

macOS:

```
mount -t nfs -o vers=3,rsize=131072,wsize=131072,nolocks,hard,retrans=2 nfs-
interface-ip-address:/buckets/$bucketname mount_point
```

# Stopping the NFS interface on Snowball Edge

When you are finished transferring files through the NFS interface and before powering off the Snowball Edge, use the stop-service command to stop the NFS service.

```
snowballEdge stop-service --service-id nfs
```

# Using Amazon EC2-compatible compute instances on Snowball Edge

You can run Amazon EC2-compatible compute instances hosted on a Snowball Edge with the sbe1, sbe-c, and sbe-g instance types. The sbe1 instance type works on devices with the Snowball Edge Storage Optimized option. The sbe-c instance type works on devices with the Snowball Edge Compute Optimized option. For a list of supported instance types, see <a href="Quotas for compute">Quotas for compute</a> instances on a Snowball Edge device.

All three compute instance types supported for use on Snowball Edge device options are unique to Snowball Edge devices. Like their cloud-based counterparts, these instances require Amazon Machine Images (AMIs) to launch. You choose the AMI to be that base image for an instance in the cloud, before you create your Snowball Edge job.

To use a compute instance on a Snowball Edge, create a job to order a Snowball Edge device and specify your AMIs. You can do this using the <u>Amazon Snow Family Management Console</u>, the Amazon CLI, or one of the Amazon SDKs. Typically, there are some housekeeping prerequisites that you must perform before creating your job, to use your instances.

After your device arrives, you can start managing your AMIs and instances. You can manage your compute instances on a Snowball Edge through an Amazon EC2-compatible endpoint. This type of endpoint supports many of the Amazon EC2-compatible CLI commands and actions for the Amazon SDKs. You can't use the Amazon Web Services Management Console on the Snowball Edge to manage your AMIs and compute instances.

When you're done with your device, return it to Amazon. If the device was used in an import job, the data transferred using the Amazon S3 adapter or the NFS interface is imported into Amazon S3. Otherwise, we perform a complete erasure of the device when it is returned to Amazon. This erasure follows the National Institute of Standards and Technology (NIST) 800-88 standards.

# ▲ Important

- Using encrypted AMIs on Snowball Edge Edge devices is not supported.
- Data in compute instances running on a Snowball Edge isn't imported into Amazon.

## **Topics**

- Difference between Amazon EC2 and Amazon EC2-compatible instances on Snowball Edge
- Pricing for Compute Instances on Snowball Edge
- Using an Amazon EC2-compatible AMI on Snowball Edge
- Importing a virtual machine image to a Snowball Edge device
- Using the Amazon CLI and API operations on Snowball Edge device
- Network configurations for compute instances on Snowball Edge
- Using SSH to connect to compute instances on a Snowball Edge
- Transferring data from EC2-compatible compute instances to S3 buckets on the same Snowball Edge
- Starting EC2-compatible instances automatically
- Using the Amazon EC2-compatible endpoint on a Snowball Edge
- Autostarting EC2-compatible instances with launch templates on a Snowball Edge
- <u>Using Instance Metadata Service for Snow with Amazon EC2-compatible instances on a Snowball Edge</u>
- Using block storage with Amazon EC2-compatible instances on Snowball Edge
- Controlling network traffic with security groups on Snowball Edge
- Supported EC2-compatible instance metadata and user data on Snowball Edge
- Stopping EC2-compatible instances running on Snowball Edge

# Difference between Amazon EC2 and Amazon EC2-compatible instances on Snowball Edge

Amazon Snowball Edge EC2-compatible instances allow customers to use and manage Amazon EC2-compatible instances using a subset of EC2 APIs and a subset of AMIs.

# **Pricing for Compute Instances on Snowball Edge**

There are additional costs associated with using compute instances. For more information, see <a href="Amazon Snowball Edge Pricing">Amazon Snowball Edge Pricing</a>.

# Using an Amazon EC2-compatible AMI on Snowball Edge

To use an Amazon Machine Image (AMI) on your Amazon Snowball Edge device, you must first add it to the device. You can add an AMI in the following ways:

- Upload the AMI when you order the device.
- Add the AMI when your device arrives at your site.

Amazon EC2 compute instances that come with your Snowball Edge are launched based on the Amazon EC2 AMIs that you add to your device. Amazon EC2-compatible AMIs support both Linux and Microsoft Windows operating systems.

#### Linux

The following Linux operating systems are supported:

Amazon Linux 2 for Snowball Edge



The latest version of this AMI will be provided at the time your Snowball Edge is being prepared to ship by Amazon. To determine the version of this AMI on the device when you receive it, see Determining the version of the Amazon Linux 2 AMI for Snowball Edge.

- CentOS 7 (x86\_64) with Updates HVM
- Ubuntu 16.04 LTS Xenial (HVM)

# Note

Ubuntu 16.04 LTS - Xenial (HVM) images are no longer supported in the Amazon Web Services Marketplace, but still supported for use on Snowball Edge devices through Amazon EC2 VM Import/Export and running locally in AMIs.

- Ubuntu 20.04 LTS Focal
- Ubuntu 22.04 LTS Jammy

As a best-practice for security, keep your Amazon Linux 2 AMIs up-to-date on Snowball Edge as new Amazon Linux 2 AMIs are released. See Updating your Amazon Linux 2 AMIs on Snowball Edge.

#### **Windows**

The following Windows operating systems are supported:

- Windows Server 2012 R2
- Windows Server 2016
- Windows Server 2019

You can add Windows AMIs to your device by importing your Windows virtual machine (VM) image into Amazon using VM Import/Export. Or, you can import the image into your device right after the device is deployed to your site. For more information, see Adding a Microsoft Windows AMI to a Snowball Edge.



#### Note

Windows AMIs that originated in Amazon can't be added to your device. AMIs imported locally must be in BIOS boot mode as UEFI is not supported.

Snowball Edge supports the Bring Your Own License (BYOL) model. For more information, see Adding a Microsoft Windows AMI to a Snowball Edge.



#### Note

Amazon Snowball Edge EC2-compatible instances allow customers to use and manage Amazon EC2-compatible instances using a subset of EC2 APIs and a subset of AMIs.

#### **Topics**

- Adding an AMI when creating a job to order a Snowball Edge
- Adding an AMI from Amazon Web Services Marketplace to a Snowball Edge
- Adding an AMI to a Snowball Edge after receiving the device
- Adding a Microsoft Windows AMI to a Snowball Edge

- Importing a VM Image to a Snowball Edge
- Exporting the latest Amazon Linux 2 AMI for a Snowball Edge

# Adding an AMI when creating a job to order a Snowball Edge

When you order your device, you can add AMIs to the device by choosing them in the **Compute** using **EC2** instances - optional section in the Amazon Snow Family Management Console. The **Compute using EC2** instances - optional lists all of the AMIs that can be loaded onto your device. The AMIs fall into the following categories:

- AMIs from Amazon Marketplace These are AMIs created from the list of supported AMIs.
   For information about creating an AMI from the supported AMIs from Amazon Marketplace, see
   Adding an AMI from Amazon Web Services Marketplace to a Snowball Edge.
- AMIs uploaded using VM Import/Export When you order your device, the AMIs that were uploaded using VM Import/Export are listed in the console. For more information, see <a href="Importing">Import/Export</a> in the VM Import/Export User Guide. For information about supported virtualization environments, see VM Import/Export Requirements.

# Adding an AMI from Amazon Web Services Marketplace to a Snowball Edge

You can add many AMIs from Amazon Web Services Marketplace to your Snowball Edge device by launching the Amazon Web Services Marketplace instance, creating an AMI from it, and configuring the AMI in the same region from which you'll order the Snow device. Then, you can choose to include the AMI on the device when you create a job to order the device. When choosing an AMI from the Marketplace, make sure it has a supported product code and platform.

## **Topics**

- Checking product codes and platform details of Amazon Web Services Marketplace AMIs for Snowball Edge
- Determining the version of the Amazon Linux 2 AMI for Snowball Edge
- Configure the AMI for the Snowball Edge device

Adding an AMI when ordering 192

# Checking product codes and platform details of Amazon Web Services Marketplace AMIs for Snowball Edge

Before you begin the process to add an AMI from Amazon Web Services Marketplace to your Snowball Edge device, ensure the product code and platform details of the AMI are supported in your Amazon Web Services Region.

- Open the Amazon EC2 console at https://console.amazonaws.cn/ec2/. 1.
- From the navigation bar, select the Region in which to launch your instances and from which 2. you will create the job to order the Snowball Edge device. You can select any Region that is available to you, regardless of your location.
- In the navigation pane, choose **AMIs**. 3.
- Use the filter and search options to scope the list of displayed AMIs to see only the AMIs that match your criteria. For example, AMIs provided by the Amazon Web Services Marketplace, choose **Public images**. Then use the search options to further scope the list of displayed AMIs:
  - (New console) Choose the Search bar and, from the menu, choose Owner alias, then the = operator, and then the value **amazon**.
  - (Old console) Choose the **Search** bar and, from the menu, choose **Owner** and then the value Amazon images.



#### Note

AMIs from Amazon Web Services Marketplace include aws-marketplace in the Source column.

- 5. In the AMI ID column, choose the AMI ID of the AMI.
- In the **Image summary** of the AMI, ensure the **Product codes** are supported by your Region. 6. For more information, see the table below.

## **Supported Amazon Web Services Marketplace AMI product codes**

AMI operating system	Product code
Ubuntu Server 14.04 LTS	b3dl4415quatdndl4qa6kcu45
CentOS 7 (x86_64)	aw0evgkw8e5c1q413zgy5pjce

AMI operating system	Product code
Ubuntu 16.04 LTS	csv6h7oyg29b7epjzg7qdr7no
Amazon Linux 2	avyfzznywektkgl5qv5f57ska

- 7. Then, also ensure the **Platform details** contains one of entries from the list below.
  - · Amazon Linux, Ubuntu, or Debian
  - Red Hat Linux bring-your-own-license
  - Amazon RDS for Oracle bring-your-own-license
  - Windows bring-your-own-license

# Determining the version of the Amazon Linux 2 AMI for Snowball Edge

Use the following procedure to determine the version of the Amazon Linux 2 AMI for Snowball Edge on the Snowball Edge. Install the latest version of the Amazon CLI before continuing. For more information, see <u>Install or update to the latest version of the Amazon CLI</u> in the Amazon Command Line Interface User Guide.

• Use the describe-images Amazon CLI command to see the description of the AMI. The version is contained in the description. Provide the public key certificate from the previous step. For more information, see describe-images in the Amazon CLI Command Reference.

```
aws ec2 describe-images --endpoint http://snow-device-ip:8008 --region snow
```

### Example of output of the describe-images command

```
{
                    "ProductCodeId": "avyfzznywektkgl5qv5f57ska",
                    "ProductCodeType": "marketplace"
                }
            ],
            "State": "AVAILABLE",
            "BlockDeviceMappings": [
                {
                    "DeviceName": "/dev/xvda",
                    "Ebs": {
                         "DeleteOnTermination": true,
                         "Iops": 0,
                         "SnapshotId": "s.snap-0efb49f2f726fde63",
                         "VolumeSize": 8,
                         "VolumeType": "sbp1"
                }
            ],
            "Description": "Snow Family Amazon Linux 2 AMI 2.0.20240131.0 x86_64
 HVM gp2",
            "EnaSupport": false,
            "Name": "amzn2-ami-snow-family-hvm-2.0.20240131.0-x86_64-gp2-
b7e7f8d2-1b9e-4774-a374-120e0cd85d5a",
            "RootDeviceName": "/dev/xvda"
        }
    ]
}
```

In this example, the version of the Amazon Linux 2 AMI for Snowball Edge is **2.0.20240131.0**. It is found in the value of the Description name.

# Configure the AMI for the Snowball Edge device

- 1. Open the Amazon EC2 console at <a href="https://console.amazonaws.cn/ec2/">https://console.amazonaws.cn/ec2/</a>.
- 2. Launch a new instance of a supported AMI in Amazon Web Services Marketplace.



#### Note

When you launch your instance, make sure that the storage size you assign to the instance is appropriate for your use case. In the Amazon EC2 console, you do this in the Add storage step.

Install and configure the applications that you want to run on the Snowball Edge, and make sure that they work as expected.

### Important

- Only single volume AMIs are supported.
- The EBS volume in your AMI should be 10 TB or less. We recommend that you provision the EBS volume size needed for the data in the AMI. This will help decrease the time it takes to export your AMI and load it into your device. You can resize or add more volumes to your instance after your device is deployed.
- The EBS snapshot in your AMI must not be encrypted.
- Make a copy of the PEM or PPK file that you used for the SSH key pair when you created this instance. Save this file to the server that you plan to use to communicate with the Snowball Edge device. Make a note of the path to this file because you will need it when you use SSH to connect to the EC2-compatible instance on your device.

## Important

If you don't follow this procedure, you can't connect to your instances with SSH when you receive your Snowball Edge device.

- Save the instance as an AMI. For more information, see Amazon EC2 User Guide for Linux Instances in the Amazon EC2 User Guide.
- Repeat steps 1–4 for each of the instances that you want to connect to using SSH. Be sure to make copies of each of the SSH key pairs, and keep track of the AMIs that they're associated with.
- Now, when you order your device, these AMIs are available to add to your device. 7.

# Adding an AMI to a Snowball Edge after receiving the device

When the device arrives on your site, you can add new AMIs to it. For instructions, see Importing a virtual machine image to a Snowball Edge device. Keep in mind that although all VMs are supported, only supported AMIs have been tested for full functionality.

#### Note

When you use VM Import/Export to add AMIs to your device or import a VM after your device is deployed, you can add VMs that use any operating system. However, only supported operating systems have been tested and validated on Snowball Edge. You are responsible for adhering to the terms and conditions of any operating system or software that is in the virtual image that you import onto your device.

#### Important

For Amazon services to function properly on a Snowball Edge, you must allow the ports for the services. For details, see Port requirements for Amazon services on a Snowball Edge.

# Adding a Microsoft Windows AMI to a Snowball Edge

For virtual machines (VMs) that use a supported Windows operating system, you can add the AMI by importing your Windows VM image into Amazon using VM Import/Export, or by importing it into your device directly after it is deployed to your site.

# **Bring Your Own License (BYOL)**

Snowball Edge supports importing Microsoft Windows AMIs onto your device with your own license. Bring Your Own License (BYOL) is the process of bringing an AMI that you own with its onpremises license to Amazon. Amazon provides both shared and dedicated deployment options for the BYOL option.

You can add your Windows VM image to your device by importing it into Amazon using VM Import/ Export or by importing it into your device directly after it is deployed to your site. You can't add Windows AMIs that originated in Amazon. Therefore, you must create and import your own Windows VM image and bring your own license if you want to use the AMI on your Snowball Edge

device. For more information about Windows licensing and BYOL, see Amazon Web Services and Microsoft: Frequently Asked Questions.

## Creating a Windows VM image to import into a Snowball Edge

To create a Windows VM image, you need a virtualization environment, such as VirtualBox, which is supported for the Windows and macOS operating systems. When you create a VM for Snow devices, we recommend that you allocate at least two cores with at least 4 GB of RAM. When the VM is up and running, you must install your operating system (Windows Server 2012, 2016, or 2019). To install the required drivers for the Snowball Edge device, follow the instructions in this section.

For a Windows AMI to run on a Snow device, you must add the VirtIO, FLR, NetVCM, Vioinput, Viorng, Vioscsi, Vioserial, and VioStor drivers. You can download a Microsoft Software Installer (virtio-win-quest-tools-installer) for installing these drivers on Windows images from the virtiowin-pkg-scripts repository on GitHub.

#### Note

If you plan to import your VM image directly to your deployed Snow device, the VM image file must be in the RAW format.

### To create a Windows image

- On your Microsoft Windows computer, choose **Start** and enter **devmgmt.msc** to open **Device** Manager.
- 2. In the main menu, choose **Actions**, and then choose **Add legacy hardware**.
- 3. In the wizard, choose **Next**.
- Choose Install the hardware that I manually select from a list (advanced), and choose Next. 4.
- 5. Choose **Show All Devices** and choose **Next**.
- 6. Choose **Have Disk**, open the **Copy manufacturer's files from** list, and browse to the ISO file.
- 7. In the ISO file, browse to the Driver\W2K8R2\amd64 directory, and then find the .INF file.
- Choose the .INF file, choose Open, and then choose OK. 8.
- 9. When you see the driver name, choose **Next**, and then choose **Next** two more times. Then choose Finish.

This installs a device using the new driver. The actual hardware doesn't exist, so you will see a yellow exclamation mark that indicates an issue on the device. You must fix this issue.

#### To fix the hardware issue

- 1. Open the context (right-click) menu for the device that has the exclamation mark.
- 2. Choose **Uninstall**, clear **Delete the driver software for this device**, and choose **OK**.

The driver is installed, and you are ready to launch the AMI on your device.

# Importing a VM Image to a Snowball Edge

After you prepare your VM image, you can use one of the options to import the image to your device.

- In the cloud using VM Import/Export When you import your VM image into Amazon and register it as an AMI, you can add it to your device when you place an order from the Amazon Snow Family Management Console. For more information, see <a href="Importing a VM as an Image Using VM Import/Export">Import/Export</a> in the VM Import/Export User Guide.
- Locally on your device that is deployed at your site You can import your VM image directly into your device using Amazon OpsHub or the Amazon Command Line Interface (Amazon CLI).

For information about using Amazon OpsHub, see <u>Using Amazon EC2-compatible compute</u> instances locally.

For information about using the Amazon CLI, see <u>Importing a virtual machine image to a Snowball Edge device.</u>

# Exporting the latest Amazon Linux 2 AMI for a Snowball Edge

To update your Amazon Linux 2 AMIs to the latest version, first export the latest Amazon Linux 2 VM image from Amazon Web Services Marketplace, then import that VM image into the Snow device.

 Use the ssm get-parameters Amazon CLI command to find the latest image ID of the Amazon Linux 2 AMI in the Amazon Web Services Marketplace. aws ssm get-parameters --names /aws/service/ami-amazon-linux-latest/amzn2-ami-hvm-x86\_64-gp2 --query 'Parameters[0].[Value]' --region your-region

The command returns the latest image ID of the AMI. For example, ami-0ccb473bada910e74.

- 2. Export the latest Amazon Linux 2 image. See Exporting a VM directly from an Amazon Machine Image (AMI) in the Amazon EC2 User Guide. Use the latest image ID of the Amazon Linux 2 AMI as the value of the image-id parameter of the ec2 export-image command.
- 3. Import the VM image into the Snow device using the Amazon CLI or Amazon OpsHub.
  - For information about using Amazon CLI, see <u>Importing a virtual machine image to a</u> Snowball Edge device.
  - For information about using Amazon OpsHub, see <u>Importing an image as an Amazon EC2-compatible AMI with Amazon OpsHub.</u>

# Importing a virtual machine image to a Snowball Edge device

You can use the Amazon CLI and the VM Import/Export service to import a virtual machine (VM) image to the Snowball Edge device as an Amazon Machine Image (AMI). After importing a VM image, register the image as an AMI and launch it as an Amazon EC2-compatible instance.

You can add AMIs from Amazon EC2 to the device when creating a job to order a Snowball Edge device. Use this procedure after you have received the Snowball Edge device. For more information, see Choosing your compute and storage options.

You can also use Amazon OpsHub to upload the VM image file. For more information, see Importing an image into your device as an Amazon EC2-compatible AMI in this guide.

### **Topics**

- Step 1: Prepare the VM image and upload it to the Snowball Edge device
- Step 2: Set up required permissions on the Snowball Edge
- Step 3: Import the VM image as a snapshot on the Snowball Edge
- Step 4: Register the snapshot as an AMI on the Snowball Edge

- Step 5: Launch an instance from the AMI on the Snowball Edge
- Additional AMI actions for a Snowball Edge

# Step 1: Prepare the VM image and upload it to the Snowball Edge device

Prepare the VM image by exporting a VM image from an Amazon EC2 AMI or instance in the Amazon Web Services Cloud using VM Import/Export or by generating the VM image locally using your choice of virtualization platform.

To export an Amazon EC2 instance as a VM image using VM Import/Export, see <a href="Exporting an instance as a VM using VM Import/Export">Export Import/Export</a> in the VM Import/Export User Guide. To export an Amazon EC2 AMI as a VM image using VM Import/Export, see <a href="Exporting a VM directly from an Amazon Machine Image">Exporting a VM directly from an Amazon Machine Image</a> (AMI) in the VM Import/Export User Guide.

If generating a VM image from your local environment, ensure the image is configured for use as an AMI on the Snowball Edge device. You may need to configure the following items, depending on your environment.

- Configure and update the operating system.
- Set a hostname.
- Ensure network time protocol (NTP) is configured.
- Include SSH public keys, if necessary. Make local copies of the key pairs. For more information, see Using SSH to Connect to Your Compute Instances on a Snowball Edge.
- Install and configure any software you will use on the Snowball Edge device.

# Note

Be aware of the following limitations when preparing a disk snapshot for a Snowball Edge device.

- Snowball Edge currently only support importing snapshots that are in the RAW image format.
- Snowball Edge currently only support importing snapshots with sizes from 1 GB to 1 TB.

# Uploading a VM image to an Amazon S3 bucket on the Snowball Edge device

After preparing a VM image, upload it to an S3 bucket on the Snowball Edge device or cluster. You can use the S3 adapter or Amazon S3 compatible storage on Snowball Edge to upload the snapshot.

#### To upload the virtual machine image using the S3 adapter

Use the cp command to copy the VM image file to a bucket on the device.

```
aws s3 cp image-path s3://S3-bucket-name --endpoint http://S3-object-API-
endpoint:443 --profile profile-name
```

For more information, see Supported Amazon CLI commands in this guide.

#### To upload the VM image using Amazon S3 compatible storage on Snowball Edge

Use the put-object command to copy the snapshot file to a bucket on the device.

```
aws s3api put-object --bucket bucket-name --key path-to-snapshot-file --
body snapshot-file --endpoint-url s3api-endpoint-ip --profile your-profile
```

For more information, see Working with S3 objects on a Snowball Edge device.

# Step 2: Set up required permissions on the Snowball Edge

For the import to be successful, you must set up permissions for VM Import/Export on the Snowball Edge device, Amazon EC2, and the user.



#### Note

The service roles and policies that provide these permissions are located on the Snowball Edge device.

# Permissions required for VM Import/Export on a Snowball Edge

Before you can start the import process, you must create an IAM role with a trust policy that allows VM Import/Export on the Snowball Edge device to assume the role. Additional permissions are given to the role to allow VM Import/Export on the device to access the image stored in the S3 bucket on the device.

### Create a trust policy json file

Following is an example trust policy required to be attached to the role so that VM Import/Export can access the snapshot that needs to be imported from the S3 bucket.

### Create a role with the trust policy json file

The role name can be vmimport. You can change it by using the --role-name option in the command:

```
aws iam create-role --role-name role-name --assume-role-policy-document file:///trust-policy-json-path --endpoint http://snowball-ip:6078 --region snow --profile profile-name
```

The following is an example output from the create-role command.

```
"Action": "sts: AssumeRole",
                "Effect": "Allow",
                "Principal":{
                   "Service":"vmie.amazonaws.com"
               }
            }
         ]
      },
      "MaxSessionDuration":3600,
      "RoleId": "AROACEMGEZDGNBVGY3TQOJQGEZAAAABQBB6NSGNAAAABPSVLTREPY3FPAFOLKJ3",
      "CreateDate": "2022-04-19T22:17:19.823Z",
      "RoleName": "vmimport",
      "Path":"/",
      "Arn": "arn:aws:iam::123456789012:role/vmimport"
   }
}
```

#### Create a policy for the role

The following example policy has the minimum required permissions to access Amazon S3. Change the Amazon S3 bucket name to the one which has your images. For a standalone Snowball Edge device, change <code>snow-id</code> to your job ID. For a cluster of devices, change <code>snow-id</code> to the cluster ID. You also can use prefixes to further narrow down the location where VM Import/Export can import snapshots from. Create a policy json file like this.

```
{
   "Version": "2012-10-17",
   "Statement":[
      {
         "Effect": "Allow",
         "Action":[
            "s3:GetBucketLocation",
            "s3:GetObject",
            "s3:ListBucket",
            "s3:GetMetadata"
         ],
         "Resource":[
            "arn:aws:s3:snow:account-id:snow/snow-id/bucket/import-snapshot-bucket-
name",
            "arn:aws:s3:snow:account-id:snow/snow-id/bucket/import-snapshot-bucket-
name/*"
            ]
```

```
}
]
}
```

#### Create a policy with the policy file:

```
aws iam create-policy --policy-name policy-name --policy-document file:///policy-json-
file-path --endpoint http://snowball-ip:6078 --region snow --profile profile-name
```

The following is an output example from the create-policy command.

```
{
    "Policy":{
        "PolicyName":"vmimport-resource-policy",
        "PolicyId":"ANPACEMGEZDGNBVGY3TQ0JQGEZAAAAB00EE3IIHAAAABWZJPI2VW4UUTFEDBC2R",
        "Arn":"arn:aws:iam::123456789012:policy/vmimport-resource-policy",
        "Path":"/",
        "DefaultVersionId":"v1",
        "AttachmentCount":0,
        "IsAttachable":true,
        "CreateDate":"2020-07-25T23:27:35.690000+00:00",
        "UpdateDate":"2020-07-25T23:27:35.690000+00:00"
}
```

### Attach the policy to the role

Attach a policy to the preceding role and grant permissions to access the required resources. This allows the local VM Import/Export service to download the snapshot from Amazon S3 on the device.

```
aws iam attach-role-policy --role-name role-name --policy-arn arn:aws:iam::123456789012:policy/policy-name --endpoint http://snowball-ip:6078 -- region snow --profile profile-name
```

## Permissions required by the caller on a Snowball Edge

In addition to the role for the Snowball Edge VM Import/Export to assume, you also must ensure that the user has the permissions that allow them to pass the role to VMIE. If you use the default root user to perform the import, the root user already has all the permissions required, so you can skip this step, and go to step 3.

Attach the following two IAM permissions to the user that is doing the import.

- pass-role
- get-role

#### Create a policy for the role

The following is an example policy that allows a user to perform the get-role and pass-role actions for the IAM role.

```
{
   "Version": "2012-10-17",
   "Statement":[
        {
            "Effect": "Allow",
            "Action": "iam:GetRole",
            "Resource":"*"
        },
            "Sid": "iamPassRole",
            "Effect": "Allow",
            "Action": "iam:PassRole",
            "Resource": "arn:aws:iam::*:role/snowball*",
            "Condition": {
                 "StringEquals": {
                     "iam:PassedToService": "importexport.amazonaws.com"
                }
            }
        }
   ]
}
```

### Create a policy with the policy file:

```
aws iam create-policy --policy-name policy-name --policy-document file:///policy-json-
file-path --endpoint http://snowball-ip:6078 --region snow --profile profile-name
```

The following is an output example from the create-policy command.

```
{
```

```
"Policy":{
    "PolicyName":"caller-policy",
    "PolicyId":"ANPACEMGEZDGNBVGY3TQOJQGEZAAAABO00TU0E3AAAAAAPPBEUM7Q7ARPUE53C6R",
    "Arn":"arn:aws:iam::123456789012:policy/caller-policy",
    "Path":"/",
    "DefaultVersionId":"v1",
    "AttachmentCount":0,
    "IsAttachable":true,
    "CreateDate":"2020-07-30T00:58:25.309000+00:00",
    "UpdateDate":"2020-07-30T00:58:25.309000+00:00"
}
```

After the policy has been generated, attach the policy to the IAM users that will call the Amazon EC2 API or CLI operation to import the snapshot.

```
aws iam attach-user-policy --user-name your-user-name --policy-arn
arn:aws:iam::123456789012:policy/policy-name --endpoint http://snowball-ip:6078 --
region snow --profile profile-name
```

### Permissions Required to call Amazon EC2 APIs on a Snowball Edge

To import a snapshot, the IAM user must have the ec2: ImportSnapshot permissions. If restricting access to the user is not required, you can use the ec2: \* permissions to grant full Amazon EC2 access. The following are the permissions that can be granted or restricted for Amazon EC2 on your device. Create a policy file with the content shown:

```
"Resource":"*"
}
]
}
```

#### Create a policy with the policy file:

```
aws iam create-policy --policy-name policy-name --policy-document file:///policy-json-
file-path --endpoint http://snowball-ip:6078 --region snow --profile profile-name
```

The following is an output example from the create-policy command.

After the policy has been generated, attach the policy to the IAM users that will call the Amazon EC2 API or CLI operation to import the snapshot.

```
aws iam attach-user-policy --user-name your-user-name --policy-arn
arn:aws:iam::123456789012:policy/policy-name --endpoint http://snowball-ip:6078 --
region snow --profile profile-name
```

## Step 3: Import the VM image as a snapshot on the Snowball Edge

The next step is to import the VM image as a snapshot on the device. The value of the S3Bucket parameter is the name of the bucket which contains the VM image. The value of the S3Key parameter is the path to the VM image file in this bucket.

```
aws ec2 import-snapshot --disk-container "Format=RAW,UserBucket={S3Bucket=bucket-
name,S3Key=image-file}" --endpoint http://snowball-ip:8008 --region snow --
profile profile-name
```

For more information, see import-snapshot in the Amazon CLI Command Reference.

This command doesn't support the following switches.

- [--client-data value]
- [--client-token value]
- [--dry-run]
- [--no-dry-run]
- [--encrypted]
- [--no-encrypted]
- [--kms-key-id value]
- [--tag-specifications value]

#### Example output of import-snapshot command



#### Note

Snowball Edge currently only allow one active import job to run at a time, per device. To start a new import task, either wait for the current task to finish, or choose another available node in a cluster. You can also choose to cancel the current import if you want. To prevent delays, don't reboot the Snowball Edge device while the import is in progress. If you reboot the device, the import will fail, and progress will be deleted when the device becomes accessible. To check the status of your snapshot import task status, use the following command:

```
aws ec2 describe-import-snapshot-tasks --import-task-ids id --endpoint
 http://snowball-ip:8008 --region snow --profile profile-name
```

## Step 4: Register the snapshot as an AMI on the Snowball Edge

When the snapshot import to the device is successful, you can register it using the registerimage command.



#### Note

You can only register an AMI when all of its snapshots are available.

For more information, see register-image in the Amazon CLI Command Reference.

#### Example of the register-image command

```
aws ec2 register-image \
--name ami-01 \
--description my-ami-01 \
--block-device-mappings "[{\"DeviceName\": \"/dev/sda1\",\"Ebs\":{\"Encrypted\":false,
\"DeleteOnTermination\":true,\"SnapshotId\":\"snapshot-id\",\"VolumeSize\":30}}]" \
--root-device-name /dev/sda1 \
--endpoint http://snowball-ip:8008 \
--region snow \
--profile profile-name
```

Following is an example of block device mapping JSON. For more information, see the <u>block-device-mapping</u> parameter of register-image in the Amazon CLI Command Reference.

#### Example of the register-image command

```
{
    "ImageId": "s.ami-8de47d2e397937318"
}
```

## Step 5: Launch an instance from the AMI on the Snowball Edge

To launch an instance, see run-instances in the Amazon CLI Command Reference.

The value of the image-id parameter is the value of the ImageId name as the output of the register-image command.

```
aws ec2 run-instances --image-id image-id --instance-type instance-type --endpoint
http://snowball-ip:8008 --region snow --profile profile-name
```

```
"InstanceId": "s.i-12345a73123456d1",
         "EnaSupport":false,
         "ImageId": "s.ami-1234567890abcdefg",
         "State":{
             "Code":0,
             "Name": "pending"
         },
         "EbsOptimized":false,
         "SecurityGroups":[
            {
                "GroupName": "default",
                "GroupId": "s.sg-1234567890abc"
            }
         ],
         "RootDeviceName":"/dev/sda1",
         "AmiLaunchIndex":0,
         "InstanceType": "sbe-c.large"
      }
   ],
   "ReservationId": "s.r-1234567890abc"
}
```

### Note

You can also use Amazon OpsHub to launch the instance. For more information, see Launching an Amazon EC2-compatible instance in this guide.

## Additional AMI actions for a Snowball Edge

You can use additional Amazon CLI commands to monitor snapshot import status, get details on snapshots that have been imported, canceling importing a snapshot, and deleting or deregistering snapshots after they have been imported.

## Monitoring snapshot import status on a Snowball Edge

To see the current state of the import progress, you can run the Amazon EC2 describe-import-snapshot-tasks command. This command supports pagination and filtering on the task-state.

#### Example of the describe-import-snapshot-tasks command

```
aws ec2 describe-import-snapshot-tasks --import-task-ids <a href="mailto:id">id</a> --endpoint http://snowball-ip:8008 --region snow --profile <a href="mailto:profile-name">profile-name</a>
```

#### Example of describe-import-snapshot-tasks command output

```
{
        "ImportSnapshotTasks": [
            {
                "ImportTaskId": "s.import-snap-8f6bfd7fc9ead9aca",
                "SnapshotTaskDetail": {
                    "Description": "Created by AWS-Snowball-VMImport service for
 s.import-snap-8f6bfd7fc9ead9aca",
                    "DiskImageSize": 8.0,
                    "Encrypted": false,
                    "Format": "RAW",
                    "Progress": "3",
                    "SnapshotId": "s.snap-848a22d7518ad442b",
                    "Status": "active",
                    "StatusMessage": "pending",
                    "UserBucket": {
                         "S3Bucket": "bucket1",
                         "S3Key": "image1"
                    }
                }
            }
        ]
 }
```

### Note

This command only shows output for tasks that have successfully completed or been marked as deleted within the last 7 days. Filtering only supports Name=task-state, Values=active | deleting | deleted | completed

This command doesn't support the following parameters.

- [--dry-run]
- [--no-dry-run]

### Canceling an import task on a Snowball Edge

To cancel an import task, run the cancel-import-task command.

#### Example of the cancel-import-task command

```
aws ec2 cancel-import-task --import-task-id import-task-id --endpoint http://snowball-
ip:8008 --region snow --profile profile-name
```

#### Example of cancel-import-task command output

```
{
    "ImportTaskId": "s.import-snap-8234ef2a01cc3b0c6",
    "PreviousState": "active",
    "State": "deleting"
}
```

#### Note

Only tasks that are not in a completed state can be canceled.

This command doesn't support the following parameters.

- [--dry-run]
- [--no-dry-run]

## **Describing snapshots on a Snowball Edge**

After a snapshot is imported, you can use this command to describe it. To filter the snapshots, you can pass in snapshot-ids with the snapshot ID from the previous import task response. This command supports pagination and filter on volume-id, status, and start-time.

#### Example of describe-snapshots command

```
aws ec2 describe-snapshots --snapshot-ids snapshot-id --endpoint http://snowball-
ip:8008 --region snow --profile profile-name
```

#### Example of describe-snapshots command output

```
{
    "Snapshots": [
            "Description": "Created by AWS-Snowball-VMImport service for s.import-
snap-8f6bfd7fc9ead9aca",
            "Encrypted": false,
            "OwnerId": "123456789012",
            "SnapshotId": "s.snap-848a22d7518ad442b",
            "StartTime": "2020-07-30T04:31:05.032000+00:00",
            "State": "completed",
            "VolumeSize": 8
        }
    ]
 }
```

This command doesn't support the following parameters.

- [--restorable-by-user-ids value]
- [--dry-run]
- [--no-dry-run]

## Deleting a snapshot from a Snowball Edge device

To remove snapshots that you own and you no longer need, you can use the delete-snapshot command.

#### Example of the delete-snapshot command

```
aws ec2 delete-snapshot -- snapshot-id snapshot-id -- endpoint http://snowball-ip:8008 --
region snow --profile profile-name
```

#### Note

Snowball Edge does not support deleting snapshots that are in a **PENDING** state or if it is designated as a root device for an AMI.

This command doesn't support the following parameters.

- [--dry-run]
- [--no-dry-run]

## Deregistering an AMI on a Snowball Edge

To deregister AMIs that you no longer need, you can run the deregister-image command. Deregistering an AMI that is in the **Pending** state is not currently supported.

#### Example of the deregister-image command

```
aws ec2 deregister-image --image-id image-id --endpoint http://snowball-ip:8008 --
region snow --profile profile-name
```

This command doesn't support the following parameters.

- [--dry-run]
- [--no-dry-run]

## Using the Amazon CLI and API operations on Snowball Edge device

When using the Amazon Command Line Interface (Amazon CLI) or API operations to issue IAM, Amazon S3 and Amazon EC2 commands on Snowball Edge, you must specify the region as "snow." You can do this using Amazon configure or within the command itself, as in the following examples.

```
aws configure --profile ProfileName
Amazon Access Key ID [None]: defgh
Amazon Secret Access Key [None]: 1234567
Default region name [None]: snow
Default output format [None]: json
```

Or

```
aws s3 ls --endpoint http://192.0.2.0:8080 --region snow --profile ProfileName
```

## Network configurations for compute instances on Snowball Edge

After you launch your compute instance on a Snowball Edge, you must provide it with an IP address by creating a network interface. Snowball Edges support two kinds of network interfaces, a virtual network interface and a direct network interface.

Virtual network interface (VNI) – A virtual network interface is the standard network interface for connecting to an EC2-compatible instance on your Snowball Edge. You must create a VNI for each of your EC2-compatible instances regardless of whether you also use a direct network interface or not. The traffic passing through a VNI is protected by the security groups that you set up. You can only associate VNIs with the physical network port you use to control your Snowball Edge.

#### Note

VNI will use the same physical interface (RJ45, SFP+, or QSFP) that is used to managed the Snowball Edge. Creating a VNI on a different physical interface than the one being used for device management could lead to unexpected results.

**Direct network interface (DNI)** – A direct network interface (DNI) is an advanced network feature that enables use cases like multicast streams, transitive routing, and load balancing. By providing instances with layer 2 network access without any intermediary translation or filtering, you can gain increased flexibility over the network configuration of your Snowball Edge and improved network performance. DNIs support VLAN tags and customizing the MAC address. Traffic on DNIs is not protected by security groups.

On Snowball Edge devices, DNIs can be associated with the RJ45, SFP, or QSFP ports. Each physical port supports a maximum of 63 DNIs. DNIs do not have to be associated to the same physical network port that you use to manage the Snowball Edge.



#### Note

Snowball Edge storage optimized (with EC2 compute functionality) devices don't support DNIs.

#### **Topics**

- Prerequisites for DNIs or VNIs on Snowball Edge
- Setting up a Virtual Network Interface (VNI) on a Snowball Edge
- Setting Up a Direct Network Interface (DNI) on a Snowball Edge

## Prerequisites for DNIs or VNIs on Snowball Edge

Before you configure a VNI or a DNI, be sure that you've done the following prerequisites.

- 1. Make sure there's power to your device and that one of your physical network interfaces, like the RJ45 port, is connected with an IP address.
- Get the IP address associated with the physical network interface that you're using on the Snowball Edge.
- 3. Configure the Snowball Edge client. For more information, see Configuring a profile for the Snowball Edge Client.
- 4. Configure the Amazon CLI. For more information, see <u>Getting started with the Amazon CLI</u> in the Amazon Command Line Interface User Guide.
- 5. Unlock the device.
  - Use Amazon OpsHub to unlock the device. For more information, see <u>Unlocking a Snowball</u> Edge with Amazon OpsHub.
  - Use the Snowball Edge Client to unlock the device. For more information, see <u>Unlocking the Snowball Edge</u>.
- 6. Launch an EC2-compatible instance on the device. You will associate the VNI with this instance.
- 7. Use the Snowball Edge Client to run the describe-device command. The output of the command will provide a list of physical network interface IDs. For more information, see Viewing status of a Snowball Edge.
- 8. Identify the ID for the physical network interface that you want to use, and make a note of it.

## Setting up a Virtual Network Interface (VNI) on a Snowball Edge

After you have identified the ID of the physical network interface, you can set up a virtual network interface (VNI) with that physical interface. Use the following procedure set up a VNI. Make sure that you perform the prerequisite tasks before you create a VNI.

DNI and VNI prerequisites 218

#### Create a VNI and associate an IP address

Use the Snowball Edge Client to run the create-virtual-network-interface command. The following examples show running this command with the two different IP address assignment methods, either DHCP or STATIC. The DHCP method uses Dynamic Host Configuration Protocol (DHCP).

```
snowballEdge create-virtual-network-interface \
--physical-network-interface-id s.ni-abcd1234 \
--ip-address-assignment DHCP \
--profile profile-name
       //OR//
snowballEdge create-virtual-network-interface \
--physical-network-interface-id s.ni-abcd1234 \
--ip-address-assignment STATIC \
--static-ip-address-configuration IpAddress=192.0.2.0, Netmask=255.255.0 \
--profile profile-name
```

The command returns a JSON structure that includes the IP address. Make a note of that IP address to use with the ec2 associate-address Amazon CLI command later in the process.

Anytime you need this IP address, you can use the Snowball Edge Client command describevirtual-network-interfaces Snowball Edge client command, or the Amazon CLI command aws ec2 describe-addresses to get it.

Use the Amazon CLI to associate the IP address with the EC2-compatible instance, replacing the red text with your values:

```
aws ec2 associate-address --public-ip 192.0.2.0 --instance-id s.i-01234567890123456
 --endpoint http://Snowball Edge physical IP address:8008
```

## Setting Up a Direct Network Interface (DNI) on a Snowball Edge



#### Note

The direct network interface feature is available on or after January 12, 2021 and is available in all Amazon Web Services Regions where Snowball Edges are available.

### Prerequisites for a DNI on a Snowball Edge

Before you set up a direct network interface (DNI), you must perform the tasks in the prerequisites section.

- 1. Perform the prerequisite tasks before setting up the DNI. For instructions, see Prerequisites for DNIs or VNIs on Snowball Edge.
- 2. Additionally, you must launch an instance on your device, create a VNI, and associate it with the instance. For instructions, see Setting up a Virtual Network Interface (VNI) on a Snowball Edge.



#### Note

If you added direct networking to your existing device by performing an in-the-field software update, you must restart the device twice to fully enable the feature.

#### Create a DNI and associate IP address

Create a direct network interface and attach it to the Amazon EC2-compatible instance by running the following command. You will need the MAC address of the device for the next step.

```
create-direct-network-interface [--endpoint endpoint] [--instance-id instanceId]
 [--mac macAddress]
                                [--physical-network-interface-
id physicalNetworkInterfaceId]
                                [--unlock-code unlockCode] [--vlan vlanId]
```

#### **OPTIONS**

- **--endpoint <endpoint>** The endpoint to send this request to. The endpoint for your devices will be a URL using the https scheme followed by an IP address. For example, if the IP address for your device is 123.0.1.2, the endpoint for your device would be https://123.0.1.2.
- **--instance-id <instanceId>** The EC2-compatible instance ID to attach the interface to (optional).
- **--mac <macAddress>** Sets the MAC address of the network interface (optional).

- --physical-network-interface-id <physicalNetworkInterfaceId> The ID for the physical network interface on which to create a new virtual network interface. You can determine the physical network interfaces available on your Snowball Edge using the describe-device command.
- **--vlan <vlanId>** Set the assigned VLAN for the interface (optional). When specified, all traffic sent from the interface is tagged with the specified VLAN ID. Incoming traffic is filtered for the specified VLAN ID, and has all VLAN tags stripped before being passed to the instance.
- 2. After you create a DNI and associate it with your EC2-compatible instance, you must make two configuration changes inside your Amazon EC2-compatible instance.
  - The first is to change ensure that packets meant for the VNI associated with the EC2-compatible instance are sent through eth0.
  - The second change configures your direct network interface to use either DCHP or static IP when booting.

The following are examples of shell scripts for Amazon Linux 2 and CentOS Linux that make these configuration changes.

#### Amazon Linux 2

```
# Mac address of the direct network interface.
# You got this when you created the direct network interface.
DNI_MAC=[MAC ADDRESS FROM CREATED DNI]
# Configure routing so that packets meant for the VNI always are sent through
 eth0.
PRIVATE_IP=$(curl -s http://169.254.169.254/latest/meta-data/local-ipv4)
PRIVATE_GATEWAY=$(ip route show to match 0/0 dev eth0 | awk '{print $3}')
ROUTE_TABLE=10001
echo "from $PRIVATE_IP table $ROUTE_TABLE" > /etc/sysconfig/network-scripts/
rule-eth0
echo "default via $PRIVATE_GATEWAY dev eth0 table $ROUTE_TABLE" > /etc/
sysconfig/network-scripts/route-eth0
echo "169.254.169.254 dev eth0" >> /etc/sysconfig/network-scripts/route-eth0
# Query the persistent DNI name, assigned by udev via ec2net helper.
    changable in /etc/udev/rules.d/70-persistent-net.rules
DNI=$(ip --oneline link | grep -i $DNI_MAC | awk -F ': ' '{ print $2 }')
```

```
# Configure DNI to use DHCP on boot.
cat << EOF > /etc/sysconfig/network-scripts/ifcfg-$DNI
DEVICE="$DNI"
NAME="$DNI"
HWADDR=$DNI_MAC
ONBOOT=yes
NOZEROCONF=yes
BOOTPROTO=dhcp
TYPE=Ethernet
MAINROUTETABLE=no
EOF

# Make all changes live.
systemctl restart network
```

#### **CentOS Linux**

```
# Mac address of the direct network interface. You got this when you created the
direct network interface.
DNI_MAC=[MAC ADDRESS FROM CREATED DNI]
# The name to use for the direct network interface. You can pick any name that
isn't already in use.
DNI=eth1
# Configure routing so that packets meant for the VNIC always are sent through
eth0
PRIVATE_IP=\frac{(curl -s http://169.254.169.254}{1atest/meta-data/local-ipv4}
PRIVATE_GATEWAY=$(ip route show to match 0/0 dev eth0 | awk '{print $3}')
ROUTE_TABLE=10001
echo from $PRIVATE_IP table $ROUTE_TABLE > /etc/sysconfig/network-scripts/rule-
eth0
echo default via $PRIVATE_GATEWAY dev eth0 table $ROUTE_TABLE > /etc/sysconfig/
network-scripts/route-eth0
# Configure your direct network interface to use DHCP on boot.
cat << EOF > /etc/sysconfig/network-scripts/ifcfg-$DNI
DEVICE="$DNI"
NAME="$DNI"
HWADDR="$DNI MAC"
ONBOOT=yes
NOZEROCONF=yes
```

```
BOOTPROTO=dhcp
TYPE=Ethernet
EOF

# Rename DNI device if needed.

CURRENT_DEVICE_NAME=$(LANG=C ip -o link | awk -F ': ' -vIGNORECASE=1 '!/link\/
ieee802\.11/ && /'"$DNI_MAC"'/ { print $2 }')
ip link set $CURRENT_DEVICE_NAME name $DNI

# Make all changes live.
systemctl restart network
```

## Using SSH to connect to compute instances on a Snowball Edge

To use Secure Shell (SSH) to connect to compute instances on a Snowball Edge, you have the following options for providing or creating an SSH key.

- You can provide the SSH key for the Amazon Machine Image (AMI) when you create a job to order a device. For more information, see <u>Creating a job to order a Snowball Edge</u>.
- You can provide the SSH key for the AMI when you create a virtual machine image to import to a Snowball Edge. For more information, see <u>Importing a virtual machine image to a Snowball Edge</u> <u>device</u>.
- You can create a key pair on the Snowball Edge and choose to launch an instance with that locally generated public key. For more information, see <a href="Create a key pair using Amazon EC2">Create a key pair using Amazon EC2</a> in the Amazon EC2 User Guide.

#### To connect to an instance through SSH

- 1. Make sure that your device is powered on, connected to the network, and unlocked. For more information, see Connecting a Snowball Edge to your local network.
- 2. Make sure that you have your network settings configured for your compute instances. For more information, see Network configurations for compute instances on Snowball Edge.
- 3. Check your notes to find the PEM or PPK key pair that you used for this specific instance. Make a copy of those files somewhere on your computer. Make a note of the path to the PEM file.
- 4. Connect to your instance through SSH as in the following example command. The IP address is the IP address of the virtual network interface (VNIC) that you set up in <a href="Network">Network</a> configurations for compute instances on Snowball Edge.

ssh -i path/to/PEM/key/file instance-user-name@192.0.2.0

For more information, see <u>Connecting to Your Linux Instance Using SSH</u> in the *Amazon EC2 User Guide*.

# Transferring data from EC2-compatible compute instances to S3 buckets on the same Snowball Edge

You can transfer data between compute instances and Amazon S3 buckets on the same Snowball Edge device. You do this by using the supported Amazon CLI commands and the appropriate endpoints. For example, assume that you want to move data from a directory in my sbe1.xlarge instance into the Amazon S3 bucket, amzn-s3-demo-bucket on the same device. Assume that you're using the Amazon S3 compatible storage on Snowball Edge endpoint https://S3-object-API-endpoint:443. You use the following procedure.

#### To transfer data between a compute instance and a bucket on the same Snowball Edge

- 1. Use SSH to connect to your compute instance.
- Download and install the Amazon CLI. If your instance doesn't already have the Amazon CLI, download and install it. For more information, see <u>Installing the Amazon Command Line</u> <u>Interface</u>.
- 3. Configure the Amazon CLI on your compute instance to work with the Amazon S3 endpoint on the Snowball Edge. For more information, see <u>Getting and using local Amazon S3 credentials</u> on Snowball Edge.
- 4. Use the supported Amazon S3 compatible storage on Snowball Edge commands to transfer data. For example:

aws s3 cp ~/june2018/results s3://amzn-s3-demo-bucket/june2018/results --recursive --endpoint https://S3-object-API-endpoint:443

## Starting EC2-compatible instances automatically

The Snowball Edge Client is a standalone command line interface (CLI) application that you can run in your environment. You can use it to perform some administrative tasks on your Snowball Edge device or cluster of devices. For more information about how to use the Snowball Edge client, including how to start and stop services with it, see <a href="Configuring and using the Snowball Edge">Configuring and using the Snowball Edge</a> Client.

Following, you can find information about the Snowball Edge client commands that are specific to compute instances, including examples of use.

For a list of Amazon EC2-compatible commands you can use on your Amazon Snowball Edge device, see Supported Amazon EC2-compatible Amazon CLI commands on a Snowball Edge.

## Creating an EC2-compatible launch configuration on a Snowball Edge

To automatically start Amazon EC2-compatible compute instances on your Amazon Snowball Edge device after it is unlocked, you can create a launch configuration. To do so, use the snowballEdge create-autostart-configuration command, as shown following.

#### Usage

```
snowballEdge create-autostart-configuration --physical-connector-type [SFP_PLUS or RJ45
  or QSFP] --ip-address-assignment [DHCP or STATIC] [--static-ip-address-configuration
  IpAddress=[IP address], NetMask=[Netmask]] --launch-template-id [--launch-template-version]
```

## Updating an EC2-compatible launch configuration on a Snowball Edge

To update an existing launch configuration on your Snowball Edge, use the snowballEdge update-autostart-configuration command. You can find its usage following. To enable or disable a launch configuration, specify the --enabled parameter.

### Usage

```
snowballEdge update-autostart-configuration --autostart-configuration-arn [--physical-
connector-type [SFP_PLUS or RJ45 or QSFP]] [--ip-address-assignment [DHCP or STATIC]]
  [--static-ip-address-configuration IpAddress=[IP address], NetMask=[Netmask]][--launch-
template-id] [--launch-template-version] [--enabled]
```

## Deleting an EC2-compatible launch configuration on a Snowball Edge

To delete a launch configuration that's no longer in use, use the snowballEdge deleteautostart-configuration command, as follows.

#### Usage

snowballEdge delete-autostart-configuration --autostart-configuration-arn

## Listing EC2-compatible launch configurations on a Snowball Edge

To list the launch configurations that you have created on your Snowball Edge, use the describeautostart-configurations command, as follows.

#### Usage

snowballEdge describe-autostart-configurations

## Creating a Virtual Network Interface on a Snowball Edge

To run a compute instance or start the NFS interface on a Snowball Edge, first create a Virtual Network Interface (VNI). Each Snowball Edge has three network interfaces (NICs), the physical network interface controllers for the device. These are the RJ45, SFP, and QSFP ports on the back of the device.

Each VNI is based on a physical one, and you can have any number of VNI s associated with each NIC. To create a virtual network interface, use the snowballEdge create-virtual-networkinterface command.



#### Note

The --static-ip-address-configuration parameter is valid only when using the STATIC option for the --ip-address-assignment parameter.

#### Usage

You can use this command in two ways: with the Snowball Edge client configured, or without the Snowball Edge client configured. The following usage example shows the method with the Snowball Edge client configured.

```
snowballEdge create-virtual-network-interface --ip-address-assignment [DHCP or STATIC]
  --physical-network-interface-id [physical network interface id] --static-ip-address-
configuration IpAddress=[IP address], NetMask=[Netmask]
```

The following usage example shows the method without the Snowball Edge client configured.

```
snowballEdge create-virtual-network-interface --endpoint https://[ip address]
  --manifest-file /path/to/manifest --unlock-code [unlock code] --ip-address-
assignment [DHCP or STATIC] --physical-network-interface-id [physical network interface
id] --static-ip-address-configuration IpAddress=[IP address], NetMask=[Netmask]
```

#### **Example Example: Creating VNICs (Using DHCP)**

```
snowballEdge create-virtual-network-interface --ip-address-assignment dhcp --physical-
network-interface-id s.ni-8EXAMPLEaEXAMPLEd
{
    "VirtualNetworkInterface" : {
        "VirtualNetworkInterfaceArn" : "arn:aws:snowball-device:::interface/
s.ni-8EXAMPLE8EXAMPLEf",
        "PhysicalNetworkInterfaceId" : "s.ni-8EXAMPLEaEXAMPLEd",
        "IpAddressAssignment" : "DHCP",
        "IpAddress" : "192.0.2.0",
        "Netmask" : "255.255.255.0",
        "DefaultGateway" : "192.0.2.1",
        "MacAddress" : "EX:AM:PL:E1:23:45",
        "MtuSize" : "1500"
    }
}
```

## **Describing Your Virtual Network Interfaces**

To describe the VNICs that you previously created on your device, use the snowballEdge describe-virtual-network-interfaces command. You can find its usage following.

#### Usage

You can use this command in two ways: with the Snowball Edge client configured, or without the Snowball Edge client configured. The following usage example shows the method with the Snowball Edge client configured.

```
snowballEdge describe-virtual-network-interfaces
```

The following usage example shows the method without the Snowball Edge client configured.

```
snowballEdge describe-virtual-network-interfaces --endpoint https://[ip address] --
manifest-file /path/to/manifest --unlock-code [unlock code]
```

#### **Example Example: Describing VNICs**

```
snowballEdge describe-virtual-network-interfaces
Γ
  {
    "VirtualNetworkInterfaceArn" : "arn:aws:snowball-device:::interface/
s.ni-8EXAMPLE8EXAMPLE8",
    "PhysicalNetworkInterfaceId" : "s.ni-8EXAMPLEaEXAMPLEd",
    "IpAddressAssignment" : "DHCP",
    "IpAddress" : "192.0.2.0",
    "Netmask": "255.255.255.0",
    "DefaultGateway" : "192.0.2.1",
    "MacAddress" : "EX:AM:PL:E1:23:45",
    "MtuSize" : "1500"
  },{
    "VirtualNetworkInterfaceArn" : "arn:aws:snowball-device:::interface/
s.ni-1EXAMPLE1EXAMPLE1",
    "PhysicalNetworkInterfaceId" : "s.ni-8EXAMPLEaEXAMPLEd",
    "IpAddressAssignment" : "DHCP",
    "IpAddress" : "192.0.2.2",
    "Netmask": "255.255.255.0",
    "DefaultGateway" : "192.0.2.1",
    "MacAddress" : "12:34:5E:XA:MP:LE",
    "MtuSize" : "1500"
  }
]
```

## Updating a Virtual Network Interface on a Snowball Edge

After creating a virtual network interface (VNI), you can update its configuration using the snowballEdge update-virtual-network-interface command. After providing the Amazon Resource Name (ARN) for a particular VNI, you provide values only for whatever elements you are updating.

#### **Usage**

You can use this command in two ways: with the Snowball Edge client configured, or without the Snowball Edge client configured. The following usage example shows the method with the Snowball Edge client configured.

```
snowballEdge update-virtual-network-interface --virtual-network-interface-arn [virtual
network-interface-arn] --ip-address-assignment [DHCP or STATIC] --physical-network-
interface-id [physical network interface id] --static-ip-address-configuration
IpAddress=[IP address], NetMask=[Netmask]
```

The following usage example shows the method without the Snowball Edge client configured.

```
snowballEdge update-virtual-network-interface --endpoint https://[ip address] --
manifest-file /path/to/manifest --unlock-code [unlock code] --virtual-network-
interface-arn [virtual network-interface-arn] --ip-address-assignment [DHCP or STATIC]
  --physical-network-interface-id [physical network interface id] --static-ip-address-
configuration IpAddress=[IP address], NetMask=[Netmask]
```

#### Example Example: Updating a VNIC (Using DHCP)

```
snowballEdge update-virtual-network-interface --virtual-network-interface-arn
arn:aws:snowball-device:::interface/s.ni-8EXAMPLEbEXAMPLEd --ip-address-assignment
dhcp
```

## Deleting a Virtual Network Interface on a Snowball Edge

To delete a virtual network interface (VNI), you can use the snowballEdge delete-virtual-network-interface command.

#### Usage

You can use this command in two ways: with the Snowball Edge client configured, or without the Snowball Edge client configured. The following usage example shows the method with the Snowball Edge client configured.

```
snowballEdge delete-virtual-network-interface --virtual-network-interface-arn [virtual
network-interface-arn]
```

The following usage example shows the method without the Snowball Edge client configured.

```
snowballEdge delete-virtual-network-interface --endpoint https://[ip address] --
manifest-file /path/to/manifest --unlock-code [unlock code] --virtual-network-
interface-arn [virtual network-interface-arn]
```

#### Example Example: Deleting a VNIC

```
snowballEdge delete-virtual-network-interface --virtual-network-interface-arn
arn:aws:snowball-device:::interface/s.ni-8EXAMPLEbEXAMPLEd
```

# Using the Amazon EC2-compatible endpoint on a Snowball Edge

Following, you can find an overview of the Amazon EC2-compatible endpoint. Using this endpoint, you can manage your Amazon Machine Images (AMIs) and compute instances programmatically using Amazon EC2-compatible API operations.

## Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a Snowball Edge

When you use the Amazon CLI to issue a command to the Amazon Snowball Edge device, you can specify that the endpoint is the Amazon EC2-compatible endpoint. You have the choice of using the HTTPS endpoint, or an unsecured HTTP endpoint, as shown following.

#### **HTTPS** secured endpoint

```
aws ec2 describe-instances --endpoint https://192.0.2.0:8243 --ca-bundle path/to/certificate
```

#### **HTTP unsecured endpoint**

```
aws ec2 describe-instances --endpoint http://192.0.2.0:8008
```

If you use the HTTPS endpoint of 8243, your data in transit is encrypted. This encryption is ensured with a certificate that's generated by the Snowball Edge when it is unlocked. After you have your certificate, you can save it to a local ca-bundle.pem file. Then you can configure your Amazon CLI profile to include the path to your certificate, as described following.

#### To associate your certificate with the Amazon EC2-compatible endpoint

- 1. Connect the Snowball Edge to power and network, and turn it on.
- 2. After the device has finished unlocking, make a note of its IP address on your local network.
- 3. From a terminal on your network, make sure you can ping the Snowball Edge.
- 4. Run the snowballEdge get-certificate command in your terminal. For more information on this command, see Managing public key certificates on Snowball Edge.
- 5. Save the output of the snowballEdge get-certificate command to a file, for example ca-bundle.pem.
- 6. Run the following command from your terminal.

aws configure set profile.snowballEdge.ca\_bundle /path/to/ca-bundle.pem

After you complete the procedure, you can run CLI commands with these local credentials, your certificate, and your specified endpoint.

## Supported Amazon EC2-compatible Amazon CLI commands on a Snowball Edge

You can manage your compute instances on a Snowball Edge device through an Amazon EC2-compatible endpoint. This type of endpoint supports many of the Amazon EC2 CLI commands and actions of the Amazon SDKs. For information about installing and setting up the Amazon CLI, including specifying which Amazon Web Services Regions you want to make Amazon CLI calls against, see the Amazon Command Line Interface User Guide.

## List of supported EC2-compatible Amazon CLI commands on a Snowball Edge

Following, you can find a description of the subset of Amazon CLI commands and options for Amazon EC2 that are supported on Snowball Edge devices. If a command or option isn't listed following, it's not supported. You can declare some unsupported options along with a command. However, these are ignored.

- <u>associate-address</u> Associates a virtual IP address with an instance for use on one of the three physical network interfaces on the device:
  - --instance-id The ID of a single sbe instance.
  - --public-ip The virtual IP address that you want to use to access your instance.

- <u>attach-volume</u> Attaches an Amazon EBS volume to a stopped or running instance on your device and exposes it to the instance with the specified device name.
  - --device value The device name.
  - --instance-id The ID of a target Amazon EC2-compatible instance.
  - --volume-id value The ID of the EBS volume.
- <u>authorize-security-group-egress</u> Adds one or more egress rules to a security group for use with
  a Snowball Edge device. Specifically, this action permits instances to send traffic to one or more
  destination IPv4 CIDR address ranges. For more information, see <u>Controlling network traffic with</u>
  security groups on Snowball Edge.
  - --group-id value The ID of the security group
  - [--ip-permissions value] One or more sets of IP permissions.
- <u>authorize-security-group-ingress</u> Adds one or more ingress rules to a security group. When
  calling authorize-security-group-ingress, you must specify a value either for groupname or group-id.
  - [--group-name value] The name of the security group.
  - [--group-id value] The ID of the security group
  - [--ip-permissions value] One or more sets of IP permissions.
  - [--protocol value] The IP protocol. Possible values are tcp, udp, and icmp. The --port argument is required unless the "all protocols" value is specified (-1).
  - [--port value] For TCP or UDP, the range of ports to allow. This value can be a single integer or a range (minimum–maximum).
    - For ICMP, a single integer or a range (type-code) in which type represents the ICMP type number and code represents the ICMP code number. A value of -1 indicates all ICMP codes for all ICMP types. A value of -1 just for type indicates all ICMP codes for the specified ICMP type.
  - [--cidr value] The CIDR IP range.
- <u>create-launch-template</u> Creates a launch template. A *launch template* contains the parameters
  to launch an instance. When you launch an instance using RunInstances, you can specify a
  launch template instead of providing the launch parameters in the request. You can create up to
  100 templates per device.
  - --launch-template-name string A name for the launch template.
  - --launch-template-data structure The information for the launch template. The following

- ImageId
- InstanceType
- SecurityGroupIds
- TagSpecifications
- UserData

#### JSON syntax:

```
{
    "ImageId":"string",
    "InstanceType":"sbe-c.large",
    "SecurityGroupIds":["string", ...],
    "TagSpecifications":[{"ResourceType":"instance","Tags":
[{"Key":"Name","Value":"Test"},
    {"Key":"Stack","Value":"Gamma"}]}],
    "UserData":"this is my user data"
}
```

- [--version-description string] A description for the first version of the launch template.
- --endpoint snowballEndpoint A value that enables you to manage your compute instances programmatically using Amazon EC2-compatible API operations. For more information, see <u>Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a</u> Snowball Edge.
- <u>create-launch-template-version</u> Creates a new version for a launch template. You can specify
  an existing version of a launch template from which to base the new version. Launch template
  versions are numbered in the order in which they are created. You can't specify, change, or
  replace the numbering of launch template versions. You can create up to 100 versions of each
  launch template.

Specify either the launch template ID or launch template name in the request.

- --launch-template-id string The ID of the launch template.
- --launch-template-name string A name for the launch template.
- --launch-template-data structure The information for the launch template. The following attributes are supported:
  - ImageId
  - InstanceType

- SecurityGroupIds
- TagSpecifications
- UserData

JSON syntax:

- [--source-version string] The version number of the launch template on which to base the new version. The new version inherits the same launch parameters as the source version, except for parameters that you specify in launch-template-data.
- [--version-description string] A description for the first version of the launch template.
- --endpoint snowballEndpoint A value that enables you to manage your compute instances programmatically using Amazon EC2-compatible API operations. For more information, see <u>Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a</u> Snowball Edge.
- <u>create-tags</u> Adds or overwrites one or more tags for the specified resource. Each resource can have a maximum of 50 tags. Each tag consists of a key and optional value. Tag keys must be unique for a resource. The following resources are supported:
  - AMI
  - Instance
  - Launch template
  - Security group
  - Key pair
- <u>create-security-group</u> Creates a security group on your Snowball Edge. You can create up to 50 security groups. When you create a security group, you specify a friendly name of your choice:
  - --group-name value The name of the security group.

- --description value A description of the security group. This is informational only. This value can be up to 255 characters in length.
- <u>create-volume</u> Creates an Amazon EBS volume that can be attached to an instance on your device.
  - [--size value] The size of the volume in GiBs, which can be from 1 GiB to 1 TB (1000 GiBs).
  - [--snapshot-id value] The snapshot from which to create the volume.
  - [--volume-type value] The volume type. If no value is specified, the default is sbg1. Possible values include the following:
    - · sbg1 for magnetic volumes
    - sbp1 for SSD volumes
  - [--tag-specification value] A list of tags to apply to the volume during creation.
- <u>delete-launch-template</u> Deletes a launch template. Deleting a launch template deletes all of its versions.

Specify either the launch template ID or launch template name in the request.

- --launch-template-id string The ID of the launch template.
- --launch-template-name string A name for the launch template.
- --endpoint snowballEndpoint A value that enables you to manage your compute
  instances programmatically using Amazon EC2-compatible API operations. For more
  information, see <a href="Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a Snowball Edge">Snowball Edge</a>.
- <u>delete-launch-template-version</u> Deletes one or more versions of a launch template. You can't
  delete the default version of a launch template; you must first assign a different version as
  the default. If the default version is the only version for the launch template, delete the entire
  launch template by using the delete-launch-template command.

Specify either the launch template ID or launch template name in the request.

- --launch-template-id string The ID of the launch template.
- --launch-template-name string A name for the launch template.
- --versions (list) "string" The version numbers of one or more launch template versions to delete.
- --endpoint snowballEndpoint A value that enables you to manage your compute instances programmatically using Amazon EC2-compatible API operations. For more

information, see Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a Snowball Edge.

• delete-security-group – Deletes a security group.

If you attempt to delete a security group that is associated with an instance, or is referenced by another security group, the operation fails with Dependency Violation.

- --group-name value The name of the security group.
- --description value A description of the security group. This is informational only. This value can be up to 255 characters in length.
- <u>delete-tags</u> Deletes the specified set of tags from the specified resource (AMI, compute instance, launch template, or security group).
- <u>delete-volume</u> Deletes the specified Amazon EBS volume. The volume must be in the available state (not attached to an instance).
  - --volume-id value The ID of the volume.
- <u>describe-addresses</u> Describes one or more of your virtual IP addresses associated with the same number of sbe instances on your device.
  - --public-ips One or more of the virtual IP addresses associated with your instances.
- <u>describe-images</u> Describes one or more of the images (AMIs) available to you. Images available to you are added to the Snowball Edge device during job creation.
  - --image-id The Snowball AMI ID of the AMI.
- <u>describe-instance-attribute</u> Describes the specified attribute of the specified instance. You can specify only one attribute at a time. The following attributes are supported:
  - instanceInitiatedShutdownBehavior
  - instanceType
  - userData
- <u>describe-instances</u> Describes one or more of your instances. The response returns any security
  groups that are assigned to the instances.
  - --instance-ids The IDs of one or more sbe instances that were stopped on the device.
  - --page-size The size of each page to get in the call. This value doesn't affect the number
    of items returned in the command's output. Setting a smaller page size results in more calls
    to the device, retrieving fewer items in each call. Doing this can help prevent the calls from
    timing out.

- --max-items The total number of items to return in the command's output. If the total number of items available is more than the value specified, NextToken is provided in the command's output. To resume pagination, provide the NextToken value in the startingtoken argument of a subsequent command.
- --starting-token A token to specify where to start paginating. This token is the NextToken value from a previously truncated response.
- <u>describe-instance-status</u> Describes the status of the specified instances or all of your instances.
   By default, only running instances are described, unless you specifically indicate to return the status of all instances. Instance status includes the following components:
  - **Status checks** Snow device performs status checks on running Amazon EC2-compatible instances to identify hardware and software issues.
  - **Instance state** You can manage your instances from the moment you launch them through their termination.

With this command following filters are supported.

• [--filters] (list)

The filters.

- instance-state-code The code for the instance state, as a 16-bit unsigned integer. The high byte is used for internal service reporting purposes and should be ignored. The low byte is set based on the state represented. The valid values are 0 (pending), 16 (running), 32 (shutting-down), 48 (terminated), 64 (stopping), and 80 (stopped).
- instance-state-name The state of the instance (pending | running | shutting-down | terminated | stopping | stopped ).
- instance-status.reachability Filters on instance status where the name is reachability (passed | failed | initializing | insufficient-data ).
- instance-status.status The status of the instance (ok | impaired | initializing | insufficient-data | not-applicable ).
- system-status.reachability Filters on system status where the name is reachability (passed | failed | initializing | insufficient-data ).
- system-status.status The system status of the instance (ok | impaired | initializing | insufficient-data | not-applicable ).
- JSON Syntax:

• [--instance-ids] (list)

The instance IDs.

Default: Describes all of your instances.

[--dry-run|--no-dry-run] (boolean)

Checks whether you have the required permissions for the action, without actually making the request, and provides an error response. If you have the required permissions, the error response is DryRunOperation.

Otherwise, it is UnauthorizedOperation.

• [--include-all-instances | --no-include-all-instances] (boolean)

When true, includes the health status for all instances. When false, includes the health status for running instances only.

Default: false

- [--page-size] (integer) The size of each page to get in the call. This value doesn't affect the number of items returned in the command's output. Setting a smaller page size results in more calls to the device, retrieving fewer items in each call. Doing this can help prevent the calls from timing out.
- [--max-items] (integer) The total number of items to return in the command's output. If the total number of items available is more than the value specified, NextToken is provided in the command's output. To resume pagination, provide the NextToken value in the starting-token argument of a subsequent command.
- [--starting-token] (string) A token to specify where to start paginating. This token is the NextToken value from a previously truncated response.

<u>describe-launch-templates</u> – Describes one or more launch templates. The describe-launch-templates command is a paginated operation. You can make multiple calls to retrieve the entire dataset of results.

Specify either the launch template IDs or launch template names in the request.

- --launch-template-ids (list) "string" A list of IDs of the launch templates.
- --launch-template-names (list) "string" A list of names for the launch templates.
- --page-size The size of each page to get in the call. This value doesn't affect the number
  of items returned in the command's output. Setting a smaller page size results in more calls
  to the device, retrieving fewer items in each call. Doing this can help prevent the calls from
  timing out.
- --max-items The total number of items to return in the command's output. If the total
  number of items available is more than the value specified, NextToken is provided in the
  command's output. To resume pagination, provide the NextToken value in the startingtoken argument of a subsequent command.
- --starting-token A token to specify where to start paginating. This token is the NextToken value from a previously truncated response.
- --endpoint snowballEndpoint A value that enables you to manage your compute
  instances programmatically using Amazon EC2-compatible API operations. For more
  information, see <a href="Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a Snowball Edge">Snowball Edge</a>.
- <u>describe-launch-template-versions</u> Describes one or more versions of a specified launch template. You can describe all versions, individual versions, or a range of versions. The describe-launch-template-versions command is a paginated operation. You can make multiple calls to retrieve the entire dataset of results.

Specify either the launch template IDs or launch template names in the request.

- --launch-template-id string The ID of the launch template.
- --launch-template-name string A name for the launch template.
- [--versions (list) "string" "string"] The version numbers of one or more launch template versions to delete.
- [--min-version string] The version number after which to describe launch template versions.

- [--max-version string] The version number up to which to describe launch template versions.
- --page-size The size of each page to get in the call. This value doesn't affect the number
  of items returned in the command's output. Setting a smaller page size results in more calls
  to the device, retrieving fewer items in each call. Doing this can help prevent the calls from
  timing out.
- --max-items The total number of items to return in the command's output. If the total number of items available is more than the value specified, NextToken is provided in the command's output. To resume pagination, provide the NextToken value in the startingtoken argument of a subsequent command.
- --starting-token A token to specify where to start paginating. This token is the NextToken value from a previously truncated response.
- --endpoint snowballEndpoint A value that enables you to manage your compute instances programmatically using Amazon EC2-compatible API operations. For more information, see <u>Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a</u> Snowball Edge.
- describe-security-groups Describes one or more of your security groups.

The describe-security-groups command is a paginated operation. You can issue multiple API calls to retrieve the entire dataset of results.

- [--group-name value] The name of the security group.
- [--group-id value] The ID of the security group.
- [--page-size value] The size of each page to get in the Amazon service call. This size doesn't affect the number of items returned in the command's output. Setting a smaller page size results in more calls to the Amazon service, retrieving fewer items in each call. This approach can help prevent the Amazon service calls from timing out. For usage examples, see <a href="Pagination">Pagination</a> in the Amazon Command Line Interface User Guide.
- [--max-items value] The total number of items to return in the command's output. If the total number of items available is more than the value specified, NextToken is provided in the command's output. To resume pagination, provide the NextToken value in the starting-token argument of a subsequent command. Don't use the NextToken response element directly outside of the Amazon CLI. For usage examples, see <a href="Pagination">Pagination</a> in the Amazon Command Line Interface User Guide.

- [--starting-token value] A token to specify where to start paginating. This token is the NextToken value from a previously truncated response. For usage examples, see <u>Pagination</u> in the *Amazon Command Line Interface User Guide*.
- <u>describe-tags</u> Describes one or more of the tags for specified resource (image, instance, or security group). With this command, the following filters are supported:
  - launch-template
  - resource-id
  - resource-type image or instance
  - key
  - value
- describe-volumes Describes the specified Amazon EBS volumes.
  - [--max-items value] The total number of items to return in the command's output. If the total number of items available is more than the value specified, NextToken is provided in the command's output. To resume pagination, provide the NextToken value in the starting-token argument of a subsequent command.
  - [--starting-token value] A token to specify where to start paginating. This token is the NextToken value from a previously truncated response.
  - [--volume-ids value] One or more volume IDs.
- detach-volume Detaches an Amazon EBS volume from a stopped or running instance.
  - [--device value] The device name.
  - [--instance-id] The ID of a target Amazon EC2 instance.
  - --volume-id value The ID of the volume.
- disassociate-address Disassociates a virtual IP address from the instance it's associated with.
  - --public-ip The virtual IP address that you want to disassociate from your instance.
- <u>get-launch-template-data</u> Retrieves the configuration data of the specified instance. You can use this data to create a launch template.
  - --instance-id The ID of a single sbe instance.
  - --endpoint snowballEndpoint A value that enables you to manage your compute
    instances programmatically using Amazon EC2-compatible API operations. For more
    information, see <a href="Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a Snowball Edge">Snowball Edge</a>.

• <u>modify-launch-template</u> – Modifies a launch template. You can specify which version of the launch template to set as the default version. When you launch an instance without specifying a launch template version, the default version of the launch template applies.

Specify either the launch template ID or launch template name in the request.

- --launch-template-id string The ID of the launch template.
- --launch-template-name string A name for the launch template.
- --default-version string The version number of the launch template to set as the default version.
- --endpoint snowballEndpoint A value that enables you to manage your compute
  instances programmatically using Amazon EC2-compatible API operations. For more
  information, see <u>Specifying the EC2-compatible endpoint as the Amazon CLI endpoint on a</u>
  Snowball Edge.
- modify-instance-attribute Modifies an attribute of the specified instance. The following attributes are supported:
  - instanceInitiatedShutdownBehavior
  - userData
- revoke-security-group-egress Removes one or more egress rules from a security group:
  - [--group-id value] The ID of the security group
  - [--ip-permissions value] One or more sets of IP permissions.
- <u>revoke-security-group-ingress</u> Revokes one or more ingress rules to a security group. When
  calling revoke-security-group-ingress, you must specify a value for either group-name
  or group-id.
  - [--group-name value] The name of the security group.
  - [--group-id value] The ID of the security group.
  - [--ip-permissions value] One or more sets of IP permissions.
  - [--protocol value] The IP protocol. Possible values are tcp, udp, and icmp. The --port argument is required unless the "all protocols" value is specified (-1).
  - [--port value] For TCP or UDP, the range of ports to allow. A single integer or a range (minimum–maximum).

For ICMP, a single integer or a range (type-code) in which type represents the ICMP type number and code represents the ICMP code number. A value of -1 indicates all ICMP codes for all ICMP types. A value of -1 just for type indicates all ICMP codes for the specified ICMP type.

- [--cidr value] The CIDR IP range.
- run-instances Launches a number of compute instances by using a Snowball AMI ID for an AMI.



### Note

It can take up to an hour and a half to launch a compute instance on a Snowball Edge, depending on the size and type of the instance.

• [--block-device-mappings (list)] – The block device mapping entries. The parameters DeleteOnTermination, VolumeSize, and VolumeType are supported. Boot volumes must be type sbg1.

The JSON syntax for this command is as follows.

```
{
   "DeviceName": "/dev/sdh",
   "Ebs":
   {
      "DeleteOnTermination": true|false,
      "VolumeSize": 100,
      "VolumeType": "sbp1"|"sbg1"
   }
}
```

- --count Number of instances to launch. If a single number is provided, it is assumed to be the minimum to launch (defaults to 1). If a range is provided in the form min:max, then the first number is interpreted as the minimum number of instances to launch and the second is interpreted as the maximum number of instances to launch.
- --image-id The Snowball AMI ID of the AMI, which you can get by calling describe-images. An AMI is required to launch an instance.
- --InstanceInitiatedShutdownBehavior By default, when you initiate a shutdown from your instance (using a command such as shutdown or poweroff), the instance stops. You can change this behavior so that it terminates instead. The parameters stop and terminate are supported. The default is stop. For more information, see Changing the instance initiated shutdown behavior in the Amazon EC2 User Guide for Linux Instances.
- --instance-type The sbe instance type.

• --launch-template structure – The launch template to use to launch the instances. Any parameters that you specify in the run-instances command override the same parameters in the launch template. You can specify either the name or ID of a launch template, but not both.

```
{
    "LaunchTemplateId": "string",
    "LaunchTemplateName": "string",
    "Version": "string"
}
```

- --security-group-ids One or more security group IDs. You can create a security group using
   <u>CreateSecurityGroup</u>. If no value is provided, the ID for the default security group is assigned
   to created instances.
- --tag-specifications The tags to apply to the resources during launch. You can only tag
  instances on launch. The specified tags are applied to all instances that are created during
  launch. To tag a resource after it has been created, use create-tags.
- --user-data The user data to make available to the instance. If you are using the Amazon CLI, base64-encoding is performed for you, and you can load the text from a file. Otherwise, you must provide base64-encoded text.
- --key-name (string) The name of the key pair. You can create a key pair using CreateKeyPair or ImportKeyPair.

# Marning

If you don't specify a key pair, you can't connect to the instance unless you choose an AMI that is configured to allow users another way to log in.

- <u>start-instances</u> Starts an sbe instance that you've previously stopped. All resources attached to the instance persist through starts and stops, but are erased if the instance is terminated.
  - --instance-ids The IDs of one or more sbe instances that were stopped on the device.
- <u>stop-instances</u> Stops an sbe instance that is running. All resources attached to the instance persist through starts and stops, but are erased if the instance is terminated.
  - --instance-ids The IDs of one or more sbe instances to be stopped on the device.

 terminate-instances – Shuts down one or more instances. This operation is idempotent; if you terminate an instance more than once, each call succeeds. All resources attached to the instance persist through starts and stops, but data is erased if the instance is terminated.

## (i) Note

By default, when you use a command like shutdown or poweroff to initiate a shutdown from your instance, the instance stops. However, you can use the InstanceInitiatedShutdownBehavior attribute to change this behavior so that these commands terminate your instance. For more information, see Changing the instance initiated shutdown behavior in the Amazon EC2 User Guide for Linux Instances.

- --instance-ids The IDs of one or more sbe instances to be terminated on the device. All associated data stored for those instances will be lost.
- create-key-pair Creates a 2048-bit RSA key pair with the specified name. Amazon EC2 stores the public key and displays the private key for you to save to a file. The private key is returned as an unencrypted PEM-encoded PKCS#1 private key. If a key with the specified name already exists, Amazon EC2 returns an error.
  - --key-name (string) A unique name for the key pair.

Constraints: Up to 255 ASCII characters.

• [--tag-specifications] (list) – The tags to apply to the new key pair.

```
{
    "ResourceType": "image"|"instance"|"key-pair"|"launch-template"|"security-group",
    "Tags": [
        "Key": "string",
        "Value": "string"
      }
    ]
  }
```

- import-key-pair
  - --key-name (string) A unique name for the key pair.

Constraints: Up to 255 ASCII characters.

- --public-key-material (blob) The public key. For API calls, the text must be base64-encoded. For command line tools, base64-encoding is performed for you.
- [--tag-specifications] (list) The tags to apply to the new key pair.

describe-key-pairs –

[--filters] (list) – The filters.

- key-pair-id The ID of the key pair.
- key-name The name of the key pair.
- tag-key The key of a tag assigned to the resource. Use this filter to find all resources assigned a tag with a specific key, regardless of the tag value.
- [--tag-specifications] (list) The tags to apply to the new key pair.
- tag:key The key/value combination of a tag assigned to the resource. Use the tag key in the
  filter name and the tag value as the filter value. For example, to find all resources that have
  a tag with the key Owner and the value Team A, specify tag:Owner for the filter name and
  Team A for the filter value.

```
{
    "Name": "string",
    "Values": ["string", ...]
}
...
```

• [--key-names] (list) – The key pair names.

Default: Describes all your key pairs.

- [--key-pair-ids] (list) The IDs of the key pairs.
- delete-key-pair -
  - [--key-name] (string) The name of the key pair.
  - [--key-pair-id] (string) The ID of the key pair.

# Supported Amazon EC2-compatible API operations on a Snowball Edge

Following, you can find Amazon EC2-compatible API operations that you can use with a Snowball Edge, with links to their descriptions in the *Amazon EC2 API Reference*. Amazon EC2-compatible API calls require Signature Version 4 (SigV4) signing. If you're using the Amazon CLI or an Amazon SDK to make these API calls, the SigV4 signing is handled for you. Otherwise, you need to implement your own SigV4 signing solution. For more information, see <u>Getting and using local Amazon S3</u> credentials on Snowball Edge.

- AssociateAddress Associates an Elastic IP address with an instance or a network interface.
- AttachVolume The following request parameters are supported:
  - Device
  - InstanceId
  - VolumeId
- <u>AuthorizeSecurityGroupEgress</u> Adds one or more egress rules to a security group for use with a Snowball Edge device. Specifically, this action permits instances to send traffic to one or more destination IPv4 CIDR address ranges.
- <u>AuthorizeSecurityGroupIngress</u> Adds one or more ingress rules to a security group. When calling AuthorizeSecurityGroupIngress, you must specify a value either for GroupName or GroupId.
- CreateVolume The following request parameters are supported:
  - SnapshotId
  - Size
  - VolumeType
  - TagSpecification.N
- <u>CreateLaunchTemplate</u> The following request parameters are supported:
  - ImageId
  - InstanceType

- SecurityGroupIds
- TagSpecifications
- UserData
- CreateLaunchTemplateVersion
- CreateTags The following request parameters are supported:
  - AMI
  - Instance
  - Launch template
  - Security group
- <u>CreateSecurityGroup</u> Creates a security group on your Snowball Edge. You can create up to 50 security groups. When you create a security group, you specify a friendly name of your choice.
- DeleteLaunchTemplate
- DeleteLaunchTemplateVersions
- <u>DeleteSecurityGroup</u> Deletes a security group. If you attempt to delete a security group that is associated with an instance, or is referenced by another security group, the operation fails with DependencyViolation.
- <u>DeleteTags</u> Deletes the specified set of tags from the specified set of resources.
- <u>DeleteVolume</u> The following request parameters are supported:
  - VolumeId
- DescribeAddresses
- Describelmages
- DescribeInstanceAttribute The following attributes are supported:
  - instanceType
  - userData
- DescribeInstanceStatus
- DescribeLaunchTemplates
- DescribeLaunchTemplateVersions
- DescribeInstances
- <u>DescribeSecurityGroups</u> Describes one or more of your security groups.
   DescribeSecurityGroups is a paginated operation. You can issue multiple API calls to retrieve the entire dataset of results.

- DescribeTags With this command, the following filters are supported:
  - resource-id
  - resource-type AMI or compute instance only
  - key
  - value
- DescribeVolume The following request parameters are supported:
  - MaxResults
  - NextToken
  - VolumeId.N
- DetachVolume The following request parameters are supported:
  - Device
  - InstanceId
  - VolumeId
- DisassociateAddress
- GetLaunchTemplateData
- ModifyLaunchTemplate
- ModifyInstanceAttribute Only the userData attribute is supported.
- RevokeSecurityGroupEgress Removes one or more egress rules from a security group.
- RevokeSecurityGroupIngress Revokes one or more ingress rules to a security group. When calling RevokeSecurityGroupIngress, you must specify a value either for group-name or groupid.
- RunInstances –

# (i) Note

It can take up to an hour and a half to launch a compute instance on a Snowball Edge, depending on the size and type of the instance.

- StartInstances
- StopInstances Resources associated with a stopped instance persist. You can terminate the instance to free up these resources. However, any associated data is deleted.
- TerminateInstances

# Autostarting EC2-compatible instances with launch templates on a Snowball Edge

You can automatically start your Amazon EC2-compatible instances on your Amazon Snowball Edge device using launch templates and Snowball Edge client launch configuration commands.

A launch template contains the configuration information necessary to create an Amazon EC2compatible instance on your Snowball Edge. You can use a launch template to store launch parameters so you don't have to specify them every time that you start an EC2-compatible instance on your Snowball Edge.

When you use autostart configurations on your Snowball Edge, you configure the parameters that you want your Amazon EC2-compatible instance to start with. After your Snowball Edge is configured, when you reboot and unlock it, it uses your autostart configuration to launch an instance with the parameters that you specified. If an instance that you launched using an autostart configuration is stopped, the instance starts running when you unlock your device.

# Note

After you first configure an autostart configuration, restart your device to launch it. All subsequent instance launches (after planned or unplanned reboots) happen automatically after your device is unlocked.

A launch template can specify the Amazon Machine Image (AMI) ID, instance type, user data, security groups, and tags for an Amazon EC2-compatible instance when you launch that instance. For a list of supported instance types, see Quotas for compute instances on a Snowball Edge device.

To automatically launch EC2-compatible instances on your Snowball Edge, take the following steps:

- 1. When you order your Amazon Snowball Edge device, create a job to order a Snowball Edge device with compute instances. For more information, see Creating a job to order a Snowball Edge.
- 2. After receiving your Snowball Edge, unlock it.
- 3. Use the EC2-compatible API command aws ec2 create-launch-template to create a launch template.

- 4. Use the Snowball Edge client command snowballEdge create-autostartconfiguration to bind your EC2-compatible instance launch template to your network configuration. For more information, see Creating an EC2-compatible launch configuration on a Snowball Edge.
- 5. Reboot, then unlock your device. Your EC2-compatible instances are automatically started using the attributes specified in your launch template and your Snowball Edge client command create-autostart-configuration.

To view the status of your running instances, use the EC2-compatible API command describeautostart-configurations.

## Note

There is no console or job management API for Amazon Snowball Edge support for launch templates. You use EC2-compatible and Snowball Edge client CLI commands to automatically start EC2-compatible instances on your Amazon Snowball Edge device.

# Using Instance Metadata Service for Snow with Amazon EC2compatible instances on a Snowball Edge

IMDS for Snow provides Instance Metadata Service (IMDS) for Amazon EC2-compatible instances on Snow. Instance metadata is categories of information about instances. It includes categories such as host name, events, and security groups. Using IMDS for Snow, you can use instance metadata to access user data that you specified when launching your Amazon EC2-compatible instance. For example, you can use IMDS for Snow to specify parameters for configuring your instance, or include these parameters in a simple script. You can build generic AMIs and use user data to modify the configuration files supplied at launch time.

To learn about instance metadata and user data and Snow EC2-compatible instances, see Supported Instance Metadata and User Data in this guide.

### Important

Although you can only access instance metadata and user data from within the instance itself, the data is not protected by authentication or cryptographic methods. Anyone who

has direct access to the instance, and potentially any software running on the instance, can view its metadata. Therefore, you should not store sensitive data, such as passwords or long-lived encryption keys, as user data.

# Note

The examples in this section use the IPv4 address of the instance metadata service: 169.254.169.254. We do not support the retrieval of instance metadata using the link-local IPv6 address.

# **Topics**

- IMDS versions on a Snowball Edge
- Examples of retrieving instance metadata using IMDSv1 and IMDSv2 on a Snowball Edge

# IMDS versions on a Snowball Edge

You can access instance metadata from a running instance using IMDS version 2 or IMDS version 1:

- Instance Metadata Service version 2 (IMDSv2), a session-oriented method
- Instance Metadata Service version 1 (IMDSv1), a request-response method

Depending on the version of your Snow software, you can use IMDSv1, IMDSv2, or both. This also depends on the type of AMI running in the EC2-compatible instance. Some AMIs, such as those running Ubuntu 20.04, require IMDSv2. The instance metadata service distinguishes between IMDSv1 and IMDSv2 requests based on the presence of PUT or GET headers. IMDSv2 uses both of these headers. IMDSv1 uses only the GET header.

Amazon encourages the use of IMDSv2 rather than IMDSv1 because IMDSv2 includes higher security. For more information, see Add defense in depth against open firewalls, reverse proxies, and SSRF vulnerabilities with enhancements to the EC2 Instance Metadata Service.

# IMDSv2 on a Snowball Edge

When you use IMDSv2 to request instance metadata, the request must follow these rules:

- 1. Use a PUT request to initiate a session to the instance metadata service. The PUT request returns a session token that must be included in subsequent GET requests to the instance metadata service. The session token that defines the session duration. Session duration can be a minimum of one second and a maximum of six hours. During this duration, you can use the same session token for subsequent requests. After this duration expires, you must create a new session token for future requests. The token is required to access metadata using IMDSv2.
- 2. Include the token in all GET requests to the instance metadata service.
  - a. The token is an instance-specific key. The token is not valid on other EC2-compatible instances and will be rejected if you attempt to use it outside of the instance on which it was generated.
  - b. The PUT request must include a header that specifies the time to live (TTL) for the token, in seconds, up to a maximum of six hours (21,600 seconds). The token represents a logical session. The TTL specifies the length of time that the token is valid and, therefore, the duration of the session.
  - c. After a token expires, to continue accessing instance metadata, you must create a new session using another PUT request.
  - d. You can choose to reuse a token or create a new token with every request. For a small number of requests, it might be easier to generate and immediately use a token each time you need to access the instance metadata service. But for efficiency, you can specify a longer duration for the token and reuse it rather than having to write a PUT request every time you need to request instance metadata. There is no practical limit on the number of concurrent tokens, each representing its own session.

HTTP GET and HEAD methods are allowed in IMDSv2 instance metadata requests. PUT requests are rejected if they contain an X-Forwarded-For header.

By default, the response to PUT requests has a response hop limit (time to live) of 1 at the IP protocol level. IMDS for Snow does not have ability to modify the hop limit on PUT responses.

The following example uses a Linux shell script and IMDSv2 to retrieve the top-level instance metadata items. This example:

- 1. Creates a session token lasting six hours (21,600 seconds) using the PUT request.
- 2. Stores the session token header in a variable named TOKEN.
- 3. Requests the top-level metadata items using the token.

Use two commands to generate the EC2-compatible token. You can run the commands seperately or as one command.

First, generate a token using the following command.



# Note

X-aws-ec2-metadata-token-ttl-seconds is a required header. If this header is not included, you will receive an 400 - Missing or Invalid Parameters error code.

```
[ec2-user ~]$ TOKEN=curl -X PUT "http://169.254.169.254/latest/api/token" -H "X-
aws-ec2-metadata-token-ttl-seconds: 21600"
```

Then, use the token to generate top-level metadata items using the following command.

```
[ec2-user ~]$ curl -H "X-aws-ec2-metadata-token: $TOKEN" -v http://169.254.169.254/
latest/meta-data/
```

# Note

If there is an error in creating the token, an error message is stored in the variable instead of a valid token and the command will not work.

You can store the token and combine the commands. The following example combines the above two commands and stores the session token header in a variable named TOKEN.

# **Example of combined commands**

```
[ec2-user ~]$ TOKEN=curl -X PUT "http://169.254.169.254/latest/api/token" -H "X-
aws-ec2-metadata-token-ttl-seconds: 21600" \
    && curl -H "X-aws-ec2-metadata-token: $TOKEN" -v http://169.254.169.254/latest/
meta-data/
```

After you've created a token, you can reuse it until it expires. The following example command gets the ID of the AMI used to launch the instance and stores it in the \$TOKEN created in the previous example.

# Example of reusing a token

```
[ec2-user ~]$ curl -H "X-aws-ec2-metadata-token: $TOKEN" -v http://169.254.169.254/
latest/meta-data/ami-id
```

# IMDSv1 on a Snowball Edge

IMDSv1 uses the request-response model. To request instance metadata, you send a GET request to the instance metadata service.

```
[ec2-user ~]$ curl http://169.254.169.254/latest/meta-data/
```

Your instance metadata is available from your running instance, so you do not need to use Amazon EC2 console or the Amazon CLI to access it. This can be helpful when you're writing scripts to run from your instance. For example, you can access the local IP address of your instance from instance metadata to manage a connection to an external application. Instance metadata is divided into categories. For a description of each instance metadata category, see <a href="Supported Instance Metadata">Supported Instance Metadata</a> and User Data in this guide.

To view all categories of instance metadata from within a running instance, use the following IPv4 URI:

```
http://169.254.169.254/latest/meta-data/
```

The IP addresses are link-local addresses and are valid only from the instance. For more information, see Link-local address on Wikipedia.

All instance metadata is returned as text (HTTP content type text/plain).

A request for a specific metadata resource returns the appropriate value, or an **404 - Not Found** HTTP error code, if the resource is not available.

A request for a general metadata resource (when the URI ends with a / character) returns a list of available resources, or an **404 - Not Found** HTTP error code if there is no such resource. The list items are on separate lines, terminated by line feeds (ASCII character code 10).

For requests made using IMDSv1, the following HTTP error codes can be returned:

- 400 Missing or Invalid Parameters The PUT request is not valid.
- **401 Unauthorized** The GET request uses an invalid token. The recommended action is to generate a new token.
- 403 Forbidden The request is not allowed or the instance metadata service is turned off.

# Examples of retrieving instance metadata using IMDSv1 and IMDSv2 on a Snowball Edge

The following examples provide commands that you can use on a Linux instance.

# Example of getting the available versions of the instance metadata

This example gets the available versions of the instance metadata. Each version refers to an instance metadata build when new instance metadata categories were released. The earlier versions are available to you in case you have scripts that rely on the structure and information present in a previous version.

### IMDSv2

```
[ec2-user ~]$ TOKEN=`curl -X PUT "http://169.254.169.254/latest/api/token" -H
"X-aws-ec2-metadata-token-ttl-seconds: 21600"` && curl -H "X-aws-ec2-metadata-token:
$TOKEN" -v http://169.254.169.254/
   % Total
             % Received % Xferd Average Speed
                                                 Time
                                                         Time
                                                                  Time Current
Dload Upload
               Total
                       Spent
                                Left Speed
                        100
                                 56
                                                 0
                                                         3733
   100
             56
                                                                       --:--:--
--:--: 3733
      Trying 169.254.169.254...
   * TCP NODELAY set
   * Connected to 169.254.169.254 (169.254.169.254) port 80 (#0)
   > GET / HTTP/1.1
   > Host: 169.254.169.254
   > User-Agent: curl/7.61.1
   > Accept: */*
```

```
> X-aws-ec2-metadata-token:
MDAXcxNFLbAwJIYx8KzgNckcHTdxT4Tt69TzpKEx1XKTULHIQnjEtXvD
   * HTTP 1.0, assume close after body
   < HTTP/1.0 200 OK
   < Date: Mon, 12 Sep 2022 21:58:03 GMT
   < Content-Length: 274
   < Content-Type: text/plain
   < Server: EC2ws
   <
   1.0
   2007-01-19
   2007-03-01
   2007-08-29
   2007-10-10
   2007-12-15
   2008-02-01
   2008-09-01
   2009-04-04
   2011-01-01
   2011-05-01
   2012-01-12
   2014-02-25
   2014-11-05
   2015-10-20
   2016-04-19
   2016-06-30
   2016-09-02
   2018-03-28
   2018-08-17
   2018-09-24
   2019-10-01
   2020-10-27
   2021-01-03
   2021-03-23
   * Closing connection 0
```

## IMDSv1

```
[ec2-user ~]$ curl http://169.254.169.254/
1.0
```

```
2007-01-19
2007-03-01
2007-08-29
2007-10-10
2007-12-15
2008-02-01
2008-09-01
2009-04-04
2011-01-01
2011-05-01
2012-01-12
2014-02-25
2014-11-05
2015-10-20
2016-04-19
2016-06-30
2016-09-02
2018-03-28
2018-08-17
2018-09-24
2019-10-01
2020-10-27
2021-01-03
2021-03-23
latest
```

# Example of getting the top-level metadata items

This example gets the top-level metadata items. For information on top-level metadata items, see Supported Instance Metadata and User Data in this guide.

### IMDSv2

```
[ec2-user ~]$ TOKEN=`curl -X PUT "http://169.254.169.254/latest/api/token" -H
"X-aws-ec2-metadata-token-ttl-seconds: 21600"` && curl -H "X-aws-ec2-metadata-token:
$TOKEN" -v http://169.254.169.254/latest/meta-data/
ami-id
hostname
instance-id
instance-type
local-hostname
```

```
local-ipv4
mac
network/
reservation-id
security-groups
```

### IMDSv1

```
[ec2-user ~]$ curl http://169.254.169.254/latest/meta-data/
ami-id
hostname
instance-id
instance-type
local-hostname
local-ipv4
mac
network/
reservation-id
security-groups
```

# Example of getting values of top-level metadata

The following examples get the values of some of the top-level metadata items that were obtained in the preceding example. The IMDSv2 requests use the stored token that was created in the preceding example command, assuming it has not expired.

```
ami-id IMDSv2
```

```
curl -H "X-aws-ec2-metadata-token: $TOKEN" -v http://169.254.169.254/latest/meta-
data/ami-id ami-0abcdef1234567890
```

### ami-id IMDSv1

```
curl http://169.254.169.254/latest/meta-data/ami-id ami-0abcdef1234567890
```

### reservation-id IMDSv2

```
[ec2-user ~] $ curl -H "X-aws-ec2-metadata-token: $T0KEN" -v http://169.254.169.254/latest/meta-data/reservation-id r-0efghijk987654321
```

### reservation-id IMDSv1

```
[ec2-user \sim]$ curl http://169.254.169.254/latest/meta-data/reservation-id \ r-0efghijk987654321
```

### local-hostname IMDSv2

```
[ec2-user \sim]$ curl -H "X-aws-ec2-metadata-token: $TOKEN" -v http://169.254.169.254/latest/meta-data/local-hostname ip-00-000-00
```

### local-hostname IMDSv1

```
[ec2-user \sim]$ curl http://169.254.169.254/latest/meta-data/local-hostname ip-00-000-00-00
```

# Using block storage with Amazon EC2-compatible instances on Snowball Edge

With block storage on Snowball Edge, you can add or remove block storage based on the needs of your applications. Volumes that are attached to an Amazon EC2-compatible instance are exposed as storage volumes that persist independently from the life of the instance. You can manage block storage using the familiar Amazon EBS API.

Certain Amazon EBS commands are supported by using the EC2-compatible endpoint. Supported commands include attach-volume, create-volume, delete-volume, detach-volume, and

describe-volumes. For more information about these commands, see List of supported EC2compatible Amazon CLI commands on a Snowball Edge.

# Important

Be sure to unmount any file systems on the device within your operating system before detaching the volume. Failure to do so can potentially result in data loss.

Following, you can find Amazon EBS volume quotas and differences between Amazon EBS volumes on your device and Amazon EBS volumes in the cloud:

- Amazon EBS volumes are only available to EC2-compatible instances running on the device hosting the volumes.
- Volume types are limited to either capacity-optimized HDD (sbg1) or performance-optimized SSD (sbp1). The default volume type is sbg1.
- Snowball Edge shares HDD memory between Amazon S3 objects and Amazon EBS. If you use HDD-based block storage on Amazon Snowball Edge, it reduces the amount of memory available for Amazon S3 objects. Likewise, Amazon S3 objects reduce the amount of memory available for Amazon EBS block storage on HDD volumes.
- Amazon EC2-compatible root volumes always use the IDE driver. Additional Amazon EBS volumes will preferentially use the Virtio driver if available. If the Virtio driver isn't available, SBE defaults to the IDE driver. The Virtio driver allows for better performance and is recommended.
- When creating Amazon EBS volumes, the encrypted parameter isn't supported. However, all data on your device is encrypted by default. .
- Volumes can be from 1 GB to 10 TB in size.
- Up to 10 Amazon EBS volumes can be attached to a single EC2-compatible instance.
- There is no formal limit to the number of Amazon EBS volumes you can have on your Amazon Snowball Edge device. However, total Amazon EBS volume capacity is limited by the available space on your device.

# Controlling network traffic with security groups on Snowball Edge

A *security group* acts as a virtual firewall that controls the traffic for one or more instances. When you launch an instance, you associate one or more security groups with the instance. You can add rules to each security group to allow traffic to or from its associated instances. For more information, see Amazon EC2 security groups for Linux instances in the Amazon EC2 User Guide.

Security groups on Snowball Edge devices are similar to security groups in the Amazon Cloud. Virtual private clouds (VPCs) aren't supported on Snowball Edge devices.

Following, you can find the other differences between Snowball Edge security groups and EC2 VPC security groups:

- Each Snowball Edge device has a limit of 50 security groups.
- The default security group allows all inbound and outbound traffic.
- Traffic between local instances can use either the private instance IP address or a public IP
  address. For example, suppose that you want to connect using SSH from instance A to instance B.
  In this case, your target IP address can be either the public IP or private IP address of instance B,
  if the security group rule allows the traffic.
- Only the parameters listed for Amazon CLI actions and API calls are supported. These typically
  are a subset of those supported in EC2 VPC instances.

For more information about supported Amazon CLI actions, see <u>List of supported EC2-compatible Amazon CLI commands on a Snowball Edge</u>. For more information on supported API operations, see Supported Amazon EC2-compatible API operations on a Snowball Edge.

# Supported EC2-compatible instance metadata and user data on Snowball Edge

*Instance metadata* is data about your instance that you can use to configure or manage the running instance. Snowball Edge supports a subset of instance metadata categories for your compute instances. For more information, see <u>Instance metadata and user data</u> in the Amazon EC2 User Guide.

The following categories are supported. Using any other categories returns a 404 error message.

# Supported instance metadata categories on a Snowball Edge device

Data	Description
ami-id	The AMI ID used to launch the instance.
hostname	The private IPv4 DNS hostname of the instance.
instance-id	The ID of this instance.
instance-type	The type of instance.
local-hostname	The private IPv4 DNS hostname of the instance.
local-ipv4	The private IPv4 address of the instance.
mac	The instance's media access control (MAC) address.
<pre>network/interfaces/macs/ mac/ local-hostname</pre>	The interface's local hostname.
<pre>network/interfaces/macs/ mac/ local-ipv4s</pre>	The private IPv4 addresses associated with the interface.
<pre>network/interfaces/macs/ mac/mac</pre>	The instance's MAC address.
<pre>network/interfaces/macs/ mac/ public-ipv4s</pre>	The Elastic IP addresses associated with the interface.
public-ipv4	The public IPv4 address.
public-keys/0/openssh-key	Public key. Only available if supplied at instance launch time.
reservation-id	The ID of the reservation.
userData	Shell scripts to send instructions to an instance at launch.

# Supported instance dynamic data categories on a Snowball Edge device

Data	Description
instance-identity/document	JSON containing instance attributes. Only instanceId , imageId, privateIp , and instanceType have values, and the other returned attributes are null. For more information, see <a href="Instance Identity Documents">Instance Identity Documents</a> in the Amazon EC2 User Guide.

# Computer instance user data on Snowball Edge

Use shell scripts to access compute instance user data on a Snowball Edge device. Using shell scripts, you can send instructions to an instance at launch. You can change user data with the modify-instance-attribute Amazon CLI command, or the ModifyInstanceAttribute API action.

# To change user data

- 1. Stop your compute instance with the stop-instances Amazon CLI command.
- 2. Using the modify-instance-attribute Amazon CLI command, modify the userData attribute.
- 3. Restart your compute instance with the start-instances Amazon CLI command.

Only shell scripts are supported for compute instances. There is no support for cloud-init package directives on compute instances running on a Snowball Edge device. For more information about working with Amazon CLI commands, see the *Amazon CLI Command Reference*.

# Stopping EC2-compatible instances running on Snowball Edge

To avoid accidentally deleting the Amazon EC2-compatible instances that you create on a device, don't shut down your instances from the operating system. For example, don't use the shutdown or reboot commands. Shutting down an instance from within the operating system has the same effect as calling the terminate-instances command.

Computer instance user data 264

Instead, use the <u>stop-instances</u> command to suspend Amazon EC2-compatible instances that you want to preserve.

# Using Amazon IoT Greengrass to run pre-installed software on Amazon EC2-compatible instances on **Snowball Edge**

Amazon IoT Greengrass is an open source Internet of Things (IoT) edge runtime and cloud service that helps you build, deploy, and manage IoT applications on your devices. You can use Amazon IoT Greengrass to build software that enables your devices to act locally on the data that they generate, run predictions based on machine learning models, and filter and aggregate device data. For detailed information about Amazon IoT Greengrass, see What is Amazon IoT Greengrass? in the Amazon IoT Greengrass Version 2 Developer Guide.

By using Amazon IoT Greengrass on your Snowball Edge device, you enable the device to collect and analyze data closer to where it is generated, react autonomously to local events, and communicate securely with other devices on the local network.

# Setting up an Amazon EC2-compatible instance for Amazon IoT **Greengrass on a Snowball Edge**



# Note

To install Amazon IoT Greengrass Version 2 on a Snowball Edge device, make sure that your device is connected to the internet. After installation, the internet is not required for a Snowball Edge device to work with Amazon IoT Greengrass.

# To set up an EC2-compatible instance for Amazon IoT Greengrass V2

- Launch the Amazon IoT Greengrass validated AMI with a public IP Address and an SSH key:
  - Using the Amazon CLI: run-instances. a.
  - Using Amazon OpsHub: Launching an Amazon EC2-compatible instance. b.



# Note

Take note of the public IP address and SSH key name that are associated with the instance.

Connect to the EC2-compatible instance using SSH. To do so, run the following command on 2. the computer that is connected to your device. Replace ssh-key with the key you used to launch the EC2-compatible instance. Replace <a href="mailto:public-ip-address">public-ip-address</a> with the public IP address of the EC2-compatible instance.

ssh -i ssh-key ec2-user@ public-ip-address

# Important

If your computer uses an earlier version of Microsoft Windows, you might not have the SSH command, or you might have SSH but can't connect to your EC2-compatible instance. To connect to your EC2-compatible instance, you can install and configure PuTTY, which is a no-cost, open source SSH client. You must convert the SSH key from . pem format to PuTTY format and connect to your EC2 instance. For instructions on how to convert from . pem to PuTTY format, see Convert your private key using PuTTYgen in the Amazon EC2 User Guide.

# Installing Amazon IoT Greengrass on an EC2-compatible instance on a **Snowball Edge**

Next, you set up your EC2-compatible instance as an Amazon IoT Greengrass Core device that you can use for local development.

### To install Amazon IoT Greengrass

Use the following command to install the prerequisite software for Amazon IoT Greengrass. This command installs the Amazon Command Line Interface (Amazon CLI) v2, Python 3, and Java 8.

```
curl "https://awscli.amazonaws.com/awscli-exe-linux-x86_64.zip" -o "awscliv2.zip" && unzip awscliv2.zip && sudo ./aws/install && sudo yum -y install python3 java-1.8.0-openjdk
```

2. Grant the root user permission to run the Amazon IoT Greengrass software and modify the root permission from root ALL=(ALL) ALL to root ALL=(ALL:ALL) ALL in the sudoers config file.

```
sudo sed -in 's/root\tALL=(ALL)/root\tALL=(ALL:ALL)/' /etc/sudoers
```

3. Use the following command to download the Amazon IoT Greengrass Core software.

```
curl -s https://d2s8p88vqu9w66.cloudfront.net/releases/greengrass-nucleus-
latest.zip > greengrass-nucleus-latest.zip && unzip greengrass-nucleus-latest.zip -
d GreengrassCore && rm greengrass-nucleus-latest.zip
```

4. Use the following commands to provide credentials to allow you to install Amazon IoT Greengrass Core software. Replace the example values with your credentials:

```
export AWS_ACCESS_KEY_ID=AKIAIOSFODNN7EXAMPLE
export AWS_SECRET_ACCESS_KEY=wJalrXUtnFEMI/K7MDENG/bPxRfiCYEXAMPLEKEY
```

# Note

These are credentials from the IAM user in the Amazon Region, not the Snowball Edge device.

5. Use the following command to install the Amazon IoT Greengrass Core software. The command creates Amazon resources that the core software requires to operate and sets up the core software as a system service that runs when the AMI boots up.

Replace the following parameters in the command:

- region: The Amazon Region in which to find or create resources.
- MyGreengrassCore: The name of the Amazon IoT thing for your Amazon IoT Greengrass core device.

 MyGreengrassCoreGroup: The name of the Amazon IoT thing group for your Amazon IoT Greengrass core device.

```
sudo -E java -Droot="/greengrass/v2" -Dlog.store=FILE \
    -jar ./GreengrassInstaller/lib/Greengrass.jar \
    --aws-region region \
    --thing-name MyGreengrassCore \
    --thing-group-name MyGreengrassCoreGroup \
    --thing-policy-name GreengrassV2IoTThingPolicy \
    --tes-role-name GreengrassV2TokenExchangeRole \
    --tes-role-alias-name GreengrassCoreTokenExchangeRoleAlias \
    --component-default-user ggc_user:ggc_group \
    --provision true \
    --setup-system-service true \
    --deploy-dev-tools true
```

# Note

This command is for an Amazon EC2-compatible instance running an Amazon Linux 2 AMI. For a Windows AMI, see Install the Amazon IoT Greengrass Core software.

When you are finished, you will have an Amazon IoT Greengrass core running on your Snowball Edge device for your local use.

# Using Amazon Lambda with an Amazon Snowball Edge

Amazon Lambda powered by Amazon IoT Greengrass is a compute service that lets you to run serverless code (Lambda functions) locally on Snowball Edge devices. You can use Lambda to invoke Lambda functions on a Snowball Edge device with Message Queuing Telemetry Transport (MQTT) messages, run Python code in Lambda functions, and use them to call public Amazon service endpoints in the cloud. To use Lambda functions with Snowball Edge devices, you must create your Snowball Edge jobs in an Amazon Web Services Region supported by Amazon IoT Greengrass. For a list of valid Amazon Web Services Regions, see Amazon IoT Greengrass in the Amazon Web Services General Reference. Lambda on Snowball Edge is available in Regions where Lambda and Snowball Edge devices are available.

### Note

If you allocate the minimum recommendation of 128 MB of memory for each of your functions, you can have up to seven Lambda functions in a single job.

# **Topics**

- Getting started using Lambda on Snowball Edge
- Deploy a Lambda function to a Snowball Edge device

# Getting started using Lambda on Snowball Edge

Before you create a Lambda function in the Python language to run on your Snowball Edge, we recommend that you familiarize yourself with the following services, concepts, and related topics.

# Prerequisites for Amazon IoT Greengrass on Snowball Edge

Amazon IoT Greengrass is software that extends Amazon Web Services Cloud capabilities to local devices. Amazon IoT Greengrass makes it possible for local devices to collect and analyze data closer to the source of information, while also securely communicating with each other on local networks. More specifically, developers who use Amazon IoT Greengrass can author serverless code (Lambda functions) in the Amazon Web Services Cloud. They can then conveniently deploy this code to devices for local execution of applications.

The following Amazon IoT Greengrass concepts are important to understand when using Amazon IoT Greengrass with a Snowball Edge:

- Amazon IoT Greengrass requirements For a full list of Amazon IoT Greengrass requirements, see Requirements in the Amazon IoT Greengrass Version 2 Developer Guide.
- Amazon IoT Greengrass core Download the Amazon IoT Greengrass core software and install
  it on an EC2 instance running on the device. See <u>Using Amazon IoT Greengrass on Amazon EC2</u>
  instances in this guide.

To use Lambda functions on a Snowball Edge device, you must first install Amazon IoT Greengrass Core software on an Amazon EC2 instance on the device. The Lambda functions you plan to use on the Snowball Edge device must be created by the same account you will use to install Amazon IoT Greengrass on the Snowball Edge device. For information about installing Amazon IoT Greengrass on your Snowball Edge device, see <u>Using Amazon IoT Greengrass to run pre-installed software on Amazon EC2-compatible instances on Snowball Edge</u>.

- Amazon IoT Greengrass group A Snowball Edge device is part of an Amazon IoT Greengrass group as the group's core device. For more information about groups, see <a href="Amazon Greengrass">Amazon Greengrass</a> IoT Groups in the Amazon IoT Greengrass Developer Guide.
- MQTT Amazon IoT Greengrass uses the industry-standard, lightweight MQTT protocol to communicate within a group. Any device or software compatible with MQTT in your Amazon IoT Greengrass group can invoke MQTT messages. These messages can invoke Lambda functions, if you define the related MQTT message to do so.

# Prerequisites for Amazon Lambda on Snowball Edge

Amazon Lambda is a compute service that lets you run code without provisioning or managing servers. The following Lambda concepts are important to understand when using Lambda with a Snowball Edge:

- Lambda functions Your custom code, uploaded and published to Lambda and used on a Snowball Edge. For more information, see <u>Lambda Functions</u> in the *Amazon Lambda Developer Guide*.
- Lambda console The console in which you upload, update, and publish your Python-language Lambda functions for use on a Snowball Edge. For more information about the <u>Lambda console</u>, see <u>Lambda console</u> in the *Amazon Lambda Developer Guide*.

Prerequisites for Lambda 271

• **Python** – The high-level programming language used for your Lambda functions powered by Amazon IoT Greengrass on a Snowball Edge. Amazon IoT Greengrass supports Python version 3.8.x.

# Deploy a Lambda function to a Snowball Edge device

To run a Lambda function on a Snowball Edge device in an Amazon IoT Greengrass group, import the function as a component. For complete information about importing a function as a component using the Amazon IoT Greengrass console, see <a href="Import a Lambda function as a component">Import a Lambda function as a component (console) in the Amazon IoT Greengrass Version 2 Developer Guide.</a>

- 1. In the Amazon IoT console, on the **Greengrass components** page, choose **Create component**.
- 2. In **Component source**, choose **Import Lambda function**. In **Lambda function**, choose the name of your function. In **Lambda function version**, choose the version of your function.
- To subscribe the function to messages on which it can act, choose Add event source and choose the event. In Timeout (seconds), provide a timeout period in seconds.
- 4. In **Pinned**, choose whether or not to pin your function.
- 5. Choose Create component
- 6. Choose **Deploy**.
- 7. In **Deployment**, choose **Add to existing deployment**, then choose your Greengrass group. Choose **Next**.
- 8. In **Public components**, choose these components:
  - aws.greengrass.Cli
  - · aws.greengrass.LambdaLauncher
  - aws.greengrass.LambdaManager
  - aws.greengrass.LambdaRuntimes
  - · aws.greengrass.Nucleus
- Choose Deploy.

# Using Amazon S3 compatible storage on Snowball Edge

Amazon S3 compatible storage on Snowball Edge delivers secure object storage with increased resiliency, scale, and an expanded Amazon S3 API feature-set to rugged, mobile edge, and disconnected environments. Using Amazon S3 compatible storage on Snowball Edge, you can store data and run highly available applications on Snowball Edge for edge computing.

You can create Amazon S3 buckets on the Snowball Edge devices to store and retrieve objects on premises for applications that require local data access, local data processing, and data residency. Amazon S3 compatible storage on Snowball Edge provides a new storage class, SNOW, which uses the Amazon S3 APIs, and is designed to store data durably and redundantly across multiple Snowball Edge devices. You can use the same APIs and features on Snowball Edge buckets that you do on Amazon S3, including bucket lifecycle policies, encryption, and tagging. When the device or devices are returned to Amazon, all data created or stored in Amazon S3 compatible storage on Snowball Edge is erased. For more information, see Local Compute and Storage Only Jobs.

You can deploy Amazon S3 compatible storage on Snowball Edge in standalone configuration or in cluster configuration. In standalone configuration, you can provision S3 capacity on the device and the balance is available as block storage. In cluster configuration, all data disk capacity is used for S3 storage. A cluster may consist of a minimum of 3 devices up to a maximum of 16 devices. Depending on the size of cluster, S3 service is designed to sustain device fault tolerance of 1 or 2 devices.

With Amazon DataSync, you can transfer objects between Amazon S3 compatible storage on Snowball Edge on a Snowball Edge device and Amazon storage services. For more information, see Configuring transfers with S3 compatible storage on Snowball Edge in the Amazon DataSync User Guide.

Following is the Amazon S3 compatible storage on Snowball Edge storage capacity and block storage capacity for a standalone device using Amazon S3 compatible storage on Snowball Edge. For fault tolerance and storage capacity of clusters, see <a href="this table">this table</a>.

# Snowball Edge Compute Optimized with NVMe storage

Storage capacity of Amazon S3 compatible storage on Snowball Edge and block storage of Snowball Edge Compute Optimized (Compute Optimized with AMD EPYC Gen2 and NVMe) devices

Amazon S3 compatible storage on Snowball Edge storage capacity (in TB)	Block storage capacity (in TB)
3	17.5
5.5	14.5
10.5	8.5
12	6.5
13	5.5
16.5	1.5

# Snowball Edge storage optimized 210 TB

Storage capacity of Amazon S3 compatible storage on Snowball Edge and block storage of Snowball Edge storage optimized 210 TB devices

Amazon S3 compatible storage on Snowball Edge storage capacity (in TB)	Block storage capacity (in TB)
20	206
40	182
60	158
80	134
100	110
120	86

Amazon S3 compatible storage on Snowball Edge storage capacity (in TB)	Block storage capacity (in TB)
140	62
160	38
180	14
190	2

# Amazon S3 compatible storage on Snowball Edge specifications:

- The maximum number of Snowball Edge buckets is 100 per device or per cluster.
- The S3 on Snowball Edge bucket owner account owns all objects in the bucket.
- Only the S3 on Snowball Edge bucket owner account can perform operations on the bucket.
- Object size limitations are consistent with those in Amazon S3.
- All objects stored on S3 on Snowball Edge have SNOW as the storage class.
- By default, all objects stored in the SNOW storage class are stored using server-side encryption with Amazon S3 managed encryption keys (SSE-S3). You can also explicitly choose to store objects by using server-side encryption with customer-provided encryption keys (SSE-C).
- If there is not enough space to store an object on your Snowball Edge, the API returns an insufficient capacity exception (ICE).

## **Topics**

- Order Amazon S3 compatible storage on Snowball Edge
- Setting up and starting Amazon S3 compatible storage on Snowball Edge
- Working with S3 buckets with Amazon S3 compatible storage on Snowball Edge
- Determining whether you can access an Amazon S3 compatible storage on Snowball Edge bucket on a Snowball Edge
- Retrieving a list of buckets or regional buckets in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge
- Getting a bucket with Amazon S3 compatible storage on Snowball Edge on a Snowball Edge
- Creating an S3 bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

- Deleting a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge
- Creating and managing an object lifecycle configuration using the Amazon CLI
- Copying an object to an Amazon S3 compatible storage on Snowball Edge bucket on a Snowball Edge
- <u>Listing objects in a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge</u>
- Getting an object from a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge
- Deleting objects in buckets in Amazon S3 compatible storage on Snowball Edge
- Supported REST API actions for Amazon S3 compatible storage on Snowball Edge
- Using Amazon S3 compatible storage on Snowball Edge with a cluster of Snow devices
- Configuring Amazon S3 compatible storage on Snowball Edge event notifications
- Configuring local SMTP notifications on Snowball Edge

### Order Amazon S3 compatible storage on Snowball Edge

Ordering a device for Amazon S3 compatible storage on Snowball Edge is very similar to the process for ordering a Snowball Edge. To order, see <u>Creating a job to order a Snowball Edge device</u> in this guide and keep these items in mind during the ordering process:

- For Choose a job type, choose Local compute and storage only.
- Under Snow devices, choose Snowball Edge Compute Optimized
- Under Select the storage type, select Amazon S3 compatible storage on Snowball Edge.
- For a standalone device, under **Storage capacity**, choose **Single device** and then select your desired storage amount.
- For a cluster, under **Storage capacity** select **Cluster** and then select your desired storage capacity and fault tolerance.

# Setting up and starting Amazon S3 compatible storage on Snowball Edge

Install and configure software tools from Amazon to your local environment to interact with the Snowball Edge device or cluster of devices and Amazon S3 compatible storage on Snowball Edge. Then, use these tools to set up the Snowball Edge device or cluster and start Amazon S3 compatible storage on Snowball Edge.

### **Prerequisites**

Amazon S3 compatible storage on Snowball Edge requires you to have the Snowball Edge Client and the Amazon CLI installed to your local environment. You can also use Amazon SDK for .NET and Amazon Tools for Windows PowerShell to work with Amazon S3 compatible storage on Snowball Edge. Amazon recommends using the following versions of these tools:

- Snowball Edge Client Use the latest version. For more information, see <u>Downloading and installing the Snowball Edge Client</u> in this guide.
- Amazon CLI Version 2.11.15 or newer. For more information, see <u>Installing</u>, <u>updating</u>, and <u>uninstalling the Amazon CLI</u> in the Amazon Command Line Interface User Guide.
- Amazon SDK for .NET AWSSDK.S3Control 3.7.304.8 or newer. For more information, see Amazon SDK for .NET.
- Amazon Tools for Windows PowerShell Version 4.1.476 or newer. For more information, see Amazon Tools for PowerShell User Guide.

### Setting up your local environment

This section describes how to set up and configure the Snowball Edge Client and your local environment for use with Amazon S3 compatible storage on Snowball Edge.

- Download and install the Snowball Edge Client. For more information, see <u>Downloading and</u> <u>installing the Snowball Edge Client</u>.
- Configure a profile for the Snowball Edge Client. For more information, see <u>Configuring a</u> profile for the Snowball Edge Client.
- 3. If you are using Amazon SDK for .NET, set the clientConfig.AuthenticationRegion parameter value as follows:

clientConfig.AuthenticationRegion = "snow"

Prerequisites 277

### Setting up your Snowball Edge device

#### Setting up IAM on the Snowball Edge

Amazon Identity and Access Management (IAM) helps you to enable granular access to Amazon resources that run on your Snowball Edge devices. You use IAM to control who is authenticated (signed in) and authorized (has permissions) to use resources.

IAM is supported locally on the Snowball Edge. You can use the local IAM service to create roles and attach IAM policies to them. You can use these policies to allow the access necessary to perform assigned tasks.

The following example allows full access to the Amazon S3 API:

For more IAM policy examples, see the <u>Amazon Snowball Edge Developer Guide</u>.

### Starting the Amazon S3 compatible storage on Snowball Edge service

Use the following instructions to start the Amazon S3 compatible storage on Snowball Edge service on a Snowball Edge device or cluster.

If you prefer a more user-friendly experience, you can start the Amazon S3 compatible storage on Snowball Edge service for a standalone device or cluster of devices using Amazon OpsHub. See <u>Set</u> up Amazon S3 compatible storage on Snowball Edge with Amazon OpsHub.

- 1. Unlock your Snowball Edge device or cluster of devices by running the following command:
  - For a single device:

```
snowballEdge unlock-device --endpoint https://snow-device-ip
```

For a cluster:

```
snowballEdge unlock-cluster
```

- 2. Run the following command and make sure that the Snowball Edge device or cluster of devices are unlocked:
  - For a single device:

```
snowballEdge describe-device --endpoint https://snow-device-ip
```

• For a cluster:

```
snowballEdge describe-cluster --device-ip-addresses [snow-device-1-ip] [snow-
device-2-ip] /
  [snow-device-3-ip] [snow-device-4-ip] [snow-device-5-ip] /
  [snow-device-6-ip]
```

- 3. For each device (whether you have one or a cluster), to start Amazon S3 compatible storage on Snowball Edge, do the following:
  - a. Fetch the device's PhysicalNetworkInterfaceId by running the following describedevice command:

```
snowballEdge describe-device --endpoint https://snow-device-ip
```

b. Run the following create-virtual-network-interface command twice to create the virtual network interfaces (VNIs) for the s3control (for bucket operations) and s3api (for object operations) endpoints.

```
snowballEdge create-virtual-network-interface --ip-address-assignment
dhcp --manifest-file manifest --physical-network-interface-id
"PhysicalNetworkInterfaceId" --unlock-code unlockcode --endpoint https://snow-device-ip
```

The command returns a JSON structure that includes the IP address. Make a note of that IP address.

For details about these commands, see Setting up a Virtual Network Interface (VNI) on a Snowball Edge.



#### Note

Starting Amazon S3 compatible storage on Snowball Edge consumes device resources.

Start the Amazon S3 compatible storage on Snowball Edge service by running the following start-service command. which includes the IP addresses of your devices and the Amazon Resource Names (ARNs) of the VNIs that you created for the s3control and s3api endpoints:

To start the service on a single device:

```
snowballEdge start-service --service-id s3-snow --device-ip-addresses snow-
device-1-ip --virtual-network-interface-arns vni-arn-1 vni-arn-2
```

To start the service on a cluster:

```
snowballEdge start-service --service-id s3-snow --device-ip-addresses snow-
device-1-ip snow-device-2-ip snow-device-3-ip --virtual-network-interface-arns vni-
arn-1 vni-arn-2 vni-arn-3 vni-arn-4 vni-arn-5 vni-arn-6
```

For --virtual-network-interface-arns, include ARNs for all the VNIs that you created in the previous step. Separate each ARN using a space.

5. Run the following describe-service command for a single device:

```
snowballEdge describe-service --service-id s3-snow
```

Wait until service status is Active.

Run the following describe-service command for a cluster:

```
snowballEdge describe-service --service-id s3-snow \
   --device-ip-addresses snow-device-1-ip snow-device-2-ip snow-device-3-ip
```

### Viewing information about Amazon S3 compatible storage on Snowball Edge endpoints

When the Amazon S3 compatible storage on Snowball Edge service is running, you can use the describe-service Snowball Edge Client command to view the IP addresses associated with the s3control and s3api endpoints.

```
snowballEdge describe-service --service-id s3-snow --endpoint https://snow-device-ip-
address --profile profile-name
```

#### Example output of describe-service command

In this example, the IP address of the s3control endpoint is 192.168.1.222 and the IP address of the s3api endpoint is 192.168.1.152.

```
{
  "ServiceId": "s3-snow",
  "Autostart": true,
  "Status": {
    "State": "ACTIVATING",
    "Details": "Attaching storage"
  },
  "ServiceCapacities": [
      "Name": "S3 Storage",
      "Unit": "Byte",
      "Used": 148599705600,
      "Available": 19351400294400
    }
  ],
  "Endpoints": [
      "Protocol": "https",
```

```
"Port": 443,
      "Host": "192.168.1.222",
      "CertificateAssociation": {
        "CertificateArn": "arn:aws:snowball-
device:::certificate/30c563f1124707705117f57f6c3accd42a4528ed6dba1e35c1822a391a717199d8c49973d3
      },
      "Description": "s3-snow bucket API endpoint (for s3control SDK)",
      "DeviceId": "JID-beta-207429000001-23-12-28-03-51-11",
      "Status": {
        "State": "ACTIVE"
      }
    },
    {
      "Protocol": "https",
      "Port": 443,
      "Host": "192.168.1.152",
      "CertificateAssociation": {
        "CertificateArn": "arn:aws:snowball-
device:::certificate/30c563f1124707705117f57f6c3accd42a4528ed6dba1e35c1822a391a717199d8c49973d3
      },
      "Description": "s3-snow object & bucket API endpoint (for s3api SDK)",
      "DeviceId": "JID-beta-207429000001-23-12-28-03-51-11",
      "Status": {
        "State": "ACTIVATING"
    }
  ]
}
```

# Working with S3 buckets with Amazon S3 compatible storage on Snowball Edge

With Amazon S3 compatible storage on Snowball Edge, you can create Amazon S3 buckets on your Snowball Edge devices to store and retrieve objects on premises for applications that require local data access, local data processing, and data residency. Amazon S3 compatible storage on Snowball Edge provides a new storage class, SNOW, which uses the Amazon S3 APIs, and is designed to store data durably and redundantly across multiple Snowball Edge devices. You can use the same APIs and features on Snowball Edge buckets that you do on Amazon S3, including bucket lifecycle policies, encryption, and tagging.

Working with S3 buckets 282

You can use Amazon S3 compatible storage on Snowball Edge using the Amazon Command Line Interface (Amazon CLI) or programatically through the Amazon Java SDK. With the Amazon CLI, you can set up an s3api or s3control endpoint and interact with it through commands. We recommend using the s3api endpoint because the same endpoint can be used for bucket and object operations.



#### Note

The s3api endpoint is available for version 8004 and newer of the Snowball Edge software. To find the version of the Snowball Edge software installed on a device, use the snowballEdge check-for-updates command. To update a Snowball Edge device, see Updating software on Snowball Edge devices.

### **Using the Amazon CLI**

Follow these instructions to work with Amazon S3 buckets on your device using the Amazon CLI.

#### To set up the Amazon CLI

Create a profile for object endpoints in ~/.aws/config.

```
[profile your-profile]
aws_access_key_id = your-access-id
aws_secret_access_key = your-access-key
region = snow
ca_bundle = dev/apps/ca-certs/your-ca_bundle
```

- Obtain a certificate from your device. For information, see the Snowball Edge Developer Guide. 2.
- 3. If you installed the SDK in a virtual environment, activate it using the following command:

```
source your-virtual-environment-name/bin/activate
```

After you set up your operations, you can use the s3api SDK or s3control SDK to access S3 buckets on Snowball Edge with the Amazon CLI.

#### Example of accessing S3 bucket using the s3api SDK

Using the Amazon CLI 283

```
aws s3api list-buckets --endpoint-url https://s3api-endpoint-ip --profile your-profile
```

#### Example of accessing S3 buckets using the s3control SDK

```
aws s3control list-regional-buckets --account-id <a href="mailto:bucket-owner">bucket-owner</a> --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profile
```

#### Example of accessing S3 objects using the s3api SDK

```
aws s3api list-objects-v2 --endpoint-url https://s3api-endpoint-ip --profile your-profile
```

### **Using the Java SDK**

Use the following example to work with Amazon S3 buckets and objects using the Java SDK.

```
import software.amazon.awssdk.services.s3.S3Client;
import software.amazon.awssdk.auth.credentials.AwsBasicCredentials;
import software.amazon.awssdk.auth.credentials.StaticCredentialsProvider;
import software.amazon.awssdk.http.SdkHttpClient;bg
import software.amazon.awssdk.http.apache.ApacheHttpClient;
import software.amazon.awssdk.regions.Region;
import java.net.URI;
AwsBasicCredentials creds = AwsBasicCredentials.create(accessKey, secretKey); // set
 creds by getting Access Key and Secret Key from snowball edge
SdkHttpClient httpClient =
 ApacheHttpClient.builder().tlsTrustManagersProvider(trustManagersProvider).build(); //
 set trust managers provider with client certificate from snowball edge
String s3SnowEndpoint = "10.0.0.0"; // set s3-snow object api endpoint from describe
 service
S3Client s3Client =
 S3Client.builder().httpClient(httpClient).region(Region.of("snow")).endpointOverride(new
 URI(s3SnowEndpoint)).credentialsProvider(StaticCredentialsProvider.create(creds)).build();
```

Using the Java SDK 284

#### **Bucket ARN format**

You can use the Amazon Resource Name (ARN) format listed here to identify an Amazon S3 bucket on a Snowball Edge device:

```
arn:partition:s3:snow:account-id:device/device-id/bucket/bucket-name
```

Where *partition* is the partition of the Region where you ordered your Snowball Edge device. *device-id* is the job\_id if the device is a standalone Snowball Edge device, or the *cluster\_id* if you have a Snowball Edge cluster.

#### **Bucket location format**

The bucket location format specifies the Snowball Edge device where the bucket will be created. The bucket location has the following format:

```
/device-id/bucket/bucket-name
```

For more information, see create-bucket in the Amazon CLI Command Reference.

# Determining whether you can access an Amazon S3 compatible storage on Snowball Edge bucket on a Snowball Edge

The following example uses the head-bucket command to determine if an Amazon S3 bucket exists and you have permissions to access it using the Amazon CLI. To use this command, replace each user input placeholder with your own information.

```
aws s3api head-bucket --bucket sample-bucket --endpoint-url https://s3api-endpoint-ip --profile your-profile
```

# Retrieving a list of buckets or regional buckets in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

Use the list-regional-buckets or list-buckets to list Amazon S3 compatible storage on Snowball Edge buckets using the Amazon CLI.

Bucket ARN format 285

#### Example of retrieving a list of buckets or regional buckets with Amazon CLI

s3api syntax

```
aws s3api list-buckets --endpoint-url https://s3api-endpoint-ip --profile your-profile
```

For more information about the list-buckets command, see <u>list-buckets</u> in the Amazon CLI Command Reference

s3control syntax

```
aws s3control list-regional-buckets --account-id 123456789012 --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profiles
```

For more information about the list-regional-buckets command, see <u>list-regional-buckets</u> in the Amazon CLI Command Reference.

The following SDK for Java example gets a list of buckets on Snowball Edge devices. For more information, see ListBuckets in the Amazon Simple Storage Service API Reference.

```
import com.amazonaws.services.s3.model.*;
public void listBuckets() {
   ListBucketsRequest reqListBuckets = new ListBucketsRequest()
   .withAccountId(AccountId)
   ListBucketsResult respListBuckets = s3APIClient.RegionalBuckets(reqListBuckets);
   System.out.printf("ListBuckets Response: %s%n", respListBuckets.toString());
}
```

The following PowerShell example gets a list of buckets on Snowball Edge devices.

```
Get-S3CRegionalBucketList -AccountId 012345678910 -Endpoint "https://snowball_ip" - Region snow
```

The following .NET example gets a list of buckets on Snowball Edge devices.

```
using Amazon.S3Control;
using Amazon.S3Control.Model;
namespace SnowTest;
internal class Program
{
    static async Task Main(string[] args)
    {
        var config = new AmazonS3ControlConfig
            ServiceURL = "https://snowball_ip",
            AuthenticationRegion = "snow" // Note that this is not RegionEndpoint
        };
        var client = new AmazonS3ControlClient(config);
        var response = await client.ListRegionalBucketsAsync(new
 ListRegionalBucketsRequest()
        {
            AccountId = "012345678910"
        });
    }
}
```

# Getting a bucket with Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

The following example gets an Amazon S3 compatible storage on Snowball Edge bucket using the Amazon CLI. To use this command, replace each user input placeholder with your own information.

```
aws s3control get-bucket --account-id 123456789012 --bucket amzn-s3-demo-bucket --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profile
```

For more information about this command, see get-bucket in the Amazon CLI Command Reference.

The following Amazon S3 compatible storage on Snowball Edge example gets a bucket using the SDK for Java. For more information, see <u>GetBucket</u> in the <u>Amazon Simple Storage Service API</u> Reference.

Getting a bucket 287

```
import com.amazonaws.services.s3control.model.*;

public void getBucket(String bucketName) {

   GetBucketRequest reqGetBucket = new GetBucketRequest()
        .withBucket(bucketName)
        .withAccountId(AccountId);

   GetBucketResult respGetBucket = s3ControlClient.getBucket(reqGetBucket);
   System.out.printf("GetBucket Response: %s%n", respGetBucket.toString());
}
```

# Creating an S3 bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

You can create Amazon S3 buckets on your Snowball Edge device to store and retrieve objects at the edge for applications that require local data access, local data processing, and data residency. Amazon S3 compatible storage on Snowball Edge provides a new storage class, SNOW, which uses Amazon S3 and is designed to store data durably and redundantly across multiple devices. You can use the same APIs and features as you do on Amazon S3 buckets, including bucket lifecycle policies, encryption, and tagging.

The following example creates an Amazon S3 bucket for a Snowball Edge device using the Amazon CLI. To run this command, replace the user input placeholders with your own information.

#### Example of creating an S3 bucket

s3api syntax

```
aws s3api create-bucket --bucket your-snow-bucket --endpoint-url https://s3api-
endpoint-ip --profile your-profile
```

#### s3control syntax

Creating an S3 bucket 288

```
aws s3control create-bucket --bucket your-snow-bucket --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profile
```

## Deleting a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

You can use the s3api SDK or s3control SDK to delete a bucket in Amazon S3 compatible storage on Snowball Edge.

#### Important

- The Amazon Web Services account that creates the bucket owns it and is the only one that can delete it.
- Snowball Edge buckets must be empty before they can be deleted.
- You cannot recover a bucket after it has been deleted.

The following examples delete an Amazon S3 compatible storage on Snowball Edge bucket using the Amazon CLI. To use this command, replace each user input placeholder with your own information.

#### Example of deleting a bucket

s3api syntax

```
aws s3api delete-bucket --bucket amzn-s3-demo-bucket --endpoint-url https://s3api-endpoint-ip --profile your-profile
```

For more information about this command, see <u>delete-bucket</u> in the Amazon CLI Command Reference.

s3control syntax

```
aws s3control delete-bucket --account-id 123456789012 --bucket amzn-s3-demo-bucket --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profile
```

Deleting a bucket 289

For more information about this command, see delete-bucket in the Amazon CLI Command Reference.

### Creating and managing an object lifecycle configuration using the Amazon CLI

You can use Amazon S3 Lifecycle to optimize storage capacity for Amazon S3 compatible storage on Snowball Edge. You can create lifecycle rules to expire objects as they age or are replaced by newer versions. You can create, enable, disable, or delete a lifecycle rule. For more information about Amazon S3 Lifecycle, see Managing your storage lifecycle.



#### Note

The Amazon Web Services account that creates the bucket owns it and is the only one that can create, enable, disable, or delete a lifecycle rule.

To create and manage a lifecycle configuration for an Amazon S3 compatible storage on Snowball Edge bucket using the Amazon Command Line Interface (Amazon CLI), see the following examples.

### PUT a lifecycle configuration on a Snowball Edge bucket

The following Amazon CLI example puts a lifecycle configuration policy on a Snowball Edge bucket. This policy specifies that all objects that have the flagged prefix (myprefix) and tags expire after 10 days. To use this example, replace each user input placeholder with your own information.

First, save the lifecycle configuration policy to a JSON file. For this example, the file is named lifecycle-example.json.

```
{
    "Rules": [{
        "ID": "id-1",
        "Filter": {
             "And": {
                 "Prefix": "myprefix",
                "Tags": [{
                         "Value": "mytagvalue1",
                         "Key": "mytagkey1"
```

After you save the file, submit the JSON file as part of the put-bucket-lifecycle-configuration command. To use this command, replace each user input placeholder with your own information.

#### Example of put-bucket-lifecycle command

s3api syntax

```
aws s3api put-bucket-lifecycle-configuration --bucket example-snow-bucket \\
    --lifecycle-configuration file://lifecycle-example.json --endpoint-url
https://s3api-endpoint-ip --profile your-profile
```

For more information about this command, see <u>put-bucket-lifecycle-configuration</u> in the Amazon CLI Command Reference.

s3control syntax

```
aws s3control put-bucket-lifecycle-configuration --bucket example-snow-bucket \\
    --lifecycle-configuration file://lifecycle-example.json \\
    --endpoint-url https://s3ctrlapi-endpoint-ip --profile your-profile
```

For more information about this command, see <u>put-bucket-lifecycle-configuration</u> in the Amazon CLI Command Reference.

# Copying an object to an Amazon S3 compatible storage on Snowball Edge bucket on a Snowball Edge

The following example uploads a file named <u>sample-object.xml</u> to an Amazon S3 compatible storage on Snowball Edge bucket that you have write permissions for using the Amazon CLI. To use this command, replace each user input placeholder with your own information.

```
aws s3api put-object --bucket sample-bucket --key sample-object.xml --body sample-object.xml --endpoint-url s3api-endpoint-ip --profile your-profile
```

The following Amazon S3 compatible storage on Snowball Edge example copies an object into a new object in the same bucket using the SDK for Java. To use this command, replace each user input placeholder with your own information.

```
import com.amazonaws.AmazonServiceException;
import com.amazonaws.SdkClientException;
import com.amazonaws.services.s3.AmazonS3;
import com.amazonaws.services.s3.AmazonS3ClientBuilder;
import com.amazonaws.services.s3.model.CopyObjectRequest;
add : import java.io.IOException;
public class CopyObject {
    public static void main(String[] args) {
        String bucketName = "*** Bucket name ***";
        String sourceKey = "*** Source object key ***";
        String destinationKey = "*** Destination object key ***";
        try {
            // This code expects that you have AWS credentials set up per:
            // https://docs.aws.amazon.com/sdk-for-java/v1/developer-guide/setup-
credentials.html
            AmazonS3 s3Client = AmazonS3ClientBuilder.standard()
                    .enableUseArnRegion()
                    .build();
            // Copy the object into a new object in the same bucket.
            CopyObjectRequest copyObjectRequest = new CopyObjectRequest(sourceKey,
 destinationKey);
            s3Client.copyObject(copyObjectRequest);
            CopyObjectRequest copyObjectRequest = CopyObjectRequest.builder()
```

Copying an object 292

# Listing objects in a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

The following example lists objects in an Amazon S3 compatible storage on Snowball Edge bucket using the Amazon CLI. The SDK command is s3-snow:ListObjectsV2. To use this command, replace each user input placeholder with your own information.

```
aws s3api list-objects-v2 --bucket sample-bucket --endpoint-url s3api-endpoint-ip -- profile your-profile
```

For more information about this command, see <u>list-objects-v2</u> in the *Amazon CLI Command Reference*.

The following Amazon S3 compatible storage on Snowball Edge example lists objects in a bucket using the SDK for Java. To use this command, replace each user input placeholder with your own information.

This example uses <u>ListObjectsV2</u>, which is the latest revision of the ListObjects API operation. We recommend that you use this revised API operation for application development. For backward compatibility, Amazon S3 continues to support the prior version of this API operation.

```
import com.amazonaws.AmazonServiceException;
import com.amazonaws.SdkClientException;
```

Listing objects 293

```
import com.amazonaws.services.s3.AmazonS3;
import com.amazonaws.services.s3.AmazonS3ClientBuilder;
import com.amazonaws.services.s3.model.ListObjectsV2Request;
import com.amazonaws.services.s3.model.ListObjectsV2Result;
import com.amazonaws.services.s3.model.S30bjectSummary;
public class ListObjectsV2 {
    public static void main(String[] args) {
        String bucketName = "*** Bucket name ***";
        try {
            // This code expects that you have AWS credentials set up per:
            // https://docs.aws.amazon.com/sdk-for-java/v1/developer-guide/setup-
credentials.html
            AmazonS3 s3Client = AmazonS3ClientBuilder.standard()
                    .enableUseArnRegion()
                    .build();
            System.out.println("Listing objects");
            // maxKeys is set to 2 to demonstrate the use of
            // ListObjectsV2Result.getNextContinuationToken()
            ListObjectsV2Request req = new
 ListObjectsV2Request().withBucketName(bucketName).withMaxKeys(2);
            ListObjectsV2Result result;
            do {
                result = s3Client.listObjectsV2(req);
                for (S30bjectSummary objectSummary : result.getObjectSummaries()) {
                    System.out.printf(" - %s (size: %d)\n", objectSummary.getKey(),
 objectSummary.getSize());
                }
                // If there are more than maxKeys keys in the bucket, get a
 continuation token
                // and list the next objects.
                String token = result.getNextContinuationToken();
                System.out.println("Next Continuation Token: " + token);
                req.setContinuationToken(token);
            } while (result.isTruncated());
        } catch (AmazonServiceException e) {
            // The call was transmitted successfully, but Amazon S3 couldn't process
            // it, so it returned an error response.
```

Listing objects 294

```
e.printStackTrace();
} catch (SdkClientException e) {
    // Amazon S3 couldn't be contacted for a response, or the client
    // couldn't parse the response from Amazon S3.
    e.printStackTrace();
}
}
```

# Getting an object from a bucket in Amazon S3 compatible storage on Snowball Edge on a Snowball Edge

The following example gets an object named <code>sample-object.xml</code> from an Amazon S3 compatible storage on Snowball Edge bucket using the Amazon CLI. The SDK command is s3-snow: GetObject. To use this command, replace each user input placeholder with your own information.

```
aws s3api get-object --bucket sample-bucket --key sample-object.xml --endpoint-url s3api-endpoint-ip --profile your-profile
```

For more information about this command, see get-object in the Amazon CLI Command Reference.

The following Amazon S3 compatible storage on Snowball Edge example gets an object using the SDK for Java. To use this command, replace each user input placeholder with your own information. For more information, see <a href="Mailto:GetObject">GetObject</a> in the <a href="Amazon Simple Storage Service API">Amazon Simple Storage Service API</a> Reference.

```
import com.amazonaws.AmazonServiceException;
import com.amazonaws.SdkClientException;
import com.amazonaws.services.s3.AmazonS3;
import com.amazonaws.services.s3.AmazonS3ClientBuilder;
import com.amazonaws.services.s3.model.GetObjectRequest;
import com.amazonaws.services.s3.model.ResponseHeaderOverrides;
import com.amazonaws.services.s3.model.S3Object;

import java.io.BufferedReader;
import java.io.IOException;
import java.io.InputStream;
```

Getting an object 295

```
import java.io.InputStreamReader;
public class GetObject {
    public static void main(String[] args) throws IOException {
        String bucketName = "*** Bucket name ***";
        String key = "*** Object key ***";
        S30bject fullObject = null, objectPortion = null, headerOverrideObject = null;
        try {
            // This code expects that you have AWS credentials set up per:
            // https://docs.aws.amazon.com/sdk-for-java/v1/developer-guide/setup-
credentials.html
            AmazonS3 s3Client = AmazonS3ClientBuilder.standard()
                    .enableUseArnRegion()
                    .build();
            GetObjectRequest getObjectRequest = GetObjectRequest.builder()
                    .bucket(bucketName)
                    .key(key)
                    .build());
s3Client.getObject(getObjectRequest);
        } catch (AmazonServiceException e) {
            // The call was transmitted successfully, but Amazon S3 couldn't process
            // it, so it returned an error response.
            e.printStackTrace();
        } catch (SdkClientException e) {
            // Amazon S3 couldn't be contacted for a response, or the client
            // couldn't parse the response from Amazon S3.
            e.printStackTrace();
        } finally {
            // To ensure that the network connection doesn't remain open, close any
 open input streams.
            if (fullObject != null) {
                fullObject.close();
            }
            if (objectPortion != null) {
                objectPortion.close();
            }
            if (headerOverrideObject != null) {
                headerOverrideObject.close();
            }
        }
    }
```

Getting an object 296

```
private static void displayTextInputStream(InputStream input) throws IOException {
    // Read the text input stream one line at a time and display each line.
    BufferedReader reader = new BufferedReader(new InputStreamReader(input));
    String line = null;
    while ((line = reader.readLine()) != null) {
        System.out.println(line);
    }
    System.out.println();
}
```

# Deleting objects in buckets in Amazon S3 compatible storage on Snowball Edge

You can delete one or more objects from an Amazon S3 compatible storage on Snowball Edge bucket. The following example deletes an object named <code>sample-object.xml</code> using the Amazon CLI. To use this command, replace each user input placeholder with your own information.

```
aws s3api delete-object --bucket sample-bucket --key key --endpoint-url s3api-endpoint-ip --profile your-profile
```

For more information about this command, see <u>delete-object</u> in the *Amazon CLI Command Reference*.

The following Amazon S3 compatible storage on Snowball Edge example deletes an object in a bucket using the SDK for Java. To use this example, specify the key name for the object that you want to delete. For more information, see <a href="DeleteObject">DeleteObject</a> in the Amazon Simple Storage Service API Reference.

```
import com.amazonaws.AmazonServiceException;
import com.amazonaws.SdkClientException;
import com.amazonaws.services.s3.AmazonS3;
import com.amazonaws.services.s3.AmazonS3ClientBuilder;
import com.amazonaws.services.s3.model.DeleteObjectRequest;

public class DeleteObject {
    public static void main(String[] args) {
```

Deleting objects 297

```
String bucketName = "*** Bucket name ***";
        String keyName = "*** key name ****";
        try {
            // This code expects that you have AWS credentials set up per:
            // https://docs.aws.amazon.com/sdk-for-java/v1/developer-guide/setup-
credentials.html
            AmazonS3 s3Client = AmazonS3ClientBuilder.standard()
                    .enableUseArnRegion()
                    .build();
            DeleteObjectRequest deleteObjectRequest = DeleteObjectRequest.builder()
                    .bucket(bucketName)
                    .key(keyName)
                    .build());
            s3Client.deleteObject(deleteObjectRequest);
        } catch (AmazonServiceException e) {
            // The call was transmitted successfully, but Amazon S3 couldn't process
            // it, so it returned an error response.
            e.printStackTrace();
        } catch (SdkClientException e) {
            // Amazon S3 couldn't be contacted for a response, or the client
            // couldn't parse the response from Amazon S3.
            e.printStackTrace();
        }
    }
}
```

# Supported REST API actions for Amazon S3 compatible storage on Snowball Edge

The following lists show the API operations that are supported by Amazon S3 compatible storage on Snowball Edge, including links to the related operations for Amazon S3 in Amazon Web Services Regions.

Supported bucket API operations for the s3api endpoint:

- CreateBucket
- DeleteBucket
- DeleteBucketLifecycle

- GetBucketLifecycleConfiguration
- ListBuckets
- PutBucketLifecycleConfiguration

#### Supported bucket API operations for the s3control endpoint:

- CreateBucket
- DeleteBucket
- DeleteBucketLifecycle
- GetBucket
- GetBucketLifecycleConfiguration
- ListBuckets
- PutBucketLifecycleConfiguration

#### Supported object API operations:

- AbortMultipartUpload
- CompleteMultipartUpload
- CopyObject
- CreateMultipartUpload
- DeleteObject
- DeleteObjects
- DeleteObjectTagging
- GetObject
- GetObjectTagging
- HeadBucket
- HeadObject
- ListMultipartUploads
- ListObjects
- ListObjectsV2

- ListParts
- PutObject
- PutObjectTagging
- UploadPart
- UploadPartCopy

## Using Amazon S3 compatible storage on Snowball Edge with a cluster of Snow devices

A cluster is a collection of three or more Snowball Edge devices used as a single logical unit for local storage and compute purposes. A cluster offers two primary benefits over a standalone Snowball Edge device for local storage and computing:

- Increased durability The S3 data stored in a cluster of Snowball Edge devices enjoys increased data durability over a single device. In addition, the data on the cluster remains safe and viable, despite possible hardware outages affecting the cluster. Clusters can withstand the loss of one device in clusters of 3 and 4 devices and up to two devices in clusters of 5 to 16 devices before the data is in danger. You can replace unhealthy nodes to maintain the durability and safety of data stored in the cluster.
- Increased storage With Snowball Edge storage optimized devices, you can create a single, 16 node cluster with up to 2.6 PB of usable S3-compatible storage capacity. With Snowball Edge compute optimized devices, you can create a single, 16 node cluster of up to 501 TB of usable S3-compatible storage capacity.

A cluster of Snowball Edge devices is made of leaderless nodes. Any node can write data to and read data from the entire cluster, and all nodes are capable of performing the behind-the-scenes management of the cluster.

Keep the following considerations in mind when planning to use a cluster of Snowball Edge devices:

- We recommend that you provide a redundant power source for all devices in the cluster to reduce potential performance and stability issues for the cluster.
- As with standalone local storage and compute jobs, the data stored in a cluster can't be imported into Amazon S3 without ordering additional devices as a part of separate import jobs. If you

order additional devices as import jobs, you can transfer the data from the cluster to the import job devices.

- To get data onto a cluster from Amazon S3, use the Amazon S3 API to create Amazon S3 buckets
  on the cluster to store and retrieve objects from S3. Also, you can use Amazon DataSync to
  transfer objects between Amazon storage services and Amazon S3 compatible storage on
  Snowball Edge on a Snowball Edge device. For more information, see Configuring transfers with
  S3 compatible storage on Snowball Edge.
- You can create a job to order a cluster of devices from the Amazon Snow Family Management Console, the Amazon CLI, or one of the Amazon SDKs. For more information, see <u>Getting started</u> with Snowball Edge.
- Each device in the cluster has a node ID. A *node ID* is a unique identifier for each device in the cluster, like a job ID for a standalone device. You can get node IDs from the Amazon Snow Family Management Console, the Amazon CLI, the Amazon SDKs, and the Snowball Edge client. The Snowball Edge client commands describe-device and describe-cluster return node IDs with other information about devices or the cluster.
- The lifespan of a cluster is limited by the security certificate granted to the cluster devices
  when the cluster is provisioned. By default, Snowball Edge devices can be used for up to 360
  days before they need to be returned. At the end of that time, the devices stop responding to
  read/write requests. If you need to keep one or more devices for longer than 360 days, contact
  Amazon Web Services Support.
- When Amazon receives a returned device that was part of a cluster, we perform a complete erasure of the device. This erasure follows the National Institute of Standards and Technology (NIST) 800-88 standards.

#### Amazon S3 compatible storage on Snowball Edge cluster fault tolerance and storage capacity

Cluster size	Fault tolerance	Storage capacity of Snowball Edge Compute Optimized (Compute Optimized with AMD EPYC Gen2 and NVMe) devices (in TB)	Storage capacity of Snowball Edge storage optimized 210 TB devices (in TB)
3	Loss of up to 1 node	38	438

Cluster size	Fault tolerance	Storage capacity of Snowball Edge Compute Optimized (Compute Optimized with AMD EPYC Gen2 and NVMe) devices (in TB)	Storage capacity of Snowball Edge storage optimized 210 TB devices (in TB)
4	Loss of up to 1 node	57	657
5	Loss of up to 2 nodes	57	657
6	Loss of up to 2 nodes	76	904
7	Loss of up to 2 nodes	95	1096
8	Loss of up to 2 nodes	114	1315
9	Loss of up to 2 nodes	133	1534
10	Loss of up to 2 nodes	152	1754
11	Loss of up to 2 nodes	165	1970
12	Loss of up to 2 nodes	171	1973
13	Loss of up to 2 nodes	190	2192
14	Loss of up to 2 nodes	209	2411
15	Loss of up to 2 nodes	225	2625
16	Loss of up to 2 nodes	228	2631

After you unlock a cluster, you're ready to store and access data on that cluster. You can use the Amazon S3 compatible endpoint to read from and write data to a cluster.

To read from or write data to a cluster, you must have a read/write quorum with no more than the allowed number of unavailable nodes in your cluster of devices.

### **Snowball Edge cluster quorums**

A quorum represents the minimum number of Snowball Edge devices in a cluster that must be communicating with each other to maintain a read/write quorum.

When all devices in a cluster are healthy, you have a read/write quorum for your cluster. If one or two of those devices goes offline, you reduce the operational capacity of the cluster. However, you can still read and write to the cluster. With all but one or two devices the cluster operating, the cluster still has a read/write quorum. The number of nodes that can go offline before the operational capacity of the cluster is affected is found in this table.

Quorom may be lost if a cluster loses more than the number of devices indicated in this table. When a quorom is lost, the cluster is offline and the data in the cluster is unavailable. You might be able fix this, or the data might be permanently lost, depending on the severity of the event. If it is a temporary external power event, and you can power the Snowball Edge devices back on and unlock all the nodes in the cluster, your data is available again.

#### Important

If a minimum quorum of healthy nodes doesn't exist, contact Amazon Web Services Support.

You can use the describe-cluster command to view the lock state and network reachability of each node. Ensuring that the devices in your cluster are healthy and connected is an administrative responsibility that you take on when you using cluster storage. For more information, see Getting device status.

If you determine one or more nodes are unhealthy, you can replace nodes in the cluster to maintain guorom and the health and stability of your data. For more information, see Replacing a node in a cluster.

### Reconnecting an unavailable cluster node

A node, or device within a cluster, can become temporarily unavailable due to an issue like power or network loss without damaging the data on the node. When this happens, it affects the status of your cluster. A node's network reachability and lock status is reported in the Snowball Edge client by using the snowballEdge describe-cluster command.

We recommend that you physically position your cluster so you have access to the front, back, and top of all nodes. This way, you can access power and network cables on the back, shipping labels on the top for node IDs, and LCD screens on the front of the devices for the IP addresses and other administrative information.

When you detect that a node is unavailable, we recommend that you try one of the following procedures, depending on the scenario that caused the node to become unavailable.

#### To reconnect an unavailable node

- 1. Ensure that the node is powered on.
- 2. Ensure that the node is connected to the same internal network that the rest of the cluster is connected to.
- 3. If you need to power up the node, wait up to 20 minutes for it to finish.
- Run the snowballEdge unlock-cluster command or the snowballEdge associatedevice command. For an example, see Unlocking Snowball Edge devices.

#### To reconnect an unavailable node that lost network connectivity, but didn't lose power

- 1. Ensure that the node is connected to the same internal network that the rest of the cluster is on.
- Run the snowballEdge describe-device command to see when the previously unavailable node is added back to the cluster. For an example, see Getting Device Status.

After you perform the preceding procedures, your nodes should be working normally. You should also have a read/write quorum. If that's not the case, then one or more of your nodes might have a more serious issue and might need to be removed from the cluster.

### Replacing a node in a cluster

To replace a node, you first need to order a replacement. You can order a replacement node from the console, the Amazon CLI, or one of the Amazon SDKs. If you're ordering a replacement node from the console, you can order replacements for any job that hasn't been canceled or completed. Then, you diassociate the unhealthy node from the cluster, connect the replacement node to your network and unlock the cluster including the replacement node, associate the replacement node with the cluster, and restart the Amazon S3 compatible storage on Snowball Edge service.

#### To order a replacement node from the console

- 1. Sign in to the Amazon Snow Family Management Console.
- 2. Find and choose a job for a node that belongs to the cluster that you created from the Job dashboard.
- For Actions, choose Replace node.

Doing this opens the final step of the job creation wizard, with all settings identical to how the cluster was originally created.

4. Choose **Create job**.

Your replacement Snowball Edge is now on its way to you. Use the following procedure to remove the unhealthy node from the cluster.

#### To remove a node from a cluster

- 1. Power off the node to be removed. For more information, see Powering off the Snowball Edge.
- Use the describe-cluster command to ensure the unhealthy node unreachable. This is indicated by the value of UNREACHABLE for the State name of the NetworkReachability object.

```
snowballEdge describe-cluster --manifest-file path/to/manifest/file.bin --unlock-
code unlock-code --endpoint https://ip-address-of-device-in-cluster
```

#### Example of describe-cluster output

```
},
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
        {
            "DeviceId": "JID12345678-1234-1234-1234-123456789013",
            "UnlockStatus": {
                "State": "UNLOCKED"
            },
            "ActiveNetworkInterface": {
                "IpAddress": "10.0.0.1"
            },
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
            "DeviceId": "JID12345678-1234-1234-1234-123456789014",
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "UNREACHABLE"
            }
        }
    ]
}
```

3. Use the describe-service command to ensure the status of the s3-snow service is DEGRADED.

```
snowballEdge describe-service --service-id s3-snow --device-ip-addresses snow-
device-1-address snow-device-2-address --manifest-file path/to/manifest/file.bin --
unlock-code unlock-code --endpoint https://snow-device-ip-address
```

#### Example of output of describe-service command

```
{
    "ServiceId": "s3-snow",
   "Autostart": true,
    "Status": {
        "State": "DEGRADED"
   },
    "ServiceCapacities": [
        {
            "Name": "S3 Storage",
            "Unit": "Byte",
            "Used": 38768180432,
            "Available": 82961231819568
       }
   ],
    "Endpoints": [
       {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.10",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            "Description": "s3-snow bucket API endpoint (for s3control SDK)",
            "DeviceId": "JID-beta-207012320001-24-02-05-17-17-26",
            "Status": {
                "State": "ACTIVE"
            }
       },
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.11",
```

```
"CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            "Description": "Description" : "s3-snow object & bucket API endpoint
 (for s3api SDK)",
            "DeviceId": "JID-beta-207012320001-24-02-05-17-17-26",
            "Status": {
                "State": "ACTIVE"
            }
       },
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.12",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "Description": "s3-snow bucket API endpoint (for
 s3control SDK)",
            "DeviceId": "JID-beta-207012240003-24-02-05-17-17-27",
            "Status": {
                "State": "ACTIVE"
            }
       },
        {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.13",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rq2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "Description": "s3-snow object & bucket API endpoint
 (for s3api SDK)",
            "DeviceId": "JID-beta-207012320001-24-02-05-17-17-27",
            "Status": {
                "State": "ACTIVE"
            }
       }
    ]
}
```

4. Use the disassociate-device command to disassociate and remove the unhealthy node from the cluster.

```
snowballEdge disassociate-device --device-id device-id --manifest-file path/to/
manifest/file.bin --unlock-code unlock-code --endpoint https://ip-address-of-
unhealthy-device
```

#### Example output of disassociate-device command

Disassociating your Snowball Edge device from the cluster. Your Snowball Edge device will be disassociated from the cluster when it is in the "DISASSOCIATED" state. You can use the describe-cluster command to determine the state of your cluster.

5. Use the describe-cluster command again to ensure the unhealthy node is disassociated from the cluster.

```
snowballEdge describe-cluster --manifest-file path/to/manifest/file.bin --unlock-
code unlock-code --endpoint https:ip-address-of-healthy-device
```

#### Example of describe-cluster command showing node is disassociated

```
},
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
            "DeviceId": "JID12345678-1234-1234-1234-123456789013",
            "UnlockStatus": {
                "State": "UNLOCKED"
            },
            "ActiveNetworkInterface": {
                "IpAddress": "10.0.0.1"
            },
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
            "DeviceId": "JID12345678-1234-1234-1234-123456789014",
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "DISASSOCIATED"
            }
        }
    ]
}
```

6. Power off and return the unhealthy device to Amazon. For more information, see <u>Powering off</u> the Snowball Edge and <u>Returning the Snowball Edge Device</u>.

When the replacement device arrives, use the following procedure to add it to the cluster.

#### To add a replacement device

- Position the replacement device for the cluster such that you have access to the front, back, and top of all devices.
- 2. Power up the node and ensure that the node is connected to the same internal network as the rest of the cluster. For more information, see Connecting to Your Local Network.
- 3. Use the unlock-cluster command and include the IP address of the new node.

```
snowballEdge unlock-cluster --manifest-file path/to/manifest/file.bin --unlock-code unlock-code --endpoint https://ip-address-of-cluster-device --device-ip-addresses node-1-ip-address node-2-ip-address new-node-ip-address
```

The state of the new node will be DEGRADED until you associate it with the cluster in the next step.

4. Use the associate-device command to associate the replacement node with the cluster.

```
snowballEdge associate-device --device-ip-address new-node-ip-address
```

#### Example of associate-device command output

Associating your Snowball Edge device with the cluster. Your Snowball Edge device will be associated with the cluster when it is in the ASSOCIATED state. You can use the describe-device command to determine the state of your devices.

5. Use the describe-cluster command to ensure the new node is associated with the cluster.

```
snowballEdge describe-cluster --manifest-file path/to/manifest/file.bin --unlock-
code unlock-code --endpoint https://node-ip-address
```

#### Example of describe-cluster command output

```
{
    "ClusterId": "CID12345678-1234-1234-1234-123456789012",
    "Devices": [
        {
            "DeviceId": "JID12345678-1234-1234-1234-123456789012",
            "UnlockStatus": {
                "State": "UNLOCKED"
            },
            "ActiveNetworkInterface": {
                "IpAddress": "10.0.0.0"
            },
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
            "DeviceId": "JID-CID12345678-1234-1234-1234-123456789013",
            "UnlockStatus": {
                "State": "UNLOCKED"
            "ActiveNetworkInterface": {
                "IpAddress": "10.0.0.1"
            },
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            },
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        },
        {
            "DeviceId": "JID-CID12345678-1234-1234-1234-123456789015",
```

```
"UnlockStatus": {
                "State": "UNLOCKED"
            },
            "ActiveNetworkInterface": {
                "IpAddress": "10.0.0.2"
            },
            "ClusterAssociation": {
                "ClusterId": "CID12345678-1234-1234-1234-123456789012",
                "State": "ASSOCIATED"
            "NetworkReachability": {
                "State": "REACHABLE"
            },
            "Tags": []
        }
    }
]
}
```

- 6. On the new node, create two virtual network interfaces (VNIs). For more information, see Starting the Amazon S3 compatible storage on Snowball Edge service
- 7. Use the stop-service command to stop the s3-snow service.

```
snowballEdge stop-service --service-id s3-snow --device-ip-addresses cluster-
device-1-ip-address cluster-device-2-ip-address cluster-device-3-ip-address --
manifest-file path/to/manifest/file.bin --unlock-code unlock-code --endpoint
https://snow-device-ip-address
```

#### Example of stop-service command output

Stopping the Amazon service on your Snowball Edge. You can determine the status of the Amazon service using the describe-service command.

8. Use the start-service command to start the s3-snow service after adding the new node to the cluster.

```
snowballEdge start-service --service-id s3-snow --device-ip-addresses cluster-
device-1-ip-address cluster-device-2-ip-address cluster-device-3-ip-address --
virtual-network-interface-arns "device-1-vni-ip-address-a" "device-1-vni-ip-
address-b" "device-2-vni-ip-address-a" "device-2-vni-ip-address-b" "device-3-vni-
ip-address-a" "device-3-vni-ip-address-b" --manifest-file path/to/manifest/file.bin
--unlock-code unlock-code --endpoint https://snow-device-ip-address
```

### Example of start-service command output

Starting the Amazon service on your Snowball Edge. You can determine the status of the Amazon service using the describe-service command.

9. Use the describe-service command to ensure the s3-snow service started.

```
snowballEdge describe-service --service-id s3-snow --device-ip-addresses snow-device-1-address snow-device-2-address snow-device-3-address --manifest-file path/to/manifest/file.bin --unlock-code unlock-code --endpoint https://snow-device-ip-address
```

#### Example of descibe-service command output

```
{
    "ServiceId": "s3-snow",
    "Autostart": true,
    "Status": {
        "State": "ACTIVE"
    },
    "ServiceCapacities": [{
            "Name": "S3 Storage",
            "Unit": "Byte",
            "Used": 38768180432,
            "Available": 82961231819568
    }],
```

```
"Endpoints": [{
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.10",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rq2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "s3-snow bucket API endpoint (for s3control SDK)",
            "DeviceId": "JID12345678-1234-1234-1234-123456789012",
            "Status": {
                "State": "ACTIVE"
            }
        }, {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.11",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rq2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "s3-snow object & bucket API endpoint (for s3api SDK)",
            "DeviceId": "JID12345678-1234-1234-1234-123456789013",
            "Status": {
                "State": "ACTIVE"
            }
        }, {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.12",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rq2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "s3-snow bucket API endpoint (for s3control SDK)",
            "DeviceId": "JID12345678-1234-1234-1234-123456789015",
            "Status": {
                "State": "ACTIVE"
            }
        }, {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.13",
            "CertificateAssociation": {
```

```
"CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "s3-snow object & bucket API endpoint (for s3api SDK)",
            "DeviceId": "JID-beta-207012320001-24-02-05-17-17-27",
            "Status": {
                "State": "ACTIVE"
            }
        }, {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.14",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            },
            "Description": "s3-snow bucket API endpoint (for s3control SDK)",
            "DeviceId": "JID-beta-207012240003-24-02-05-17-17-28",
            "Status": {
                "State": "ACTIVE"
            }
        }, {
            "Protocol": "https",
            "Port": 443,
            "Host": "10.0.0.15",
            "CertificateAssociation": {
                "CertificateArn": "arn:aws:snowball-
device:::certificate/7Rg2lP9tQaHnW4sC6xUzF1vGyD3jB5kN8MwEiYpT"
            "Description": "s3-snow object & bucket API endpoint (for s3api SDK),
            "DeviceId": "JID-beta-207012320001-24-02-05-17-17-28",
            "Status": {
                "State": "ACTIVE"
            }
        }
   }]
}
```

## Configuring Amazon S3 compatible storage on Snowball Edge event notifications

Amazon S3 compatible storage on Snowball Edge supports Amazon S3 event notifications for object API calls based on the Message Queuing Telemetry Transport (MQTT) protocol.

You can use Amazon S3 compatible storage on Snowball Edge to receive notifications when certain events happen in your S3 bucket. To enable notifications, add a notification configuration that identifies the events that you want the service to publish.

Amazon S3 compatible storage on Snowball Edge supports the following notification types:

- New object created events
- Object removal events
- Object tagging events

#### **Configure Amazon S3 event notifications**

- 1. Before you begin, you must have MQTT infrastructure in your network.
- 2. In your Snowball Edge client, run the snowballEdge configure command to set up the Snowball Edge device.

When prompted, enter the following information:

- The path to your manifest file.
- The device's unlock code.
- The device's endpoint (for example, <a href="https://10.0.0.1">https://10.0.0.1</a>).
- 3. Run the following put-notification-configuration command to send notifications to an external broker.

```
snowballEdge put-notification-configuration --broker-endpoint ssl://mqtt-broker-ip-address:8883 --enabled true --service-id s3-snow --ca-certificate file:path-to-mqtt-broker-ca-cert
```

4. Run the following get-notification-configuration command to verify that everything is set up correctly:

```
snowballEdge get-notification-configuration --service-id s3-snow
```

This returns the broker endpoint and enabled field.

After you configure the entire cluster to send notifications to the MQTT broker in the network, every object API call will result in an event notification.

#### Note

You need to subscribe to the topic s3SnowEvents/Device ID (or Cluster Id if it is a cluster)/bucketName. You can also use wildcards, for example topic name can be # or s3SnowEvents/#.

The following is an example Amazon S3 compatible storage on Snowball Edge event log:

```
{
    "eventDetails": {
        "additionalEventData": {
            "AuthenticationMethod": "AuthHeader",
            "CipherSuite": "ECDHE-RSA-AES128-GCM-SHA256",
            "SignatureVersion": "SigV4",
            "bytesTransferredIn": 1205,
            "bytesTransferredOut": 0,
            "x-amz-id-2": "uLdTfvdGTK1X6TBgCZtDd9Beef8wzUurA+Wpht7rKtfdaNsnxeLILg=="
        },
        "eventName": "PutObject",
        "eventTime": "2023-01-30T14:13:24.772Z",
        "requestAuthLatencyMillis": 40,
        "requestBandwidthKBs": 35,
        "requestID": "140CD93455CB62B4",
        "requestLatencyMillis": 77,
        "requestLockLatencyNanos": 1169953,
        "requestParameters": {
            "Content-Length": "1205",
            "Content-MD5": "GZdTUOhYHvHgQgmaw2g14w==",
            "Host": "10.0.2.251",
            "bucketName": "bucket",
            "key": "file-key"
```

```
},
        "requestTTFBLatencyMillis": 77,
        "responseElements": {
            "ETag": ""19975350e8581ef1e042099ac36825e3"",
            "Server": "AmazonS3",
            "x-amz-id-2": "uLdTfvdGTK1X6TBqCZtDd9Beef8wzUurA+Wpht7rKtfdaNsnxeLILg==",
            "x-amz-request-id": "140CD93455CB62B4"
        },
        "responseStatusCode": 200,
        "sourceIPAddress": "172.31.37.21",
        "userAgent": "aws-cli/1.27.23 Python/3.7.16 Linux/4.14.301-224.520.amzn2.x86_64
 botocore/1.29.23",
        "userIdentity": {
            "identityType": "IAMUser",
            "principalId": "531520547609",
            "arn": "arn:aws:iam::531520547609:root",
            "userName": "root"
        }
    }
}
```

For more information about Amazon S3 event notifications, see Amazon S3 Event Notifications.

## Configuring local SMTP notifications on Snowball Edge

You can set up local notifications for your Snowball Edge devices with Simple Mail Transfer Protocol (SMTP). The local notifications send emails to configured servers when the service state (Active, Degraded, Inactive) changes, or if you cross capacity utilization thresholds of 80%, 90%, or 100%.

Before you begin, confirm that:

- You have access to the latest Snowball Edge client.
- Your device is unlocked and ready to use.
- Your device can connect to the internet (if using Amazon Simple Email Service or external SMTP server) or to a local SMTP server.

## **Configuring the Snowball Edge for local notifications**

Set up a Snowball Edge to send email notifications.

#### To configure the device for SMTP notifications

1. Run the following command to add an SMTP configuration to your device:

```
# If you don't specify a port, port 587 is the default.
SMTP_ENDPOINT=your-local-smtp-server-endpoint:port

# For multiple email recipients, separate with commas
RECIPIENTS_LIST=your-email-address

snowballEdge put-notification-configuration \
    --service-id local-monitoring \
    --enabled true \
    --type smtp \
    --broker-endpoint "$SMTP_ENDPOINT" \
    --sender example-sender@domain.com \
    --recipients "$RECIPIENTS_LIST"
```

You receive a test email from example-sender@domain.com if you're successful.

2. Test the configuration by running the following get-notification-configuration command:

```
snowballEdge get-notification-configuration \
   --service-id local-monitoring
```

The response doesn't include a password or certificate, even if you provide them.


## **Using Amazon EKS Anywhere on Amazon Snow**

Amazon EKS Anywhere on Amazon Snow helps you to create and operate Kubernetes clusters on Snowball Edge. Kubernetes is open-source software that's used for automating deployment, scaling, and management of containerized applications. You can use Amazon EKS Anywhere on a Snowball Edge device with or without an external network connection. To use Amazon EKS Anywhere on a device without an external network connection, provide a container registry to run on the Snowball Edge device. For general information about Amazon EKS Anywhere, see the Amazon EKS Anywhere documentation.

Using Amazon EKS Anywhere on Amazon Snow provides you with these capabilities:

- Provision a Kubernetes (K8s) cluster with Amazon EKS Anywhere CLI (eksctl anywhere) on Snowball Edge compute-optimized devices. You can provision Amazon EKS Anywhere on a single Snowball Edge device or three or more devices for high availability.
- Support for Cilium Container Network Interface (CNI).
- Support for Ubuntu 20.04 as the node operating system.

This diagram illustrates an Amazon EKS Anywhere cluster deployed on a Snowball Edge device.

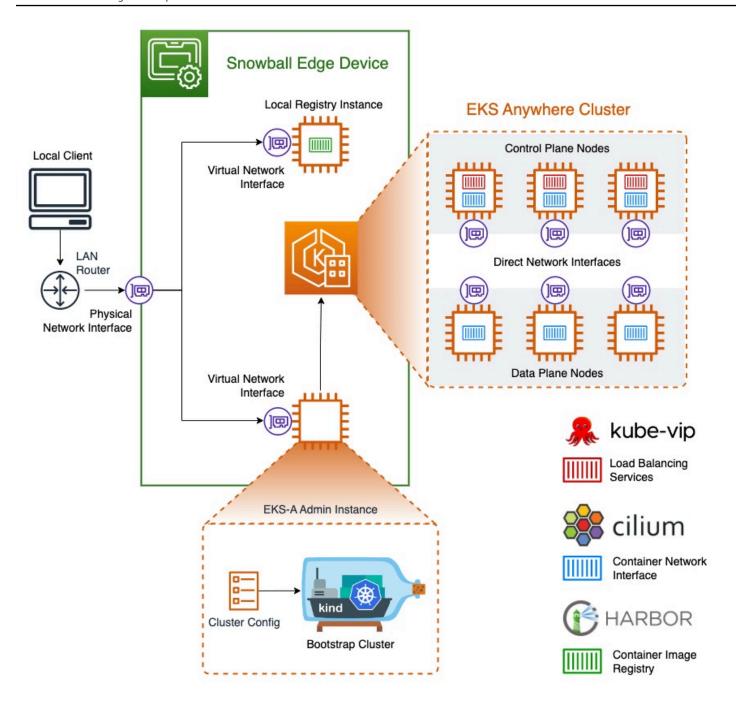

We recommend that you create your Kubernetes cluster with the latest available Kubernetes version supported by Amazon EKS Anywhere. For more information, see <a href="Amazon EKS-Anywhere">Amazon EKS-Anywhere</a> <a href="Versioning">Versioning</a>. If your application requires a specific version of Kubernetes, use any version of Kubernetes offered in standard or extended support by Amazon EKS. Consider the release and support dates of Kubernetes versions when planning the lifecycle of your deployment. This will help you avoid the potential loss of support for the version of Kubernetes you intend to use. For more information, see Amazon EKS Kubernetes release calendar.

For more information about Amazon EKS Anywhere on Amazon Snow, see the <u>Amazon EKS</u> Anywhere documentation.

#### **Topics**

- Actions to complete before ordering a Snowball Edge device for Amazon EKS Anywhere on Amazon Snow
- Ordering a Snowball Edge device for use with Amazon EKS Anywhere on Amazon Snow
- Configuring and running Amazon EKS Anywhere on Snowball Edge devices
- Configuring Amazon EKS Anywhere on Amazon Snow for disconnected operation
- Creating and maintaining clusters on Snowball Edge devices

## Actions to complete before ordering a Snowball Edge device for Amazon EKS Anywhere on Amazon Snow

At this time, Amazon EKS Anywhere is compatible with Snowball Edge compute-optimized devices. Before you order a Snowball Edge device, there are a few things you should do to prepare.

- Build and supply an operating system image to use to create virtual machines on the device.
- Your network must have a static IP address available for the K8s control plane endpoint and allow Address Resolution Protocol (ARP).
- Your Snowball Edge device must have specific ports open. For more information about ports, see Ports and protocols in the Amazon EKS Anywhere documentation.

#### **Topics**

- Create an Ubuntu EKS Distro AMI for the Snowball Edge
- Build a Harbor AMI for the Snowball Edge

## Create an Ubuntu EKS Distro AMI for the Snowball Edge

To create the Ubuntu EKS Distro AMI, see <u>Build Snow node images</u>.

The name of the generated AMI will follow the pattern capa-ami-ubuntu-20.04-version-timestamp. For example, capa-ami-ubuntu-20.04-v1.24-1672424524.

## **Build a Harbor AMI for the Snowball Edge**

Set up a Harbor private registry AMI to include on the Snowball Edge device so you can use Amazon EKS Anywhere on the device without an external network connection. If you won't be using Amazon EKS Anywhere while the Snowball Edge device is disconnected from the external network, or if you have a private Kubernetes registry in an AMI to use on the device, you can skip this section.

To create the Harbor local registry AMI, see Build a Harbor AMI.

## Ordering a Snowball Edge device for use with Amazon EKS Anywhere on Amazon Snow

To order your Snowball Edge compute optimized, see <u>Creating a job to order a Snowball Edge</u> <u>device</u> in this guide and keep these items in mind during the ordering process:

- In step 1, choose the **Local compute and storage only** job type.
- In step 2, choose the **Snowball Edge Compute Optimized** device type.
- In step 3, choose **Amazon EKS Anywhere on Amazon Snow**, then choose the Kubernetes version that you need.

### Note

In order to deliver the latest software, we may configure the device with a version of ESK Anywhere newer than the one that is currently available. For more info, <u>Versioning</u> in the *Amazon EKS User Guide*.

We recommend that you create your Kubernetes cluster with the latest available Kubernetes version supported by Amazon EKS Anywhere. For more information, see <a href="Amazon EKS-Anywhere Versioning">Amazon EKS-Anywhere Versioning</a>. If your application requires a specific version of Kubernetes, use any version of Kubernetes offered in standard or extended support by Amazon EKS. Consider the release and support dates of Kubernetes versions when planning the lifecycle of your deployment. This will help you avoid the potential loss of support for the version of Kubernetes you intend to use. For more information, see Amazon EKS Kubernetes release calendar.

Build a Harbor AMI 324

- Choose AMIs to include on your device, including the EKS Distro AMI (see <u>Create an Ubuntu EKS Distro AMI for the Snowball Edge</u>) and, optionally, the Harbor AMI that you built (see <u>Build a Harbor AMI for the Snowball Edge</u>).
- If you need multiple Snowball Edge devices for high availability, choose the number of devices that you need from **High Availability**.

After you receive your Snowball Edge device or devices, configure Amazon EKS Anywhere according to Configuring and running Amazon EKS Anywhere on Snowball Edge devices.

## Configuring and running Amazon EKS Anywhere on Snowball Edge devices

Follow these procedures to configure and start Amazon EKS Anywhere on your Snowball Edge devices. Then, to configure Amazon EKS Anywhere to operate on disconnected devices, complete additional procedures before disconnecting those devices from the external network. For more information, see Configuring Amazon EKS Anywhere on Amazon Snow for disconnected operation.

#### **Topics**

- Initial setup for Amazon EKS Anywhere on Snowball Edge
- Configuring and running Amazon EKS Anywhere on Snowball Edge devices automatically
- Configuring and running Amazon EKS Anywhere on Snowball Edge devices manually

## Initial setup for Amazon EKS Anywhere on Snowball Edge

Perform the initial setup on each Snowball Edge device by connecting the device to your local network, downloading the Snowball Edge client, getting credentials, and unlocking the device.

### **Perform initial setup**

- Download and install the Snowball Edge client. For more information, see <u>Downloading and</u> installing the Snowball Edge Client.
- Connect the device to your local network. For more information, see <u>Connecting a Snowball</u> Edge to your local network.
- 3. Get credentials to unlock your device. For more information, see Getting credentials to access a Snowball Edge.

4. Unlock the device. For more information, see <u>Unlocking the Snowball Edge</u>. You can also use a script tool instead of unlocking devices manually. See <u>Unlock devices</u>.

## Configuring and running Amazon EKS Anywhere on Snowball Edge devices automatically

You can use sample script tools to set up the environment and run an Amazon EKS Anywhere admin instance or you can do so manually. To use the script tools, see <u>Unlock devices and setup environment for Amazon EKS Anywhere</u>. After the environment is set up and the Amazon EKS Anywhere admin instance is running, if you need to configure Amazon EKS Anywhere to operate on the Snowball Edge device while disconnected from a network, see <u>Configuring Amazon EKS Anywhere on Amazon Snow for disconnected operation</u>. Otherwise, see <u>Creating and maintaining clusters on Snowball Edge devices</u>.

To manually set up the environment and run an Amazon EKS Anywhere admin instance, see Configuring and running Amazon EKS Anywhere on Snowball Edge devices manually.

## Configuring and running Amazon EKS Anywhere on Snowball Edge devices manually

Before configuring Amazon EKS Anywhere on a Snowball Edge device, set up a profile for the Snowball Edge Client. For more information, see Configuring and using the Snowball Edge Client.

### **Topics**

- Create an Amazon EKS Anywhere IAM local user
- (Optional) Create and import a Secure Shell key on a Snowball Edge
- Run an Amazon EKS Anywhere admin instance on a Snowball Edge and transfer credential and certificate files to it

### Create an Amazon EKS Anywhere IAM local user

For best security practices, create a local IAM user for Amazon EKS Anywhere on the Snowball Edge device. You can do this by manually using the following procedures.



#### Note

Do this for each Snowball Edge device that you use.

### Create a local user on the Snowball Edge

Use the create-user command to create the Amazon EKS Anywhere IAM user.

```
aws iam create-user --user-name user-name --endpoint http://snowball-ip:6078 --
profile profile-name
    {
        "User": {
            "Path": "/",
            "UserName": "eks-a-user",
            "UserId": "AIDACKCEVSQ6C2EXAMPLE",
            "Arn": "arn:aws:iam::123456789012:user/eks-a-user",
            "CreateDate": "2022-04-06T00:13:35.665000+00:00"
        }
    }
```

#### Create a policy for the local user on the Snowball Edge

Create a policy document, use it to create an IAM policy, and attach that policy to the Amazon EKS Anywhere local user.

#### To create a policy document and attach it to the Amazon EKS Anywhere local user

Create a policy document and save it to your computer. Copy the policy below to the document.

```
{
  "Version": "2012-10-17",
  "Statement": [
      "Effect": "Allow",
      "Action": [
        "snowballdevice:DescribeDevice",
        "snowballdevice:CreateDirectNetworkInterface",
```

```
"snowballdevice:DeleteDirectNetworkInterface",
        "snowballdevice:DescribeDirectNetworkInterfaces",
        "snowballdevice:DescribeDeviceSoftware"
      ],
      "Resource": ["*"]
    },
    {
      "Effect": "Allow",
      "Action": [
        "ec2:RunInstances",
        "ec2:DescribeInstances",
        "ec2:TerminateInstances",
        "ec2:ImportKeyPair",
        "ec2:DescribeKeyPairs",
        "ec2:DescribeInstanceTypes",
        "ec2:DescribeImages",
        "ec2:DeleteTags"
      ],
      "Resource": ["*"]
    }
 ]
}
```

2. Use the create-policy command to create an IAM policy based on the policy document. The value of the --policy-document parameter should use the absolute path to the policy file. For example, file://home/user/policy-name.json

```
aws iam create-policy --policy-name policy-name --policy-document file:///home/
user/policy-name.json --endpoint http://snowball-ip:6078 --profile profile-name
{
    "Policy": {
        "PolicyName": "policy-name",
        "PolicyId":

"ANPACEMGEZDGNBVGY3TQOJQGEZAAAABP76TE5MKAAAABCCOTR2IJ43NBTJRZBU",
        "Arn": "arn:aws:iam::123456789012:policy/policy-name",
        "Path": "/",
        "DefaultVersionId": "v1",
        "AttachmentCount": 0,
        "IsAttachable": true,
        "CreateDate": "2022-04-06T04:46:56.907000+00:00",
        "UpdateDate": "2022-04-06T04:46:56.907000+00:00"
```

```
}
}
```

Use the attach-user-policy command to attach the IAM policy to the Amazon EKS Anywhere local user.

```
aws iam attach-user-policy --policy-arn policy-arn --user-name user-name --endpoint http://snowball-ip:6078 --profile profile-name
```

### Create an access key and a credential file on the Snowball Edge

Create an access key for the Amazon EKS Anywhere IAM local user. Then, create a credential file and include in it the values of AccessKeyId and SecretAccessKey generated for the local user. The credential file will be used by the Amazon EKS Anywhere admin instance later.

1. Use the create-access-key command to create an access key for the Amazon EKS Anywhere local user.

```
aws iam create-access-key --user-name user-name --endpoint http://snowball-ip:6078
--profile profile-name
{
    "AccessKey": {
        "UserName": "eks-a-user",
        "AccessKeyId": "AKIAIOSFODNN7EXAMPLE",
        "Status": "Active",
        "SecretAccessKey": "RTT/wJalrXUtnFEMI/K7MDENG/bPxRfiCYEXAMPLEKEY",
        "CreateDate": "2022-04-06T04:23:46.139000+00:00"
    }
}
```

Create a credential file. In it, save the AccessKeyId and SecretAccessKey values in the following format.

```
[snowball-ip]
aws_access_key_id = ABCDEFGHIJKLMNOPQR2T
```

```
aws_secret_access_key = AfSD7sYz/TBZtzkReB16PuuISzJ2WtNkeePw+nNzJ
region = snow
```



#### Note

If you're working with multiple Snowball Edge devices, the order of the credentials in the file doesn't matter, but the credentials for all devices do need to be in one file.

#### Create a certificates file for the admin instance on the Snowball Edge

The Amazon EKS Anywhere admin instance needs the certificates of the Snowball Edge devices in order to run on them. Create a certificates file holding the certificate to access Snowball Edge devices for use later by the Amazon EKS Anywhere admin instance.

#### To create a certificates file

1. Use the list-certificates command to get certificates for each Snowball Edge device that you plan to use.

```
PATH_TO_Snowball_Edge_CLIENT/bin/snowballEdge list-certificates --endpoint
https://snowball-ip --manifest-file path-to-manifest-file --unlock-code unlock-
code
{
  "Certificates" : [ {
    "CertificateArn" : "arn:aws:snowball-device:::certificate/xxx",
    "SubjectAlternativeNames" : [ "ID:JID-xxx" ]
  } ]
}
```

Use the value of CertificateArn as the value for the --certificate-arn parameter of the get-certificate command.

```
PATH_TO_Snowball_Edge_CLIENT/bin/snowballEdge get-certificate --certificate-arn ARN
 --endpoint https://snowball-ip --manifest-file path-to-manifest-file --unlock-
code unlock-code
```

3. Create a device certificate file. Put the output of get-certificate into the certificate file. Following is an example of how to save the output.



#### Note

If you're working with multiple Snowball Edge devices, the order of the credentials in the file doesn't matter, but the credentials for all devices do need to be in one file.

```
----BEGIN CERTIFICATE----
ZWtzYSBzbm93IHR1c3QgY2VydG1maWNhdGUgZWtzYSBzbm93IHR1c3QgY2VydG1m
aWNhdGVla3NhIHNub3cgdGVzdCBjZXJ0aWZpY2F0ZWVrc2Egc25vdyB0ZXN0IGN1
cnRpZmljYXR1ZWtzYSBzbm93IHR1c3QgY2VydGlmaWNhdGVla3NhIHNub3cgdGVz
dCBjZXJ0aWZpY2F0ZQMIIDXDCCAkSgAwIBAgIJAISM0nTVmbj+MA0GCSqGSIb3DQ
----END CERTIFICATE----
```

Repeat Create an Amazon EKS Anywhere IAM local user to create an IAM local user for Amazon EKS Anywhere on all Snowball Edge devices.

## (Optional) Create and import a Secure Shell key on a Snowball Edge

Use this optional procedure to create a Secure Shell (SSH) key to access all Amazon EKS Anywhere node instances and to import the public key to all Snowball Edge devices. Keep and secure this key file.

If you skip this procedure, Amazon EKS Anywhere will create and import an SSH key automatically when necessary. This key will be stored on the admin instance in \${PWD}/\${CLUSTER\_NAME}/ eks-a-id rsa.

### Create an SSH key and import it to the Amazon EKS Anywhere instance

Use the ssh-keygen command to generate a SSH key.

```
ssh-keygen -t rsa -C "key-name" -f path-to-key-file
```

Use the import-key-pair command to import the key from your computer to the Snowball 2. Edge device.



#### Note

The value of the key-name parameter must be the same when you import the key to all devices.

```
aws ec2 import-key-pair --key-name key-name --public-key-material fileb:///path/to/
key-file --endpoint http://snowball-ip:8008 --profile profile-name
{
    "KeyFingerprint": "5b:0c:fd:e1:a0:69:05:4c:aa:43:f3:3b:3e:04:7f:51",
    "KeyName": "default",
    "KeyPairId": "s.key-85edb5d820c92a6f8"
}
```

## Run an Amazon EKS Anywhere admin instance on a Snowball Edge and transfer credential and certificate files to it

#### Run an Amazon EKS Anywhere admin instance on a Snowball Edge

Follow this procedure to manually run an Amazon EKS Anywhere admin instance, configure a Virtual Network Interface (VNI) for the admin instance, check the status of the instance, create an SSH key, and connect to the admin instance with it. You can use a sample script tool to automate creating an Amazon EKS Anywhere admin instance and transferring credential and certificate files to this instance. See Create Amazon EKS Anywhere admin instance. After the script tool completes, you can ssh into the instance and create clusters by referring to Creating and maintaining clusters on Snowball Edge devices. If you want to set up the Amazon EKS Anywhere instance manually, use the following steps..



#### Note

If you're using more than one Snowball Edge devices to provision the cluster, you can launch an Amazon EKS Anywhere admin instance on any of the Snowball Edge devices.

#### To run an Amazon EKS Anywhere admin instance

Use the create-key-pair command to create a SSH key for the Amazon EKS Anywhere admin instance. The command saves the key to \$PWD/key-file-name.

```
aws ec2 create-key-pair --key-name key-name --query 'KeyMaterial' --output text --
endpoint http://snowball ip:8008 > key-file-name --profile profile-name
```

Use the describe-images command to find the image name that begins with eksanywhere-admin from the output.

```
aws ec2 describe-images --endpoint http://snowball-ip:8008 --profile profile-name
```

Use the run-instance command to start an eks-a admin instance with the Amazon EKS Anywhere admin image.

```
aws ec2 run-instances --image-id eks-a-admin-image-id --key-name key-name --
instance-type sbe-c.xlarge --endpoint http://snowball-ip:8008 --profile profile-
name
```

Use the describe-instances command to check the status of the Amazon EKS Anywhere instance. Wait until the command indicates the instances state is running before continuing.

```
aws ec2 describe-instances --instance-id instance-id --endpoint http://snowball-
ip:8008 --profile profile-name
```

5. From the output of the describe-device command, note the value of PhysicalNetworkInterfaceId for the physical network interface that is connected to your network. You will use this to create a VNI.

```
PATH_TO_Snowball_Edge_CLIENT/bin/snowballEdge describe-device --endpoint
https://snowball-ip --manifest-file path-to-manifest-file --unlock-code unlock-
code
```

6. Create a VNI for the Amazon EKS Anywhere admin instance. Use the value of PhysicalNetworkInterfaceId as the value of the physical-network-interface-id parameter.

```
PATH_TO_Snowball_Edge_CLIENT/bin/snowballEdge create-virtual-network-interface
--ip-address-assignment dhcp --physical-network-interface-id PNI --endpoint
https://snowball-ip --manifest-file path-to-manifest-file --unlock-code unlock-code
```

 Use the value of IpAddress as the value of the public-ip parameter of the associateaddress command to associate the public address to the Amazon EKS Anywhere admin instance.

```
aws ec2 associate-address --instance-id instance-id --public-ip VNI-IP --endpoint
http://snowball-ip:8008 --profile profile-name
```

8. Connect to the Amazon EKS Anywhere admin instance by SSH.

```
ssh -i path-to-key ec2-user@VNI-IP
```

#### Transfer certificate and credential files to the admin instance on the Snowball Edge

After the Amazon EKS Anywhere admin instance is running, transfer the credentials and certificates of your Snowball Edge devices to the admin instance. Run the following command from the same directory where you saved the credentials and certificates files in <a href="Create an access key and a credential file on the Snowball Edge">Create an access key and a credential file on the Snowball Edge</a> and <a href="Create a certificates file for the admin instance on the Snowball Edge">Create a certificates file for the admin instance on the Snowball Edge</a>.

```
scp -i path-to-key path-to-credentials-file path-to-certificates-file ec2-user@eks-
admin-instance-ip:~
```

Verify the contents of the files on the Amazon EKS Anywhere admin instance. Following are examples of the credential and certificate files.

```
[192.168.1.1]
aws_access_key_id = EMGEZDGNBVGY3TQOJQGEZB5ULEAAIWHWUJDXEXAMPLE
aws_secret_access_key = AUHpqj00GZQHEYXDbN0neLNlfR0gEXAMPLE
region = snow

[192.168.1.2]
aws_access_key_id = EMGEZDGNBVGY3TQOJQGEZG507F3FJUCMYRMI4KPIEXAMPLE
aws_secret_access_key = kY4Cl8+RJAwq/bu28Y8fUJepwqhDEXAMPLE
region = snow
```

```
-----BEGIN CERTIFICATE----

ZWtzYSBzbm93IHRlc3QgY2VydGlmaWNhdGUgZWtzYSBzbm93IHRlc3QgY2VydGlm
aWNhdGVla3NhIHNub3cgdGVzdCBjZXJ0aWZpY2F0ZWVrc2Egc25vdyB0ZXN0IGN1
cnRpZmljYXRlZWtzYSBzbm93IHRlc3QgY2VydGlmaWNhdGVla3NhIHNub3cgdGVz
dCBjZXJ0aWZpY2F0ZQMIIDXDCCAkSgAwIBAgIJAISM0nTVmbj+MA0GCSqGSIb3DQ
...
-----END CERTIFICATE-----

KJ0FP12PAYPEjxr81/PoCXfZeARBzN9WLUH5yz1ta+sYUJouzhzWuLJYA1xqcCPY
mhVlkRsN4hVdlBNRnCCpRF76GyjdJeibKVzXQxoXoZBjrOkuGwqRy3d3ndjK77h4
OR5Fv9mjGf7CjcaSjk/4iwmZvRSaQacb0YG5GVeb4mfUAuVtuFoMeYfnAgMBAAGj
azBpMAwGA1UdEwQFMAMBAf8wHQYDVR0OBBYEFL/bRcnBRuSM5+FcYFa8HfIBomdF
...
-----END CERTIFICATE-----
```

## Configuring Amazon EKS Anywhere on Amazon Snow for disconnected operation

Complete this additional configuration of Amazon EKS Anywhere on the Snowball Edge device while it's connected to a network to prepare Amazon EKS Anywhere to run in an environment without an external network connection.

To configure Amazon EKS Anywhere for disconnected use with your own local, private Kubernetes registry, see Registry Mirror configuration in the EKS Anywhere documentation.

If you created a Harbor private registry AMI, follow the procedures in this section.

### **Topics**

- Configure the Harbor registry on a Snowball Edge device
- Use the Harbor registry on the Amazon EKS Anywhere admin instance on a Snowball Edge

## Configure the Harbor registry on a Snowball Edge device

See Configure Harbor on a Snowball Edge device.

## Use the Harbor registry on the Amazon EKS Anywhere admin instance on a Snowball Edge

See Import Amazon EKS Anywhere container images to the local Harbor registry on a Snowball Edge device.

# Creating and maintaining clusters on Snowball Edge devices Best practices for creating clusters on a Snowball Edge

To create an Amazon EKS Anywhere cluster, refer to Create Snow clusters.

Keep the following best practices in mind when creating Amazon EKS Anywhere clusters on Snowball Edge devices:

• Before creating a cluster in a static IP address range, ensure that there are no other clusters on your Snowball Edge device using the same IP address range.

- Before creating a cluster with DHCP addressing on your Snowball Edge device, ensure that all static IP address ranges in use for clusters are not in the DHCP pool subnet.
- When creating more than one cluster, wait until one cluster is successfully provisioned and running before you create another one.

## Upgrading clusters on a Snowball Edge

To upgrade an Amazon EKS Anywhere admin AMI or EKS Distro AMI, contact Amazon Web Services Support. Amazon Web Services Support will provide a Snowball Edge update containing the upgraded AMI. Then, download and install the Snowball Edge update. See <a href="Downloading updates to Snowball Edge devices">Downloading updates to Snowball Edge devices</a>.

After you upgrade your Amazon EKS Anywhere AMI, you need to start a new Amazon EKS Anywhere admin instance. See Run an Amazon EKS Anywhere admin instance on a Snowball Edge. Then, copy key files, the cluster folder, credentials, and certificates from the previous admin instance to the upgraded instance. These are in a folder that's named for the cluster.

## Cleaning up cluster resources on a Snowball Edge

If you create multiple clusters on your Snowball Edge devices and don't delete them correctly or if there is a problem in the cluster and the cluster creates replacement nodes after resuming, there will be resource leak. A sample script tool is available for you to modify and use to clean your Amazon EKS Anywhere admin instance and your Snowball Edge devices. See <a href="Amazon EKS">Amazon Snow cleanup tools</a>.

## Using IAM locally on a Snowball Edge

Amazon Identity and Access Management (IAM) helps you securely control access to Amazon resources that run on your Amazon Snowball Edge device. You use IAM to control who is authenticated (signed in) and authorized (has permissions) to use resources.

IAM is supported locally on your device. You can use the local IAM service to create new users and attach IAM policies to them. You can use these policies to allow the access necessary to perform assigned tasks. For example, you can give a user the ability to transfer data, but limit their ability to create new Amazon EC2-compatible instances.

Additionally, you can create local, session-based credentials using Amazon Security Token Service (Amazon STS) on your device. For information about the IAM service, see Getting started in the IAM User Guide.

Your device's root credentials can't be disabled, and you can't use policies within your account to explicitly deny access to the Amazon Web Services account root user. We recommend that you secure your root user access keys and create IAM user credentials for everyday interaction with your device.

#### 

The documentation in this section applies to using IAM locally on a Amazon Snowball Edge device. For information about using IAM in the Amazon Web Services Cloud, see Identity and Access Management in Amazon Snowball Edge.

For Amazon services to work properly on a Snowball Edge, you must allow the ports for the services. For details, see Port requirements for Amazon services on a Snowball Edge.

### **Topics**

- Using the Amazon CLI and API Operations on a Snowball Edge
- List of Supported IAM Amazon CLI Commands on a Snowball Edge
- IAM policy examples on Snowball Edge
- TrustPolicy example on a Snowball Edge

## Using the Amazon CLI and API Operations on a Snowball Edge

When using the Amazon CLI or API operations to issue IAM, Amazon STS, Amazon S3, and Amazon EC2 commands on Snowball Edge, you must specify the region as "snow." You can do this using aws configure or within the command itself, as in the following examples.

```
aws configure --profile abc
Amazon Access Key ID [None]: AKIAIOSFODNN7EXAMPLE
Amazon Secret Access Key [None]: 1234567
Default region name [None]: snow
Default output format [None]: json
```

#### Or

```
aws iam list-users --endpoint http://192.0.2.0:6078 --region snow --profile snowballEdge
```

### Note

The access key ID and access secret key that are used locally on Amazon Snowball Edge can't be interchanged with the keys in the Amazon Web Services Cloud.

## List of Supported IAM Amazon CLI Commands on a Snowball Edge

Following is a description of the subset of Amazon CLI commands and options for IAM that are supported on Snowball Edge devices. If a command or option isn't listed following, it's not supported. Unsupported parameters for commands are noted in the description.

- attach-role-policy Attaches the specified managed policy to the specified IAM role.
- attach-user-policy Attaches the specified managed policy to the specified user.
- <u>create-access-key</u> Creates a new local IAM secret access key and corresponding Amazon access key ID for the specified user.

- create-policy Creates a new IAM managed policy for your device.
- <u>create-role</u> Creates a new local IAM role for your device. The following parameters are **not** supported:
  - Tags
  - PermissionsBoundary
- <u>create-user</u> Creates a new local IAM user for your device. The following parameters are **not** supported:
  - Tags
  - PermissionsBoundary
- <u>delete-access-key</u> Deletes a new local IAM secret access key and corresponding Amazon access key ID for the specified user.
- <u>delete-policy</u> Deletes the specified managed policy.
- delete-role Deletes the specified role.
- delete-user Deletes the specified user.
- detach-role-policy Removes the specified managed policy from the specified role.
- detach-user-policy Removes the specified managed policy from the specified user.
- <u>get-policy</u> Retrieves information about the specified managed policy, including the policy's
  default version and the total number of local IAM users, groups, and roles to which the policy is
  attached.
- <u>get-policy-version</u> Retrieves information about the specified version of the specified managed policy, including the policy document.
- <u>get-role</u> Retrieves information about the specified role, including the role's path, GUID, ARN, and the role's trust policy that grants permission to assume the role.
- <u>get-user</u> Retrieves information about the specified IAM user, including the user's creation date, path, unique ID, and ARN.
- <u>list-access-keys</u> Returns information about the access key IDs associated with the specified IAM user.
- list-attached-role-policies Lists all managed policies that are attached to the specified IAM role.
- <u>list-attached-user-policies</u> Lists all managed policies that are attached to the specified IAM user.
- <u>list-entities-for-policy</u> Lists all local IAM users, groups, and roles that the specified managed policy is attached to.

- -- EntityFilter: Only the user and role values are supported.
- <u>list-policies</u> Lists all the managed policies that are available in your local Amazon Web Services account. The following parameter is **not** supported:
  - --PolicyUsageFilter
- list-roles Lists the local IAM roles that have the specified path prefix.
- list-users Lists the IAM users that have the specified path prefix.
- <u>update-access-key</u> Changes the status of the specified access key from Active to Inactive, or vice versa.
- <u>update-assume-role-policy</u> Updates the policy that grants an IAM entity permission to assume a role.
- update-role Updates the description or maximum session duration setting of a role.
- update-user Updates the name and/or the path of the specified IAM user.

## Supported IAM API operations on Snowball Edge

Following are the IAM API operations that you can use with a Snowball Edge, with links to their descriptions in the IAM API Reference.

- <u>AttachRolePolicy</u> Attaches the specified managed policy to the specified IAM role.
- <u>AttachUserPolicy</u> Attaches the specified managed policy to the specified user.
- <u>CreateAccessKey</u> Creates a new local IAM secret access key and corresponding Amazon access key ID for the specified user.
- <u>CreatePolicy</u> Creates a new IAM managed policy for your device.
- <u>CreateRole</u> Creates a new local IAM role for your device.
- <u>CreateUser</u> Creates a new local IAM user for your device.

The following parameters are **not** supported:

- Tags
- PermissionsBoundary
- DeleteAccessKey- Deletes the specified access key.
- DeletePolicy Deletes the specified managed policy.
- <u>DeleteRole</u> Deletes the specified role.
- DeleteUser Deletes the specified user.

- DetachRolePolicy Removes the specified managed policy from the specified role.
- DetachUserPolicy Removes the specified managed policy from the specified user.
- <u>GetPolicy</u> Retrieves information about the specified managed policy, including the policy's
  default version and the total number of local IAM users, groups, and roles to which the policy is
  attached.
- <u>GetPolicyVersion</u> Retrieves information about the specified version of the specified managed policy, including the policy document.
- <u>GetRole</u> Retrieves information about the specified role, including the role's path, GUID, ARN, and the role's trust policy that grants permission to assume the role.
- <u>GetUser</u> Retrieves information about the specified IAM user, including the user's creation date, path, unique ID, and ARN.
- <u>ListAccessKeys</u> Returns information about the access key IDs associated with the specified IAM user.
- ListAttachedRolePolicies Lists all managed policies that are attached to the specified IAM role.
- ListAttachedUserPolicies Lists all managed policies that are attached to the specified IAM user.
- <u>ListEntitiesForPolicy</u> Retrieves information about the specified IAM user, including the user's creation date, path, unique ID, and ARN.
  - --EntityFilter: Only the user and role values are supported.
- <u>ListPolicies</u> Lists all the managed policies that are available in your local Amazon Web Services
  account. The following parameter is **not** supported:
  - --PolicyUsageFilter
- <u>ListRoles</u> Lists the local IAM roles that have the specified path prefix.
- <u>ListUsers</u> Lists the IAM users that have the specified path prefix.
- <u>UpdateAccessKey</u> Changes the status of the specified access key from Active to Inactive, or vice versa.
- <u>UpdateAssumeRolePolicy</u> Updates the policy that grants an IAM entity permission to assume a role.
- <u>UpdateRole</u> Updates the description or maximum session duration setting of a role.
- <u>UpdateUser</u> Updates the name and/or the path of the specified IAM user.

## Supported IAM policy version and grammar on Snowball Edge

Following is the local IAM support version 2012-10-17 of the IAM policy and a subset of the policy grammar.

Policy type	Supported grammar
Identity-based policies (user/role policy)	"Effect", "Action" and "Resource"  (i) Note  Local IAM doesn't support  "Condition ", "NotAction ",  "NotResource " and "Principal ".
Resource-based policies (role trust policy)	"Effect", "Action" and "Principal "  (i) Note  For Principal, only Amazon Web  Services account ID or principal ID is allowed.

## IAM policy examples on Snowball Edge



Amazon Identity and Access Management (IAM) users need "snowballdevice:\*" permissions to use the <u>Amazon OpsHub for Snow Family application</u> to manage Snowball

Edge.

The following are examples of policies that grant permissions to a Snowball Edge device.

## Allowing the GetUser call for a sample user on a Snowball Edge through the IAM API

Use the following policy to allow the GetUser call for a sample user through the IAM API.

## Allowing full access to the Amazon S3 API on a Snowball Edge

Use the following policy to allow full access to the Amazon S3 API.

## Allowing read and write access to an Amazon S3 bucket on a Snowball Edge

Use the following policy to allow read and write access to a specific bucket.

```
{
    "Version": "2012-10-17",
```

## Allowing list, get, and put access to an Amazon S3 bucket on a Snowball Edge

Use the following policy to allow List, Get, and Put Access to a specific S3 bucket.

## Allowing full access to the Amazon EC2 API on a Snowball Edge

Use the following policy to allow full access to Amazon EC2.

```
{
```

## Allowing access to start and stop Amazon EC2-compatible instances on a Snowball Edge

Use the following policy to allow access to start and stop Amazon EC2 instances.

## Denying calls to DescribeLaunchTemplates but allowing all calls to DescribeImages on a Snowball Edge

Use the following policy to deny calls to DescribeLaunchTemplates but allow all calls to DescribeImages.

```
"ec2:DescribeLaunchTemplates"
],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
         "ec2:DescribeImages"
],
    "Resource": "*"
}
]
```

## Policy for API calls on a Snowball Edge

Lists all the managed policies that are available on your Snow device, including your own customer-defined managed policies. More details in list-policies.

```
aws iam list-policies --endpoint http://ip-address:6078 --region snow --profile
 snowballEdge
{
    "Policies": [
        {
            "PolicyName": "Administrator",
            "Description": "Root user admin policy for Account 123456789012",
            "CreateDate": "2020-03-04T17:44:59.412Z",
            "AttachmentCount": 1,
            "IsAttachable": true,
            "PolicyId": "policy-id",
            "DefaultVersionId": "v1",
            "Path": "/",
            "Arn": "arn:aws:iam::123456789012:policy/Administrator",
            "UpdateDate": "2020-03-04T19:10:45.620Z"
        }
    ]
}
```

## TrustPolicy example on a Snowball Edge

A trust policy returns a set of temporary security credentials that you can use to access Amazon resources that you might normally not have access to. These temporary credentials consist of an

access key ID, a secret access key, and a security token. Typically, you use AssumeRole in your account for cross-account access.

The following is an example of a trust policy. For more information about trust policy, see AssumeRole in the Amazon Security Token Service API Reference.

```
{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Effect": "Allow",
            "Principal": {
                "AWS": [
                     "arn:aws:iam::AccountId:root" //You can use the Principal ID
 instead of the account ID.
            },
            "Action": [
                "sts:AssumeRole"
            ]
        }
    ]
}
```

## Using Amazon Security Token Service on a Snowball Edge

The Amazon Security Token Service (Amazon STS) helps you request temporary, limited-privilege credentials for IAM users.



#### Important

For Amazon services to work properly on a Snowball Edge, you must allow the ports for the services. For details, see Port requirements for Amazon services on a Snowball Edge.

## **Topics**

- Using the Amazon CLI and API operations on a Snowball Edge
- Supported Amazon STSAmazon CLI commands on a Snowball Edge
- Supported Amazon STS API operations on a Snowball Edge

## Using the Amazon CLI and API operations on a Snowball Edge

When using the Amazon CLI or API operations to issue IAM, Amazon STS, Amazon S3, and Amazon EC2 commands on Snowball Edge device, you must specify the region as "snow." You can do this using Amazon configure or within the command itself, as in the following examples.

```
aws configure --profile snowballEdge
Amazon Access Key ID [None]: defgh
Amazon Secret Access Key [None]: 1234567
Default region name [None]: snow
Default output format [None]: json
```

#### Or

```
aws iam list-users --endpoint http://192.0.2.0:6078 --region snow --profile
 snowballEdge
```



#### Note

The access key ID and access secret key that are use locally on Amazon Snowball Edge can't be interchanged with the keys in the Amazon Web Services Cloud.

## Supported Amazon STSAmazon CLI commands on a Snowball Edge

Only the assume-role command is supported locally.

The following parameters are supported for assume-role:

- role-arn
- role-session-name
- duration-seconds

## Example command to assume a role on a Snowball Edge

To assume a role, use the following command.

```
aws sts assume-role --role-arn "arn:aws:iam::123456789012:role/example-role" --
role-session-name AWSCLI-Session --endpoint http://snow-device-IP-address:7078
```

For more information about using the assume-role command, see How do I assume an IAM role using the Amazon CLI?

For more information about using Amazon STS, see Using Temporary Security Credentials in the IAM User Guide.

## Supported Amazon STS API operations on a Snowball Edge

Only the AssumeRole API is supported locally.

The following parameters are supported for AssumeRole:

- RoleArn
- RoleSessionName
- DurationSeconds

## Example of assuming a role

https://sts.amazonaws.com/

?Version=2011-06-15
&Action=AssumeRole

&RoleSessionName=session-example

&RoleArn=arn:aws:iam::123456789012:role/demo

&DurationSeconds=3600

## Managing public key certificates on Snowball Edge

You can securely interact with Amazon services running on a Snowball Edge device or a cluster of Snowball Edge devices through the HTTPS protocol by providing a public key certificate. You can use the HTTPS protocol to interact with Amazon services such as IAM, Amazon EC2, S3 adapter, Amazon S3 compatible storage on Snowball Edge, Amazon EC2 Systems Manager, and Amazon STS on Snowball Edge devices. In the case of a cluster of devices, a single certificate is required and can be generated by any device in the cluster. Once a Snowball Edge device generates the certificate and you unlock the device, you can use Snowball Edge client commands to list, get, and delete the certificate.

A Snowball Edge device generates a certificate when the following events occur:

- The Snowball Edge device or cluster is unlocked for the first time.
- The Snowball Edge device or cluster is unlocked after deleting the certificate (using the deletecertificate command or Renew certificate in Amazon OpsHub).
- The Snowball Edge device or cluster is rebooted and unlocked after the certificate expires.

Whenever a new certificate is generated, the old certificate is no longer valid. A certificate is valid for a period of one year from the day it was generated.

You can also use Amazon OpsHub to manage public key certificates. For more information, see Managing public key certificates using OpsHub in this guide.

## **Topics**

- Listing the certificate on a Snowball Edge
- Getting certificates from a Snowball Edge
- Deleting certificates on a Snowball Edge

## Listing the certificate on a Snowball Edge

Use the list-certificates command to see the Amazon Resource Names (ARNs) for the current certificate.

snowballEdge list-certificates

Listing the certificate 352

## Example of list-certificates output

```
{
  "Certificates" : [ {
     "CertificateArn" : "arn:aws:snowball-
device:::certificate/78EXAMPLE516EXAMPLEf538EXAMPLEa7",
     "SubjectAlternativeNames" : [ "192.0.2.0" ]
     } ]
}
```

## Getting certificates from a Snowball Edge

Use the get-certificate command to see the content of the certificate based on the ARN provided. Use the list-certificates command to obtain the ARN of the certificate to use as the certificate-arn parameter.

```
snowballEdge get-certificate --certificate-arn arn:aws:snowball-
device:::certificate/78EXAMPLE516EXAMPLEf538EXAMPLEa7
```

### Example of get-certificate output

```
----BEGIN CERTIFICATE----

Certificate
----END CERTIFICATE----
```

For information about configuring your certificate, see <u>Configuring the Amazon CLI to use the S3</u> adapter on a Snowball Edge as the endpoint.

## Deleting certificates on a Snowball Edge

Use the delete-certificate command to delete the current certificate. Use the list-certificates command to obtain the ARN of the certificate to use as the certificate-arn parameter. To generate a new certificate, reboot the Snowball Edge or each Snowball Edge in a

Getting certificates 353

cluster. See <u>Rebooting the Snowball Edge device</u> or use the snowballEdge reboot-device command.

snowballEdge delete-certificate --certificate-arn arn:aws:snowballdevice:::certificate/78EXAMPLE516EXAMPLE6538EXAMPLE67

## Example of delete-certificate output

The certificate has been deleted from your Snow device. Please reboot your Snowball Edge or Snowball Edge cluster to generate a new certificate.

Deleting cettificates 354

# Port requirements for Amazon services on a Snowball Edge

For Amazon services to work properly on a Amazon Snowball Edge device, you must allow the network ports for the service.

The following is a list of network ports that are required for each Amazon service.

Port	Protocol	Comment
22 (HTTP)	ТСР	Device health check and for EC2 SSH
443 (HTTPS)	ТСР	S3 API and S3 Control API HTTPS endpoint
2049 (HTTP)	ТСР	NFS endpoint
6078 (HTTP)	ТСР	IAM HTTP endpoint
6089 (HTTPS)	ТСР	IAM HTTPS endpoint
7078 (HTTP)	ТСР	STS HTTP endpoint
7089 (HTTPS)	ТСР	STS HTTPS endpoint
8080 (HTTP)	ТСР	S3 adapter HTTP endpoint
8008 (HTTP)	ТСР	EC2 HTTP endpoint
8243 (HTTPS)	ТСР	EC2 HTTPS endpoint
8443 (HTTPS)	ТСР	S3 Adapter HTTPS endpoint
9091 (HTTP)	ТСР	Endpoint for device management
9092	ТСР	Inbound for EKS Anywhere and CAPAS device controller

Port	Protocol	Comment
8242	ТСР	Inbound for EC2 HTTPS endpoint for EKS Anywhere
6443	ТСР	Inbound for EKS Anywhere Kubernetes API endpoint
2379	ТСР	Inbound for EKS Anywhere Etcd API endpoint
2380	ТСР	Inbound for EKS Anywhere Etcd API endpoint

# Using Amazon Snowball Edge Device Management to manage Snowball Edge

Amazon Snowball Edge Device Management allows you to manage your Snowball Edge and local Amazon services remotely. All Snowball Edge support Snowball Edge Device Management, and it comes installed on new devices in most Amazon Web Services Regions where Snowball Edge are available.

With Snowball Edge Device Management, you can perform the following tasks:

- Create a task
- Check task status
- Check task metadata
- Cancel a task
- Check device info
- Check Amazon EC2-compatible instance state
- List commands and syntax
- · List remote-manageable devices
- List task status across devices
- List available resources
- List tasks by status
- List device or task tags
- Apply tags
- Remove tags

## **Topics**

- Choosing the Snowball Edge Device Management state when ordering a Snowball Edge
- Activating Snowball Edge Device Management on a Snowball Edge
- Adding permissions for Snowball Edge Device Management to an IAM role on a Snowball Edge
- Snowball Edge Device Management CLI commands

## Choosing the Snowball Edge Device Management state when ordering a Snowball Edge

When you create a job to order a Snow device, you can choose which state Snowball Edge Device Management will be in when you receive the device: installed but not activated or installed and activated. If it is installed but not activated, you will need to use Amazon OpsHub or the Snowball Edge client to activate it before using it. If it is installed and activated, you can use Snowball Edge Device Management after receiving the device and connecting it to your local network. You can choose the Snowball Edge Device Management state when creating a job to order a device through the Amazon Snow Family Management Console, the Snowball Edge client, the Amazon CLI, or the Snow job management API.

## To choose the Snowball Edge Device Management state from the Amazon Snow Family Management Console

- 1. To choose for Snowball Edge Device Management to be installed and activated, choose Manage your Snow device remotely with Amazon OpsHub or Snowball client.
- 2. To choose for Snowball Edge Device Management to be installed but not activated, do not select Manage your Snow device remotely with Amazon OpsHub or Snowball client.

For more information, see Step 3: Choose your features and options in this guide.

## To choose the Snowball Edge Device Management state from the Amazon CLI, Snowball Edge client, or Snow job management API:

 Use the remote-management parameter to specify the Snowball Edge Device Management state. The INSTALLED\_ONLY value of the parameter means Snowball Edge Device Management is installed but not activated. The INSTALLED\_AUTOSTART value of the parameter means Snowball Edge Device Management is installed and activated. If you don't specify a value for this parameter, INSTALLED\_ONLY is the default value.

## Example of the syntax of the remote-management parameter of the create-job command

```
aws snowball create-job \
    --job-type IMPORT \
    --remote-management INSTALLED_AUTOSTART
```

```
--device-configuration '{"SnowconeDeviceConfiguration": {"WirelessConnection": {"IsWifiEnabled": false} } }' \
--resources '{"S3Resources":[{"BucketArn":"arn:aws:s3:::bucket-name"}]}' \
--description "Description here" \
--address-id ADID00000000-0000-0000-0000000000000 \
--kms-key-arn arn:aws:kms:us-
west-2:111122223333:key/1234abcd-12ab-34cd-56ef-1234567890ab \
--role-arn arn:aws:iam::000000000000:role/SnowconeImportGamma \
--snowball-capacity-preference T8 \
--shipping-option NEXT_DAY \
--snowball-type SNC1_HDD \
--region us-west-2 \
```

For more information, see <u>Job Management API Reference</u> in the Amazon Snowball Edge API Reference.

## Activating Snowball Edge Device Management on a Snowball Edge

Follow this procedure to activate Snowball Edge Device Management using the Snowball Edge client.

Before using this procedure, do the following:

- Download and install the latest version of the Snowball Edge client. For more information, see Downloading and Installing the Snowball Client.
- Download the manifest file and get the unlock code for the Snowball Edge device. For more information, see Getting Your Credentials and Tools.
- Connect the Snowball Edge device to your local network. For more information, see <u>Connecting</u> to Your Local Network.
- Unlock the Snowball Edge device. For more information, see <u>Unlocking the Snowball Edge</u>.

```
snowballEdge set-features /
    --remote-management-state INSTALLED_AUTOSTART /
    --manifest-file JID1717d8cc-2dc9-4e68-aa46-63a3ad7927d2_manifest.bin /
    --unlock-code 7c0e1-bab84-f7675-0a2b6-f8k33 /
    --endpoint https://192.0.2.0:9091
```

The Snowball Edge client returns the following when the command is successful.

```
{
   "RemoteManagementState" : "INSTALLED_AUTOSTART"
}
```

# Adding permissions for Snowball Edge Device Management to an IAM role on a Snowball Edge

On the Amazon Web Services account from which the device was ordered, create an Amazon Identity and Access Management (IAM) role, and add the following policy to the role. Then, assign the role to the IAM user who will log in to remotely manage your device with Snowball Edge Device Management. For more information, see <a href="Creating IAM roles">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating an IAM user in your Amazon Web Services">Creating IAM roles</a> and <a href="Creating IAM user in your Amazon">Creating IAM user in your Amazon Web Services</a> account.

## **Policy**

```
{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Effect": "Allow",
            "Action": [
                "snow-device-management:ListDevices",
                "snow-device-management:DescribeDevice",
                "snow-device-management:DescribeDeviceEc2Instances",
                "snow-device-management:ListDeviceResources",
                "snow-device-management:CreateTask",
                "snow-device-management:ListTasks",
                "snow-device-management:DescribeTask",
                "snow-device-management:CancelTask",
                "snow-device-management:DescribeExecution",
                "snow-device-management:ListExecutions",
                "snow-device-management:ListTagsForResource",
                "snow-device-management:TagResource",
```

```
"snow-device-management:UntagResource"
             ],
             "Resource": "*"
        }
    ]
}
```

## **Snowball Edge Device Management CLI commands**

This section describes the Amazon CLI commands that you can use to manage your Snowball Edge remotely with Snowball Edge Device Management. You can also perform some remote management tasks using Amazon OpsHub. For more information, see Managing Amazon services on your device.



## Note

Before managing your device, make sure it is powered on, connected to your network, and can connect to the Amazon Web Services Region where it was provisioned.

## **Topics**

- Creating a task to manage a Snowball Edge with Snowball Edge Device Management
- Checking the status of a task to manage a Snowball Edge
- Checking information about a Snowball Edge using Snowball Edge Device Management
- Checking states of Amazon EC2-compatible instances on Snowball Edge with Snowball Edge **Device Management**
- Viewing task metadata on Snowball Edge with Snowball Edge Device Management
- Canceling a task on a Snowball Edge with Snowball Edge Device Management
- Listing Snowball Edge Device Management commands and syntax
- Listing Snowball Edge available for remote management
- Listing status of Snowball Edge Device Management tasks across Snowball Edge
- Listing available resources on Snowball Edge with Snowball Edge Device Management
- Listing tags for Snowball Edge or Snowball Edge Device Management tags
- Listing Snowball Edge Device Management tasks by status

- Appling tags to Snowball Edge Device Management tasks or Snowball Edge
- Removing Snowball Edge Device Management tags from tasks or Snowball Edge

## Creating a task to manage a Snowball Edge with Snowball Edge Device Management

To instruct one or more target devices to perform a task, such as unlocking or rebooting, use create-task. You specify target devices by providing a list of managed device IDs with the --targets parameter, and specify the tasks to perform with the --command parameter. Only a single command can be run on a device at a time.

## Supported commands:

- unlock (no arguments)
- reboot (no arguments)

To create a task to be run by the target devices, use the following command. Replace each *user input placeholder* with your own information.

### **Command**

```
aws snow-device-management create-task
--targets smd-fictbgr3rbcjeqa5
--command reboot={}
```

## **Exceptions**

ValidationException
ResourceNotFoundException
InternalServerException
ThrottlingException
AccessDeniedException
ServiceQuotaExceededException

## Checking the status of a task to manage a Snowball Edge

To check the status of a remote task running on one or more target devices, use the describeexecution command.

A task can have one of the following states:

- QUEUED
- IN\_PROGRESS
- CANCELED
- FAILED
- COMPLETED
- REJECTED
- TIMED\_OUT

To check the status of a task, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management describe-execution \
--taskId st-ficthmqoc2phtlef \
--managed-device-id smd-fictqic6gcldf111
```

```
{
```

```
"executionId": "1",
    "lastUpdatedAt": "2021-07-22T15:29:44.110000+00:00",
    "managedDeviceId": "smd-fictqic6gcldf111",
    "startedAt": "2021-07-22T15:28:53.947000+00:00",
    "state": "SUCCEEDED",
    "taskId": "st-ficthmqoc2pht111"
}
```

## Checking information about a Snowball Edge using Snowball Edge Device Management

To check device-specific information, such as the device type, software version, IP addresses, and lock status, use the describe-device command. The output also includes the following:

- lastReachedOutAt When the device last contacted the Amazon Web Services Cloud. Indicates that the device is online.
- lastUpdatedAt When data was last updated on the device. Indicates when the device cache
  was refreshed.

To check device info, use the following command. Replace each *user input placeholder* with your own information.

#### Command

```
aws snow-device-management describe-device \
--managed-device-id smd-fictqic6gcldf111
```

## **Exceptions**

ValidationException
ResourceNotFoundException
InternalServerException
ThrottlingException
AccessDeniedException

## Checking states of Amazon EC2-compatible instances on Snowball Edge with Snowball Edge Device Management

To check the current state of the Amazon EC2 instance, use the describe-ec2-instances command. The output is similar to that of the describe-device command, but the results are sourced from the device cache in the Amazon Web Services Cloud and include a subset of the available fields.

To check the state of the Amazon EC2-compatible instance, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management describe-device-ec2-instances \
--managed-device-id smd-fictbgr3rbcje111 \
--instance-ids s.i-84fa8a27d3e15e111
```

## **Exceptions**

```
ValidationException
ResourceNotFoundException
InternalServerException
ThrottlingException
AccessDeniedException
```

```
"ebs": {
                             "attachTime": "2021-07-23T15:25:38.719000-07:00",
                             "deleteOnTermination": true,
                             "status": "ATTACHED",
                             "volumeId": "s.vol-84fa8a27d3e15e111"
                        }
                    }
                ],
                "cpuOptions": {
                    "coreCount": 1,
                    "threadsPerCore": 1
                },
                "createdAt": "2021-07-23T15:23:22.858000-07:00",
                "imageId": "s.ami-03f976c3cadaa6111",
                "instanceId": "s.i-84fa8a27d3e15e111",
                "state": {
                    "name": "RUNNING"
                },
                "instanceType": "snc1.micro",
                "privateIpAddress": "34.223.14.193",
                "publicIpAddress": "10.111.60.160",
                "rootDeviceName": "/dev/sda",
                "securityGroups": [
                    {
                         "groupId": "s.sq-890b6b4008bdb3111",
                         "groupName": "default"
                    }
                ],
                "updatedAt": "2021-07-23T15:29:42.163000-07:00"
            },
            "lastUpdatedAt": "2021-07-23T15:29:58.
071000-07:00"
        }
    ]
}
```

## Viewing task metadata on Snowball Edge with Snowball Edge Device Management

To check the metadata for a given task on a device, use the describe-task command. The metadata for a task includes the following items:

- The target devices
- The status of the task
- When the task was created
- When data was last updated on the device
- · When the task was completed
- The description (if any) that was provided when the task was created

To check a task's metadata, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management describe-task \
--task-id st-ficthmqoc2pht111
```

## **Exceptions**

```
ValidationException
ResourceNotFoundException
InternalServerException
ThrottlingException
AccessDeniedException
```

```
{
   "completedAt": "2021-07-22T15:29:46.758000+00:00",
   "createdAt": "2021-07-22T15:28:42.613000+00:00",
   "lastUpdatedAt": "2021-07-22T15:29:46.758000+00:00",
   "state": "COMPLETED",
   "tags": {},
   "targets": [
        "smd-fictbgr3rbcje111"
],
```

```
"taskId": "st-ficthmqoc2pht111",
    "taskArn": "arn:aws:snow-device-management:us-west-2:0000000000000:task/st-
ficthmqoc2pht111"
}
```

## Canceling a task on a Snowball Edge with Snowball Edge Device Management

To send a cancel request for a specific task, use the cancel-task command. You can cancel only tasks in the QUEUED state that have not yet run. Tasks that are already running can't be canceled.



## Note

A task that you're attempting to cancel might still run if it is processed from the queue before the cancel-task command changes the task's state.

To cancel a task, use the following command. Replace each user input placeholder with your own information.

#### Command

```
aws snow-device-management cancel-task \
--task-id st-ficthmqoc2pht111
```

## **Exceptions**

ValidationException ResourceNotFoundException InternalServerException ThrottlingException AccessDeniedException

```
{
    "taskId": "st-ficthmqoc2pht111"
}
```

## Listing Snowball Edge Device Management commands and syntax

To return a list of all supported commands for the Snowball Edge Device Management API, use the help command. You can also use the help command to return detailed information about and syntax for a given command.

To list all the supported commands, use the following command.

#### **Command**

```
aws snow-device-management help
```

To return detailed information and syntax for a command, use the following command. Replace *command* with the name of the command that you're interested in.

#### Command

```
aws snow-device-management command help
```

## Listing Snowball Edge available for remote management

To return a list of all devices on your account that have Snowball Edge Device Management enabled in the Amazon Web Services Region where the command is run, use the list-devices command. --max-results and --next-token are optional. For more information, see <u>Using Amazon CLI pagination options</u> in the "Amazon Command Line Interface User Guide".

To list remote-manageable devices, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management list-devices \
--max-results 10
```

## Exceptions

```
ValidationException
InternalServerException
ThrottlingException
AccessDeniedException
```

## Output

## Listing status of Snowball Edge Device Management tasks across Snowball Edge

To return the status of tasks for one or more target devices, use the list-executions command. To filter the return list to show tasks that are currently in a single specific state, use the --state parameter. --max-results and --next-token are optional. For more information, see <u>Using</u>

Amazon CLI pagination options in the "Amazon Command Line Interface User Guide".

A task can have one of the following states:

QUEUED

- IN\_PROGRESS
- CANCELED
- FAILED
- COMPLETED
- REJECTED
- TIMED\_OUT

To list task status across devices, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management list-executions \
--taskId st-ficthmqoc2phtlef \
--state SUCCEEDED \
--max-results 10
```

## **Exceptions**

```
ValidationException
InternalServerException
ThrottlingException
AccessDeniedException
```

```
}
]
}
```

## Listing available resources on Snowball Edge with Snowball Edge Device Management

To return a list of the Amazon resources available for a device, use the list-device-resources command. To filter the list by a specific type of resource, use the --type parameter. Currently, Amazon EC2-compatible instances are the only supported resource type. --max-results and --next-token are optional. For more information, see <u>Using Amazon CLI pagination options</u> in the "Amazon Command Line Interface User Guide".

To list the available resources for a device, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management list-device-resources \
--managed-device-id smd-fictbgr3rbcje111 \
--type AWS::EC2::Instance
--next-
token YAQGPwAT9l3wVKaGYjt4yS34MiQLWvzcShe9oIeDJr05AT4rXSprqcqQhhBEYRfcerAp0YYbJmRT=
--max-results 10
```

## **Exceptions**

```
ValidationException
InternalServerException
ThrottlingException
AccessDeniedException
```

```
{
```

## Listing tags for Snowball Edge or Snowball Edge Device Management tags

To return a list of tags for a managed device or task, use the list-tags-for-resource command.

To list the tags for a device, use the following command. Replace the example Amazon Resource Name (ARN) with the ARN for your device.

#### Command

```
aws snow-device-management list-tags-for-resource
--resource-arn arn:aws:snow-device-management:us-west-2:123456789012:managed-device/
smd-fictbgr3rbcjeqa5
```

## **Exceptions**

```
AccessDeniedException
InternalServerException
ResourceNotFoundException
ThrottlingException
```

## Output

```
{
    "tags": {
        "Project": "PrototypeA"
    }
}
```

Listing device or task tags 373

## Listing Snowball Edge Device Management tasks by status

Use the list-tasks command to return a list of tasks from the devices in the Amazon Region where the command is run. To filter the results by IN\_PROGRESS, COMPLETED, or CANCELED status, use the --state parameter. --max-results and --next-token are optional. For more information, see <a href="Using Amazon CLI pagination options">Using Amazon CLI pagination options</a> in the "Amazon Command Line Interface User Guide".

To list tasks by status, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management list-tasks \
--state IN_PROGRESS \
--next-token K8VAMqKiP2Cf4xGkmH8GMyZrg0F8FUb+d10KTP9+P4pUb+8PhW+6MiXh4= \
--max-results 10
```

### **Exceptions**

```
ValidationException
InternalServerException
ThrottlingException
AccessDeniedException
```

### Output

Listing tasks by status 374

}

## Appling tags to Snowball Edge Device Management tasks or Snowball Edge

To add or replace a tag for a device, or for a task on a device, use the tag-resource command. The --tags parameter accepts a comma-separated list of Key=Value pairs.

To apply tags to a device, use the following command. Replace each *user input placeholder* with your own information.

#### **Command**

```
aws snow-device-management tag-resource \
--resource-arn arn:aws:snow-device-management:us-west-2:123456789012:managed-device/
smd-fictbgr3rbcjeqa5 \
--tags Project=PrototypeA
```

## **Exceptions**

AccessDeniedException
InternalServerException
ResourceNotFoundException
ThrottlingException

## Removing Snowball Edge Device Management tags from tasks or Snowball Edge

To remove a tag from a device, or from a task on a device, use the untag-resources command.

To remove tags from a device, use the following command. Replace each *user input placeholder* with your own information.

#### Command

```
aws snow-device-management untag-resources \
```

```
--resource-arn arn:aws:snow-device-management:us-west-2:123456789012:managed-device/smd-fictbgr3rbcjeqa5 \
--tag-keys Project
```

## **Exceptions**

AccessDeniedException
InternalServerException
ResourceNotFoundException
ThrottlingException

## **Updating software on Snowball Edge devices**

Amazon will notify you when new software is available for Snowball Edge you have. The notification is provided through email, Amazon Health Dashboard, and as a CloudWatch event. The email notification is sent from Amazon Web Services, Inc. to the email address attached to the Amazon account used to order the Snowball Edge device. When you receive the notification, follow the instructions in this topic and download and install the update as soon as possible to avoid interruption of your use of the device. For more information about Amazon Health Dashboard, see Amazon Health User Guide. For more information about CloudWatch Events, see Amazon CloudWatch Events User Guide.

You can download software updates from Amazon and install them on Snowball Edge devices in your on-premises environments. These updates happen in the background. You can continue to use your devices as normal while the latest software is downloaded securely from Amazon to your device. However, to apply downloaded updates, you must stop workloads on the device and restart it.

Software updates provided by Amazon for Snowball Edge/Snowball Edge devices (Appliances) are Appliance Software as per Section 9 of the Service Terms.

The software updates are provided solely for the purpose of installing the software updates on the applicable Appliance on behalf of Amazon. You will not (or attempt to), and will not permit or authorize third parties to (or attempt to) (i) make any copies of the software updates other than those necessary to install the software updates on the applicable Appliance, or (ii) circumvent or disable any features or measures in the software updates, including, but not limited to, any encryption applied to the software update. Once the software updates have been installed on the applicable Appliance, you agree to delete the software updates from any and all media utilized in installing the software updates to the Appliance.

### Marning

We highly recommend that you suspend all activity on your device before installing the update. Updating the device and restarting will stop running instances and interrupt any writes to local Amazon S3 buckets.

## **Topics**

- Prerequisites for updating software on Snowball Edge devices
- Downloading updates to Snowball Edge devices
- Installing updates to Snowball Edge devices
- Updating the SSL certificate on Snowball Edge devices
- Updating your Amazon Linux 2 AMIs on Snowball Edge

## Prerequisites for updating software on Snowball Edge devices

Before you can update your device, the following prerequisites must be met:

- You've created your job, have the device on-premises, and you've unlocked it. For more information, see Getting started with Snowball Edge.
- Updating Snowball Edge devices is done through the Snowball Edge client. The latest version of the Snowball Edge client must be downloaded and installed on a computer in your local environment that has a network connection to the device you want to update. For more information, see Using the Snowball Edge Client.
- (Optional) We recommend that you configure a profile for the Snowball Edge client. For more information, see Configuring a Profile for the Snowball Edge Client.
- For Amazon S3 compatible storage on Snowball Edge on clustered Snowball Edge devices, stop the S3-Snow service and disable auto-start for it. See Configuring Amazon S3 compatible storage on Snowball Edge to autostart using Amazon OpsHub.



## Note

For clustered devices, all commands have to be run for each device.

After you complete these tasks, you can download and install updates for Snowball Edge devices.

## Downloading updates to Snowball Edge devices

There are two ways that you can download an update for Snowball Edge:

- You can trigger manual updates at any time using specific Snowball Edge Client commands.
- You can programmatically determine a time to automatically update the device.

The following procedure outlines the process of manually downloading updates. For information about automatically updating your Snowball Edge device, see configure-auto-updatestrategy in Updating a Snowball Edge.

## Note

If your device has no access to the internet, you can download an update file using the GetSoftwareUpdates API. Then point to a local file location when you call downloadupdates using the uri parameter, as in the following example.

```
snowballEdge download-updates --uri file:///tmp/local-update
```

For Windows operating systems, format the value of the uri parameter as follows:

snowballEdge download-updates --uri file:/C:/path/to/local-update

### To check for and download Snowball Edge software updates for standalone devices

- Open a terminal window, and ensure that the Snowball Edge device is unlocked using the describe-device command. If the device is locked, use the unlock-device command to unlock it. For more information, see Unlocking the Snowball Edge.
- When the device is unlocked, run the snowballEdge check-for-updates command. This command returns the latest available version of the Snowball Edge software, and also the current version installed on the device.
- If your device software is out of date, run the snowballEdge download-updates 3. command.

## Note

If your device is not connected to the internet, first download an update file using the GetSoftwareUpdates API. Then run the snowballEdge download-updates command using the uri parameter with a local path to the file that you downloaded, as in the following example.

snowballEdge download-updates --uri file:///tmp/local-update

Downloading updates 379 For Windows operating systems, format the value of the uri parameter as follows:

```
snowballEdge download-updates --uri file:/C:/path/to/local-update
```

You can check the status of this download with the snowballEdge describe-devicesoftware command. While an update is downloading, you display the status using this command.

## Example output of describe-device-software command

Install State: Downloading

### To check for and download Snowball Edge software updates for clusters of devices

- Open a terminal window, and ensure that all of the Snowball Edge devices in the cluster are unlocked using the snowballEdge describe-device command. If the devices are locked, use the snowballEdge unlock-cluster command to unlock it. For more information, see Unlocking the Snowball Edge.
- 2. When all of the devices in the cluster are unlocked, for each device in the cluster, run the check-for-updates command. This command returns the latest available version of the Snowball Edge software, and also the current version installed on the device.

```
snowballEdge check-for-updates --unlock-code 29-character-unlock-code --manifest-
file path/to/manifest/file.bin --endpoint https://ip-address-of-snow-device
```



The unlock code and manifest file are the same for all devices in the cluster.

Downloading updates 380

## Example of check-for-updates command

```
{
"InstalledVersion" : "118",
"LatestVersion" : "119"
}
```

If the value of the LatestVersion name is greater than the value of the InstalledVersion name, an update is available.

3. For each device in the cluster, use the download-updates command to download the update.

```
snowballEdge download-updates --uri file:///tmp/local-update
```

## Note

For Windows operating systems, format the value of the uri parameter as follows:

```
snowballEdge download-updates --uri file:/C:/path/to/local-update
```

4. To check the status of this download for each device in the cluster, use the describedevice-software command.

```
snowballEdge describe-device-software --unlock-code 29-character-unlock-code --
manifest-file path/to/manifest/file.bin --endpoint https://ip-address-of-snow-
device
```

## Example of output of the describe-device-software command

```
{
"InstalledVersion" : "118",
"InstallingVersion" : "119",
"InstallState" : "DOWNLOADED",
```

Downloading updates 381

```
"CertificateExpiry": "Sat Mar 30 16:47:51 UTC 2024"
}
```

If the value of the InstallState name is DOWNLOADED, the update is done downloading and available to install.

## Installing updates to Snowball Edge devices

After downloading updates, you must install them and restart your device for the updates to take effect. The following procedure guides you through manually installing updates.

For clusters of Snowball Edge devices, the update must be downloaded to and installed for each device in the cluster.



## Note

Suspend all activity on the device before you install software updates. Installing updates stops running instances and interrupts any writes to Amazon S3 buckets on the device. This can result in lost data

## To install software updates that were already downloaded to standalone Snowball Edge

- Open a terminal window, and ensure that the Snowball Edge device is unlocked using the describe-device command. If the device is locked, use the unlock-device command to unlock it. For more information, see Unlocking the Snowball Edge.
- 2. Run the list-services command to see the services available on the device. The command returns the service IDs of each service available on the device.

```
snowballEdge list-services
```

## Example of output of list-services command

Installing updates 382

```
"ServiceIds" : [ "greengrass", "fileinterface", "s3", "ec2", "s3-snow" ]
}
```

3. For each service ID identified by the list-services command, run the describe-service command to see the status. Use this information to identify services to stop.

```
snowballEdge describe-service --service-id service-id
```

## Example of output of describe-service command

```
{
"ServiceId" : "s3",
  "Status" : {
   "State" : "ACTIVE"
 },
"Storage" : {
"TotalSpaceBytes": 99608745492480,
"FreeSpaceBytes" : 99608744468480
},
"Endpoints" : [ {
"Protocol" : "http",
"Port": 8080,
"Host": "192.0.2.0"
}, {
"Protocol" : "https",
"Port": 8443,
"Host": "192.0.2.0",
"CertificateAssociation" : {
"CertificateArn" : "arn:aws:snowball-
device:::certificate/6d955EXAMPLEdb71798146EXAMPLE3f0"
 }
} ]
}
```

This output shows that the s3 service is active and must be stopped using the stop-service command.

Installing updates 383

Use the stop-service command to stop each service where the value of the State name is ACTIVE in the output of the list-services command. If more than one service is running, stop each one before continuing.



## Note

The Amazon S3 adapter, Amazon EC2, Amazon STS, and IAM services cannot be stopped. If Amazon S3 compatible storage on Snowball Edge is running, stop it before installing updates. Amazon S3 compatible storage on Snowball Edge has s3-snow as the serviceId.

snowballEdge stop-service --service-id service-id --device-ip-addresses snowdevice-1-ip-address snow-device-device-2-ip-address snow-device-3-ip-address -manifest-file path/to/manifest/file.bin --unlock-code 29-character-unlock-code -endpoint https://snow-device-ip-address

## Example of output of the stop-service command

Stopping the AWS service on your Snowball Edge. You can determine the status of the AWS service using the describe-service command.

- Run the snowballEdge install-updates command. 5.
- You can check the status of this installation with the snowballEdge describe-devicesoftware command. While an update is installing, you display the status with this command.

## **Example output**

Install State: Installing //Possible values[NA, Installing, Requires Reboot]

You've successfully installed a software update for your Snowball Edge device. Installing an update does not automatically apply the update to the device. To finish installing the update, the device must be restarted.

### Marning

Restarting your Snowball Edge device without stopping all activity on the device can result in lost data.

- When all the services on the device have stopped, reboot the device, unlock the device, and reboot it again. This completes installation of the downloaded software updates. For more information about rebooting the device, see Rebooting the Snowball Edge. For more information about unlocking the device, see Unlocking the Snowball Edge.
- 8. When the device powers on after the second reboot, unlock the device.
- 9. Run the check-for-updates command. This command returns the latest available version of the Snowball Edge software, and also the current version that is installed on the device.

## To install software updates that were already downloaded to a cluster of Snowball Edge devices

- 1. For each device in the cluster, run the describe-device command to determine if the devices are unlocked. If the devices are locked, use the unlock-cluster command to unlock it. For more information, see Unlocking the Snowball Edge.
- 2. For each device in the cluster, run the list-services command to see the services available on the device. The command returns the service IDs of each service available on the device.

```
snowballEdge list-services
```

## Example of output of list-services command

```
{
  "ServiceIds" : [ "greengrass", "fileinterface", "s3", "ec2", "s3-snow" ]
}
```

For each service ID identified by the list-services command, run the describe-service command to see the status. Use this information to identify services to stop.

```
snowballEdge describe-service --service-id service-id
```

### Example of output of describe-service command

```
"ServiceId" : "s3",
  "Status" : {
    "State" : "ACTIVE"
  },
"Storage" : {
"TotalSpaceBytes": 99608745492480,
"FreeSpaceBytes": 99608744468480
},
"Endpoints" : [ {
"Protocol" : "http",
"Port": 8080,
"Host": "192.0.2.0"
}, {
"Protocol" : "https",
"Port": 8443,
"Host": "192.0.2.0",
"CertificateAssociation" : {
"CertificateArn" : "arn:aws:snowball-
device:::certificate/6d955EXAMPLEdb71798146EXAMPLE3f0"
  }
} ]
}
```

This output shows that the s3 service is active and must be stopped using the stop-service command.

4. For each device in the cluster, use the stop-service command to stop each service where the value of the State name is ACTIVE in the output of the list-services command. If more than one service is running, stop each one before continuing.



#### Note

The Amazon S3 adapter, Amazon EC2, Amazon STS, and IAM services cannot be stopped. If Amazon S3 compatible storage on Snowball Edge is running, stop it before installing updates. Amazon S3 compatible storage on Snowball Edge has s3-snow as the serviceId.

snowballEdge stop-service --service-id service-id --device-ip-addresses snowdevice-1-ip-address snow-device-device-2-ip-address snow-device-3-ip-address -manifest-file path/to/manifest/file.bin --unlock-code 29-character-unlock-code -endpoint https://snow-device-ip-address

## Example of output of the stop-service command

Stopping the AWS service on your Snowball Edge. You can determine the status of the AWS service using the describe-service command.

For each device in the cluster, run the install-updates command.

snowballEdge install-updates

You can check the status of this installation with the describe-device-software command.

snowballEdge describe-device-software

## Example of output of the describe-device-service command

Install State: Installing //Possible values[NA, Installing, Requires Reboot]

When the Install State is Requires Reboot, you've successfully installed the software update for your Snowball Edge device. Installing an update does not automatically apply the update to the device. To finish installing the update, the device must be restarted.

### Marning

Restarting the Snowball Edge device without stopping all activity on the device can result in lost data.

- 7. Reboot all devices in the cluster, unlock the cluster, and reboot all devices in the cluster again. This completes installation of the downloaded software updates. For more information about rebooting the devices, see Rebooting the Snowball Edge. For more information about unlocking the cluster of devices, see Unlocking the Snowball Edge.
- After each device in the cluster has rebooted twice, unlock the cluster then use the checkfor-updates command to verify the device was updated. This command returns the latest available version of the Snowball Edge software, and also the current version that is installed on the device. If the current version and the latest available version are the same, the device was updated successfully.

You have now successfully updated the Snowball Edge or cluster of devices and confirmed that the update to the latest Snowball Edge software.

# Updating the SSL certificate on Snowball Edge devices

If you plan to keep your Snowball Edge for more than 360 days, you will need to update the Secure Sockets Layer (SSL) certificate on the device to avoid interruption of your use of the device. If the certificate expires, you will not be able to use the device and will have to return it to Amazon.

Amazon will notify you 30 days before the SSL certificate expires for Snowball Edge you have. The notification is provided through email, Amazon Health Dashboard, and as a Amazon CloudTrail event. The email notification is sent from Amazon Web Services, Inc. to the email address attached to the Amazon account used to order the Snowball Edge device. When you receive the notification, follow the instructions in this topic and request an update as soon as possible to avoid interruption of your use of the device. For more information about Amazon Health Dashboard, see Amazon

Updating the SSL certificate 388 <u>Health User Guide</u>. For more information about CloudWatch Events, see <u>Working with CloudTrail</u> Event history.

Updating the SSL certificate is done through the Snowball Edge client. The latest version of the Snowball Edge client must be downloaded and installed on a computer in your local environment that has a network connection to the device you want to update. For more information, see <u>Using</u> the Snowball Edge Client.

This topic explains how to determine when the certificate will expire and how to update your device.

 Use the snowballEdge describe-device-software command to determine when the certificate will expire. In the output of the command, the value of CertificateExpiry includes the date and time at which the certificate will expire.

### Example of describe-device-software output

Installed version: 101
Installing version: 102
Install State: Downloading
CertificateExpiry : Thur Jan 01 00:00:00 UTC 1970

- 2. Contact Amazon Web Services Support and request an SSL certificate update.
- 3. Amazon Web Services Support will provide an update file. <u>Download</u> and <u>install</u> the update file.
- 4. Use the new unlock code and manifest file when Unlocking the Snowball Edge.

# Updating your Amazon Linux 2 AMIs on Snowball Edge

As a best-practice for security, keep your Amazon Linux 2 AMIs up-to-date on Snowball Edge. Regularly check the <a href="Manazon Linux 2 AMI"><u>AMI (HVM)</u></a>, SSD Volume Type (64-bit x86) in the Amazon Web Services Marketplace for updates. When you identify the need to update your AMI, import the latest Amazon Linux 2 image to the Snow device. See <a href="Importing an Image into Your Device as an Amazon EC2-compatible AMI"><u>Importing an Image into Your Device as an Amazon EC2-compatible AMI</u></a>.

You can also get the latest Amazon Linux 2 image ID using the ssm get-parameters command in the Amazon CLI.

aws ssm get-parameters --names /aws/service/ami-amazon-linux-latest/amzn2-ami-hvm-x86\_64-gp2 --query 'Parameters[0].[Value]' --region your-region

The command returns the latest image ID of the AMI. For example:

ami-0ccb473bada910e74

# **Understanding Snowball Edge jobs**

A *job* in Amazon Snowball Edge is a discrete unit of work, defined when you create it in the console or the job management API. With the Amazon Snowball Edge device, there are three different job types, all of which are capable of local storage and compute functionality. This functionality uses the NFS interface or the Amazon S3 interface to read and write data. It triggers Lambda functions based on Amazon S3 PUT object API actions running locally on the Amazon Snowball Edge device.

- <u>Jobs to import data into Amazon S3 using a Snowball Edge device</u> The transfer of 210 TB or less of your local data copied onto a single device, and then moved into Amazon S3. For import jobs, Snowball devices and jobs have a one-to-one relationship. Each job has exactly one device associated with it. If you need to import more data, you can create new import jobs or clone existing ones. When you return a device of this job type, that data on it is imported into Amazon S3.
- Jobs to export data from Amazon S3 using a Snowball Edge device The transfer of any amount of data (located in Amazon S3), copied onto any number of Snowball Edge devices, and then moved one Amazon Snowball Edge device at a time into your on-premises data destination.
   When you create an export job, it's split into job parts. Each job part is no more than 210 TB in size, and each job part has exactly one Amazon Snowball Edge device associated with it. When you return a device of this job type, it's erased.
- Information about using Snowball Edge devices to provide local compute and storage
  functionality These jobs involve one Amazon Snowball Edge device, or multiple devices used
  in a cluster. These jobs don't start with data in their buckets like an export job, and they can't
  have data imported into Amazon S3 at the end like an import job. When you return a device
  of this job type, it's erased. With this job type, you also have the option of creating a cluster
  of devices. A cluster improves local storage durability and you can scale up or down with local
  storage capacity.

In Regions where Lambda is not available, this job type is called *Local storage only*.

# **Details about Snowball Edge jobs**

Before creating a job, ensure the <u>prerequisites</u> are met. Each job is defined by the details that you specify when it's created. The following table describes all the details of a job.

Job details 391

# Statuses of Snowball Edge jobs

Each Amazon Snowball Edge device job has a *status*, which changes to denote the current state of the job. This job status information doesn't reflect the health, the current processing state, or the storage used for the associated devices.

## To see the status of a job

- 1. Log into the Amazon Snow Family Management Console.
- 2. On the **Job dashboard**, choose the job.
- 3. Click on your job name within the console.
- 4. The Job Status pane will be located near the top and reflects the status of the job.

## Amazon Snowball Edge device job statuses

Console Identifier	API Identifier	Status Description
Job created	New	Your job has just been created. This status is the only one during which you can cancel a job or its job parts, if the job is an export job.
Preparing appliance	PreparingAppliance	Amazon is preparing a device for your job.
Exporting	InProgress	Amazon is exporting your data from Amazon S3 onto a device.
Preparing shipment	PreparingShipment	Amazon is preparing to ship a device to you. The expected shipping tracking information is

Job statuses 392

Console Identifier	API Identifier	Status Description
		provided for customers in the status.
In transit to you	InTransitToCustomer	The device has been shipped to the address you provided during job creation.
Delivered to you	WithCustomer	The device has arrived at the address you provided during job creation.
In transit to Amazon	InTransitToAWS	You have shipped the device back to Amazon.
At sorting facility	WithAWSSortingFacility	The device for this job is at our internal sorting facility. Any additional processin g for import jobs into Amazon S3 will begin soon, typically within 2 days.
At Amazon	WithAWS	Your shipment has arrived at Amazon. If you're importing data, your import typically begins within a day of its arrival.

Job statuses 393

Console Identifier	API Identifier	Status Description
Importing	InProgress	Amazon is importing your data into Amazon Simple Storage Service (Amazon S3).
Completed	Complete	Your job or a part of your job has completed successfully.
Canceled	Cancelled	Your job has been canceled.

# **Statuses of Snowball Edge cluster jobs**

Each cluster has a *status*, which changes to denote the current general progress state of the cluster. Each individual node of the cluster has its own job status.

This cluster status information doesn't reflect the health, the current processing state, or the storage used for the cluster or its nodes.

Console Identifier	API Identifier	Status Description
Awaiting Quorum	AwaitingQuorum	The cluster hasn't been created yet, because there aren't enough nodes to begin processing the cluster request. For a cluster to be created, it must have at least five nodes.

Console Identifier	API Identifier	Status Description
Pending	Pending	Your cluster has been created, and we're getting its nodes ready to ship out. You can track the status of each node with that node's job status.
Delivered to you	InUse	At least one node of the cluster is at the address you provided during job creation.
Completed	Complete	All the nodes of the cluster have been returned to Amazon.
Canceled	Cancelled	The request to make a cluster was canceled. Cluster requests can only be canceled before they enter the Pending state.

# Jobs to import data into Amazon S3 using a Snowball Edge device

With an import job, your data is copied to the Amazon Snowball Edge device with the built-in Amazon S3 adapter or NFS mount point. Your data source for an import job should be on-premises. In other words, the storage devices that hold the data to be transferred should be physically located at the address that you provided when you created the job.

Import jobs 395

When you import files, each file becomes an object in Amazon S3 and each directory becomes a prefix. If you import data into an existing bucket, any existing objects with the same names as newly imported objects are overwritten. The import job type is also capable of local storage and compute functionality. This functionality uses the NFS interface or Amazon S3 adapter to read and write data, and triggers Lambda functions based off of Amazon S3 PUT object API actions running locally on the Amazon Snowball Edge device.

When all of your data has been imported into the specified Amazon S3 buckets in the Amazon Web Services Cloud, Amazon performs a complete erasure of the device. This erasure follows the NIST 800-88 standards.

After your import is complete, you can download a job report. This report alerts you to any objects that failed the import process. You can find additional information in the success and failure logs.



#### Important

Don't delete your local copies of the transferred data until you can verify the results of the job completion report and review your import logs.

# Jobs to export data from Amazon S3 using a Snowball Edge device



### Note

Tags and metadata are NOT currently supported, in other words, all tags and metadata would be removed when exporting objects from S3 buckets.

Your data source for an export job is one or more Amazon S3 buckets. After the data for a job part is moved from Amazon S3 to an Amazon Snowball Edge device, you can download a job report. This report alerts you to any objects that failed the transfer to the device. You can find more information in your job's success and failure logs.

You can export any number of objects for each export job, using as many devices as it takes to complete the transfer. Each Amazon Snowball Edge device for an export job's job parts is delivered one after another, with subsequent devices shipping to you after the previous job part enters the In transit to Amazon status.

**Export jobs** 396 When you copy objects into your on-premises data destination from a device using the Amazon S3 adapter or the NFS mount point, those objects are saved as files. If you copy objects into a location that already holds files, any existing files with the same names are overwritten. The export job type is also capable of local storage and compute functionality. This functionality uses the NFS interface or Amazon S3 adapter to read and write data, and triggers Lambda functions based off of Amazon S3 PUT object API actions running locally on the Amazon Snowball Edge device.

When Amazon receives a returned device, we completely erase it, following the NIST 800-88 standards.

#### Important

Data you want to export to a Snow device must be in Amazon S3. Any data in Amazon S3 Glacier that you plan to export to the Snow device will have to be thawed or moved into the S3 storage class before it can be exported. Do this before creating the Snow export job. Don't change, update, or delete the exported Amazon S3 objects until you can verify that all of your contents for the entire job have been copied to your on-premises data destination.

When you create an export job, you can export an entire Amazon S3 bucket or a specific range of objects keys.

# Using Amazon S3 object keys when exporting data to a Snowball Edge device

When you create an export job in the Amazon Snow Family Management Console or with the job management API, you can export an entire Amazon S3 bucket or a specific range of objects keys. Object key names uniquely identify objects in a bucket. If you export a range, you define the length of the range by providing either an inclusive range beginning, an inclusive range ending, or both.

Ranges are UTF-8 binary sorted. UTF-8 binary data is sorted in the following way:

- The numbers 0–9 come before both uppercase and lowercase English characters.
- Uppercase English characters come before all lowercase English characters.
- Lowercase English characters come last when sorted against uppercase English characters and numbers.
- Special characters are sorted among the other character sets.

For more information about the specifics of UTF-8, see UTF-8 on Wikipedia.

# Examples of using Amazon S3 object keys when exporting data to a Snowball Edge device

Assume that you have a bucket containing the following objects and prefixes, sorted in UTF-8 binary order:

- 01
- Aardvark
- Aardwolf
- Aasvogel/apple
- Aasvogel/arrow/object1
- Aasvogel/arrow/object2
- Aasvogel/banana
- Aasvogel/banker/object1
- Aasvogel/banker/object2
- Aasvogel/cherry
- Banana
- Car

Specified range beginning	Specified range ending	Objects in the range that will be exported
(none)	(none)	All of the objects in your bucket
(none)	Aasvogel	01
		Aardvark
		Aardwolf
		Aasvogel/apple

Specified range ending	Objects in the range that will be exported
	Aasvogel/arrow/ object1
	Aasvogel/arrow/ object2
	Aasvogel/ banana
	Aasvogel/ banker/object1
	Aasvogel/ banker/object2
	Aasvogel/cherry
Aasvogel/banana	01
	Aardvark
	Aardwolf
	Aasvogel/apple
	Aasvogel/arrow/ object1
	Aasvogel/arrow/ object2
	Aasvogel/ banana

Specified range beginning	Specified range ending	Objects in the range that will be exported
Aasvogel	(none)	Aasvogel/apple Aasvogel/arrow/
		object1
		Aasvogel/arrow/ object2
		Aasvogel/
		banana
		Aasvogel/
		banker/object1
		Aasvogel/
		banker/object2
		Aasvogel/cherry
		Banana
		Car

Specified range beginning	Specified range ending	Objects in the range that will be exported
Aardwolf	(none)	Aardwolf
		Aasvogel/apple
		Aasvogel/arrow/ object1
		Aasvogel/arrow/ object2
		Aasvogel/ banana
		Aasvogel/ banker/object1
		Aasvogel/ banker/object2
		Aasvogel/cherry
		Banana
		Car

Specified range beginning	Specified range ending	Objects in the range that will be exported
Aar	(none)	Aardvark
		Aardwolf
		Aasvogel/apple
		Aasvogel/arrow/ object1
		Aasvogel/arrow/ object2
		Aasvogel/ banana
		Aasvogel/ banker/object1
		Aasvogel/ banker/object2
		Aasvogel/cherry
		Banana
		Car

Specified range beginning	Specified range ending	Objects in the range that will be exported
car	(none)	No objects are exported, and you get an error message when you try to create the job. Note that <i>car</i> is sorted below <i>Car</i> according to UTF-8 binary values.
Aar	Aarrr	Aardvark Aardwolf
Aasvogel/arrow	Aasvogel/arrox	Aasvogel/arrow/ object1 Aasvogel/arrow/ object2
Aasvogel/apple	Aasvogel/banana	Aasvogel/apple Aasvogel/arrow/ object1 Aasvogel/arrow/ object2 Aasvogel/ banana

Specified range beginning	Specified range ending	Objects in the range that will be exported
Aasvogel/apple	Aasvogel/banker	Aasvogel/apple
		Aasvogel/arrow/ object1
		Aasvogel/arrow/ object2
		Aasvogel/ banana
		Aasvogel/ banker/object1
		Aasvogel/ banker/object2
Aasvogel/apple	Aasvogel/cherry	Aasvogel/apple
		Aasvogel/arrow/ object1
		Aasvogel/arrow/ object2
		Aasvogel/ banana
		Aasvogel/ banker/object1
		Aasvogel/ banker/object2
		Aasvogel/cherry

Assume you have these three buckets and want to copy all objects from **folder2**.

- s3://bucket/folder1/
- s3://bucket/folder2/
- s3://bucket/folder3/

Specified range beginning	Specified range ending	Objects in the range that will be exported
folder2/	folder2/	All of the objects in bucket folder2.

# Best practices for jobs exporting data from Amazon S3 to a Snowball Edge device

- Ensure data is in Amazon S3, batch small files before ordering the job
- Ensure key ranges are specified in the export job definition if you have millions of objects in your bucket
- Update object keys to remove slash in the name as objects with trailing slashes in their names (/ or \) are not transferred to Snowball Edge
- For S3 buckets, the object length limitation is 255 characters.
- For S3 buckets that are version-enabled, only the current version of objects are exported.
- Delete markers are not exported.

# Information about using Snowball Edge devices to provide local compute and storage functionality

Local compute and storage jobs enable you to use Amazon S3 compatible storage on Snowball Edge locally, without an internet connection. You can't export data from Amazon S3 to the device or import data into Amazon S3 when the device is returned.

Best practices for export jobs 405

### **Topics**

- Information about jobs to store data locally on Snowball Edge devices
- Information about jobs providing local storage on a cluster of Snowball Edge devices

# Information about jobs to store data locally on Snowball Edge devices

You can read and write objects to an Amazon Snowball Edge device using Amazon S3 compatible storage on Snowball Edge or the S3 adapter. When you order a device, if you choose to use the S3 adapter, you also choose which Amazon S3 buckets will be included on the device when you receive it. If you choose to use Amazon S3 compatible storage on Snowball Edge, no Amazon S3 buckets are included on the device when you receive it.

You can create Amazon S3 buckets on the Snowball Edge devices to store and retrieve objects on premises for applications that require local data access, local data processing, and data residency. Amazon S3 compatible storage on Snowball Edge provides a new storage class, SNOW, which uses the Amazon S3 APIs, and is designed to store data durably and redundantly across multiple Snowball Edge devices. You can use the same APIs and features on Snowball Edge buckets that you do on Amazon S3, including bucket lifecycle policies, encryption, and tagging. When the device or devices are returned to Amazon, all data created or stored in Amazon S3 compatible storage on Snowball Edge is erased. For more information, see Local Compute and Storage Only Jobs.

For more information, see <u>Amazon S3 compatible storage on Snowball Edge</u> in this guide.

When you've finished using the device, return it to Amazon, and the device will be erased. This erasure follows the National Institute of Standards and Technology (NIST) 800-88 standards.

# Information about jobs providing local storage on a cluster of Snowball Edge devices

A cluster is a logical grouping of Snowball Edge devices, in groups of 3 to 16 devices. A cluster is created as a single job, which offers increased durability and storage size when compared to other Amazon Snowball Edge job offerings. For more information about cluster jobs, see <u>Clustering overview</u> in this guide.

# Best practices for using a Snowball Edge device

To help get the maximum benefit and satisfaction with your Amazon Snowball Edge device, we recommend that you follow these best practices.

# **Security recommendations for Snowball Edge**

The following are recommendations and best practices for maintaining security while working with an Amazon Snowball Edge device.

## **General Security**

- If you notice anything that looks suspicious about the Amazon Snowball Edge device, don't connect it to your internal network. Instead, contact <u>Amazon Web Services Support</u>, and a new Amazon Snowball Edge device will be shipped to you.
- We recommend that you don't save a copy of the unlock code in the same location on the
  workstation as the manifest for that job. Saving these in different locations helps prevent
  unauthorized parties from gaining access to the Amazon Snowball Edge device. For example, you
  can save a copy of the manifest to your local server, and email the code to a user that unlocks
  the device. This approach limits access to the Amazon Snowball Edge device to individuals who
  have access to files saved on the server and the user's email address.
- The credentials displayed, when you run the Snowball Edge client commands list-access-keys and get-secret-access-key, are a pair of access keys used to access your device.
  - These keys are only associated with the job and the local resources on the device. They don't map to your Amazon Web Services account or any other Amazon Web Services account. If you try to use these keys to access services and resources in the Amazon Web Services Cloud, they will fail because they only work for the local resources associated with your job.
- If you feel your credentials are lost or have been compromised, request a new manifest file and unlock code by following the process to update the device's SSL certificate. See <u>Updating the SSL</u> <u>certificate on Snowball Edge devices</u>.

For information about how to use Amazon Identity and Access Management (IAM) policies to control access, see Amazon-Managed (Predefined) Policies for Amazon Snowball Edge.

Security recommendations 407

### **Network Security**

- We recommend that you only use one method at a time for reading and writing data to a local bucket on an Amazon Snowball Edge device.
- To prevent corrupting your data, don't disconnect the Amazon Snowball Edge device or change its network settings while transferring data.
- Files that are being written to on the device should be in a static state. Files that are modified while they are being written to can result in read/write conflicts.
- For more information about improving performance of your Amazon Snowball Edge device, see Recommendations for best data transfer performance to or from a Snowball Edge.

# Best practices for managing resources of a Snowball Edge

Consider the following best practices for managing jobs and resources on your Amazon Snowball Edge device.

- The **Job created** status is the only status in which you can cancel a job. When a job changes to a different status, you can't cancel the job. This applies to clusters.
- For import jobs, don't delete your local copies of the transferred data until the import into Amazon S3 is successful. As part of your process, be sure to verify the results of the data transfer.

# Recommendations for best data transfer performance to or from a Snowball Edge



#### Note

The data transfer performance you experience will vary based on the network environment, operating systems, copy method, protocol, source data read performance, and dataset characteristics such as file size. To determine the accurate data transfer rates and data transfer times, we recommend you to measure performance through proof-of-concept testing in your environment.

Following, you can find recommendations and information about Amazon Snowball Edge device performance. This section describes performance in general terms, because on-premises environments have a different way of doing things—different network technologies, different hardware, different operating systems, different procedures, and so on.

The following table outlines how your network's transfer rate impacts how long it takes to fill a Snowball Edge device with data. Transferring smaller files reduces your transfer speed due to increased overhead. If you have many small files, we recommend that you zip them up into larger archives before transferring them onto a Snowball Edge device.

Rate (MB/s)	82 TB transfer time
800	1.22 days
450	2.11 days
400	2.37 days
300	3.16 days
277	3.42 days
200	4.75 days
100	9.49 days
60	15.53 days
30	31.06 days
10	85.42 days

To provide meaningful guidance about performance, the following sections describe how to determine when to use the Amazon Snowball Edge device and how to get the most out of the service.

The following practices are highly recommended, because they have the largest impact on improving the performance of your data transfer:

• We recommend that you have no more than 500,000 files or directories within each directory.

- We recommend that all files transferred to a Snowball Edge device be no smaller than 1 MB in size.
- If you have many files smaller than 1 MB in size, we recommend that you zip them up into larger archives before transferring them onto a Snowball Edge device.

# Improving speed of data transfer to and from a Snowball Edge

One of the best ways that you can improve the performance of an Amazon Snowball Edge device is to speed up the transfer of data going to and from a device. In general, you can improve the transfer speed from your data source to the device in the following ways. This following list is ordered from largest to smallest positive impact on performance:

- 1. **Perform multiple write operations at one time** To do this, run each command from multiple terminal windows on a computer with a network connection to a single Amazon Snowball Edge device.
- 2. **Transfer small files in batches** Each copy operation has some overhead because of encryption. To speed up the process, batch files together in a single archive. When you batch files together, they can be auto-extracted when they are imported into Amazon S3. For more information, see Batching small files to improve data transfer performance to Snowball Edge.
- 3. **Don't perform other operations on files during transfer** Renaming files during transfer, changing their metadata, or writing data to the files during a copy operation has a negative impact on transfer performance. We recommend that your files remain in a static state while you transfer them.
- 4. **Reduce local network use** Your Amazon Snowball Edge device communicates across your local network. So you can improve data transfer speeds by reducing other local network traffic between the Amazon Snowball Edge device, the switch it's connected to, and the computer that hosts your data source.
- 5. **Eliminate unnecessary hops** We recommend that you set up your Amazon Snowball Edge device, your data source, and the computer running the terminal connection between them so that they're the only machines communicating across a single switch. Doing so can improve data transfer speeds.

# **Security for Amazon Snowball Edge**

Cloud security at Amazon is the highest priority. As an Amazon customer, you benefit from a data center and network architecture that is built to meet the requirements of the most security-sensitive organizations.

Security is a shared responsibility between Amazon and you. The <u>shared responsibility model</u> describes this as security *of* the cloud and security *in* the cloud:

- Security of the cloud Amazon is responsible for protecting the infrastructure that runs
   Amazon services in the Amazon Web Services Cloud. Amazon also provides you with services
   that you can use securely. Third-party auditors regularly test and verify the effectiveness of our
   security as part of the <u>Amazon compliance programs</u>. To learn about the compliance programs
   that apply to Amazon Snowball Edge, see <u>Amazon Services in Scope by Compliance Program</u>.
- **Security in the cloud** Your responsibility is determined by the Amazon service that you use. You are also responsible for other factors including the sensitivity of your data, your company's requirements, and applicable laws and regulations.

This documentation helps you understand how to apply the shared responsibility model when using Amazon Snowball Edge. The following topics show you how to configure Amazon Snowball Edge to meet your security and compliance objectives. You also learn how to use other Amazon services that help you to monitor and secure your Amazon Snowball Edge resources.

## **Topics**

- Data Protection in Amazon Snowball Edge Edge
- Identity and Access Management in Amazon Snowball Edge
- Logging and Monitoring in Amazon Snowball Edge
- Compliance Validation for Amazon Snowball Edge
- Resilience
- Infrastructure Security in Amazon Snowball Edge

# Data Protection in Amazon Snowball Edge Edge

Amazon Snowball Edge conforms to the Amazon <u>shared responsibility model</u>, which includes regulations and guidelines for data protection. Amazon is responsible for protecting the global

Data Protection 411

infrastructure that runs all the Amazon services. Amazon maintains control over data hosted on this infrastructure, including the security configuration controls for handling customer content and personal data. Amazon customers and APN partners, acting either as data controllers or data processors, are responsible for any personal data that they put in the Amazon Web Services Cloud.

For data protection purposes, we recommend that you protect Amazon Web Services account credentials and set up individual users with Amazon Identity and Access Management (IAM), so that each user is given only the permissions necessary to fulfill their job duties. We also recommend that you secure your data in the following ways:

- Use multi-factor authentication (MFA) with each account.
- Use SSL/TLS to communicate with Amazon resources. We recommend TLS 1.2 or later.
- Set up API and user activity logging with Amazon CloudTrail.
- Use Amazon encryption solutions, along with all default security controls within Amazon services.
- Use advanced managed security services such as Amazon Macie, which assists in discovering and securing personal data that is stored in Amazon S3.
- If you require FIPS 140-2 validated cryptographic modules when accessing Amazon through a command line interface or an API, use a FIPS endpoint. For more information about the available FIPS endpoints, see Federal Information Processing Standard (FIPS) 140-2.

We strongly recommend that you never put sensitive identifying information, such as your customers' account numbers, into free-form fields such as a **Name** field. This includes when you work with Amazon Snowball Edge or other Amazon services using the console, API, Amazon CLI, or Amazon SDKs. Any data that you enter into Amazon Snowball Edge or other services might get picked up for inclusion in diagnostic logs. When you provide a URL to an external server, don't include credentials information in the URL to validate your request to that server.

For more information about data protection, see the <u>Amazon Shared Responsibility Model and</u> GDPR blog post on the *Amazon Security Blog*.

### **Topics**

- Protecting Data in the Cloud
- Protecting Data On Your Device

Data Protection 412

# **Protecting Data in the Cloud**

Amazon Snowball Edge protects your data when you're importing or exporting data into Amazon S3, when you create a job to order a Snowball Edge device, and when your device is updated. The following sections describe how you can protect your data when you use Snowball Edge Edge and are online or interacting with Amazon in the cloud.

## **Protecting Data On Your Device**

## **Securing your Amazon Snowball Edge**

Following are some security points that we recommend you consider when using Amazon Snowball Edge, and also some high-level information on other security precautions that we take when a device arrives at Amazon for processing.

We recommend the following security approaches:

- You should make an effort to protect your job credentials from disclosure. Any individual who
  has access to a job's manifest and unlock code can access the contents of the device sent for that
  job.
- Don't leave the device sitting on a loading dock. Left on a loading dock, it can be exposed to
  the elements. Although each Amazon Snowball Edge device is rugged, weather can damage the
  sturdiest of hardware. Report stolen, missing, or broken devices as soon as possible. The sooner
  such an issue is reported, the sooner another one can be sent to complete your job.

We perform the following security steps:

- When transferring data with the Amazon S3 adapter, object metadata is not persisted. The only
  metadata that remains the same is filename and filesize. All other metadata is set as in
  the following example: -rw-rw-r-- 1 root root [filesize] Dec 31 1969 [path/
  filename]
- When transferring data with the NFS interface, object metadata is persisted.
- When a device arrives at Amazon, we inspect it for any signs of tampering and to verify that
  no changes were detected by the Trusted Platform Module (TPM). Amazon Snowball Edge uses
  multiple layers of security designed to protect your data, including tamper-resistant enclosures,
  256-bit encryption, and an industry-standard TPM designed to provide both security and full
  chain of custody for your data.

Protecting Data in the Cloud 413

Once the data transfer job has been processed and verified, Amazon performs a software erasure
of the Snowball device that follows the National Institute of Standards and Technology (NIST)
quidelines for media sanitization.

## **Validating NFC Tags**

Snowball Edge Compute Optimized and Snowball Edge Storage Optimized (for data transfer) devices have NFC tags built into them. You can scan these tags with the Amazon Snowball Edge Verification App, available on Android. Scanning and validating these NFC tags can help you verify that your device has not been tampered with before you use it.

Validating NFC tags includes using the Snowball Edge client to generate a device-specific QR code to verify that the tags you're scanning are for the right device.

The following procedure describes how to validate the NFC tags on a Snowball Edge device. Before you get started, make sure you've performed the following first five steps of the getting started exercise:

- Create your Snowball Edge job. For more information, see <u>Creating a job to order a Snowball</u> Edge device
- 2. Receive the device. For more information, see Receiving the Snowball Edge.
- 3. Connect to your local network. For more information, see <u>Connecting a Snowball Edge to your local network</u>.
- 4. Get your credentials and tools. For more information, see Getting credentials to access a Snowball Edge.
- 5. Download and install the Snowball Edge client. For more information, see <u>Downloading and</u> installing the Snowball Edge Client.

## To validate the NFC tags

Run the snowballEdge get-app-qr-code Snowball Edge client command. If you run this
command for a node in a cluster, provide the serial number (--device-sn) to get a QR code
for a single node. Repeat this step for each node in the cluster. For more information on using
this command, see Getting a QR code to validate Snowball Edge NFC tags.

The QR code is saved to a location of your choice as a .png file.

- Navigate to the .png file that you saved, and open it so that you can scan the QR code with the 2. app.
- You can scan these tags using the Amazon Snowball Edge Verification App on Android.



#### (i) Note

The Amazon Snowball Edge Verification App is not available to download, but if you have a device with the app already installed, you can use the app.

Start the app, and follow the on-screen instructions.

You've now successfully scanned and validated the NFC tags for your device.

If you encounter issues while scanning, try the following:

- Confirm that your device has the Snowball Edge Compute Optimized options.
- If you have the app on another device, try using that device.
- Move the device to an isolated area of the room, away from interference from other NFC tags, and try again.
- If issues persist, contact Amazon Web Services Support.

# Identity and Access Management in Amazon Snowball Edge

Every Amazon Snowball Edge job must be authenticated. You do this by creating and managing the IAM users in your account. Using IAM, you can create and manage users and permissions in Amazon.

Amazon Snowball Edge users must have certain IAM-related permissions to access the Amazon Snowball Edge Amazon Web Services Management Console to create jobs. An IAM user that creates an import or export job must also have access to the right Amazon Simple Storage Service (Amazon S3) resources, such as the Amazon S3 buckets to be used for the job, Amazon KMS resources, Amazon SNS topic, and Amazon EC2-compatible AMI for edge compute jobs.



#### Important

For information about using IAM locally on your device, see Using IAM locally on a Snowball Edge.

### **Topics**

Access Control for Snowball Edge Console and Creating Jobs

# **Access Control for Snowball Edge Console and Creating Jobs**

As with all Amazon services, access to Amazon Snowball Edge requires credentials that Amazon can use to authenticate your requests. Those credentials must have permissions to access Amazon resources, such an Amazon S3 bucket or an Amazon Lambda function. Amazon Snowball Edge differs in two ways:

- 1. Jobs in Amazon Snowball Edge do not have Amazon Resource Names (ARNs).
- 2. Physical and network access control for a device on-premises is your responsibility.

See <u>Identity and Access Management for Amazon Snowball Edge</u> for details on how you can use <u>Amazon Identity and Access Management (IAM)</u> and Amazon Snowball Edge to help secure your resources by controlling who can access them in the Amazon Web Services Cloud, and also local access control recommendations.

## **Identity and Access Management for Amazon Snowball Edge**

Amazon Identity and Access Management (IAM) is an Amazon Web Services service that helps an administrator securely control access to Amazon resources. IAM administrators control who can be *authenticated* (signed in) and *authorized* (have permissions) to use Amazon Snow Family resources. IAM is an Amazon Web Services service that you can use with no additional charge.

## **Topics**

- Audience
- Authenticating with identities
- Managing access using policies
- How Amazon Snow Family works with IAM
- <u>Identity-based policy examples for Amazon Snowball Edge</u>
- Troubleshooting Amazon Snowball Edge identity and access

#### **Audience**

How you use Amazon Identity and Access Management (IAM) differs, depending on the work that you do in Amazon Snow Family.

**Service user** – If you use the Amazon Snow Family service to do your job, then your administrator provides you with the credentials and permissions that you need. As you use more Amazon Snow Family features to do your work, you might need additional permissions. Understanding how access is managed can help you request the right permissions from your administrator. If you cannot access a feature in Amazon Snow Family, see <u>Troubleshooting Amazon Snowball Edge identity and access</u>.

**Service administrator** – If you're in charge of Amazon Snow Family resources at your company, you probably have full access to Amazon Snow Family. It's your job to determine which Amazon Snow Family features and resources your service users should access. You must then submit requests to your IAM administrator to change the permissions of your service users. Review the information on this page to understand the basic concepts of IAM. To learn more about how your company can use IAM with Amazon Snow Family, see How Amazon Snow Family works with IAM.

**IAM administrator** – If you're an IAM administrator, you might want to learn details about how you can write policies to manage access to Amazon Snow Family. To view example Amazon Snow Family identity-based policies that you can use in IAM, see <u>Identity-based policy examples for Amazon Snowball Edge</u>.

## **Authenticating with identities**

Authentication is how you sign in to Amazon using your identity credentials. You must be *authenticated* (signed in to Amazon) as the Amazon Web Services account root user, as an IAM user, or by assuming an IAM role.

If you access Amazon programmatically, Amazon provides a software development kit (SDK) and a command line interface (CLI) to cryptographically sign your requests by using your credentials. If you don't use Amazon tools, you must sign requests yourself. For more information about using the recommended method to sign requests yourself, see <a href="Amazon Signature Version 4">Amazon April requests</a> in the IAM User Guide.

Regardless of the authentication method that you use, you might be required to provide additional security information. For example, Amazon recommends that you use multi-factor authentication (MFA) to increase the security of your account. To learn more, see <a href="Amazon Multi-factor authentication"><u>Amazon Multi-factor authentication in IAM in the IAM User Guide.</u></a>

#### **Amazon Web Services account root user**

When you create an Amazon Web Services account, you begin with one sign-in identity that has complete access to all Amazon Web Services services and resources in the account. This identity is called the Amazon Web Services account *root user* and is accessed by signing in with the email address and password that you used to create the account. We strongly recommend that you don't use the root user for your everyday tasks. Safeguard your root user credentials and use them to perform the tasks that only the root user can perform. For the complete list of tasks that require you to sign in as the root user, see <u>Tasks that require root user credentials</u> in the *IAM User Guide*.

## **Federated identity**

As a best practice, require human users, including users that require administrator access, to use federation with an identity provider to access Amazon Web Services services by using temporary credentials.

A federated identity is a user from your enterprise user directory, a web identity provider, the Amazon Directory Service, or any user that accesses Amazon Web Services services by using credentials provided through an identity source. When federated identities access Amazon Web Services accounts, they assume roles, and the roles provide temporary credentials.

## IAM users and groups

An <u>IAM user</u> is an identity within your Amazon Web Services account that has specific permissions for a single person or application. Where possible, we recommend relying on temporary credentials instead of creating IAM users who have long-term credentials such as passwords and access keys. However, if you have specific use cases that require long-term credentials with IAM users, we recommend that you rotate access keys. For more information, see <u>Rotate access keys regularly for use cases that require long-term credentials in the IAM User Guide</u>.

An <u>IAM group</u> is an identity that specifies a collection of IAM users. You can't sign in as a group. You can use groups to specify permissions for multiple users at a time. Groups make permissions easier to manage for large sets of users. For example, you could have a group named *IAMAdmins* and give that group permissions to administer IAM resources.

Users are different from roles. A user is uniquely associated with one person or application, but a role is intended to be assumable by anyone who needs it. Users have permanent long-term credentials, but roles provide temporary credentials. To learn more, see <u>Use cases for IAM users</u> in the *IAM User Guide*.

#### IAM roles

An <u>IAM role</u> is an identity within your Amazon Web Services account that has specific permissions. It is similar to an IAM user, but is not associated with a specific person. To temporarily assume an IAM role in the Amazon Web Services Management Console, you can <u>switch from a user to an IAM role (console)</u>. You can assume a role by calling an Amazon CLI or Amazon API operation or by using a custom URL. For more information about methods for using roles, see <u>Methods to assume a role in the IAM User Guide</u>.

IAM roles with temporary credentials are useful in the following situations:

- Federated user access To assign permissions to a federated identity, you create a role
  and define permissions for the role. When a federated identity authenticates, the identity
  is associated with the role and is granted the permissions that are defined by the role. For
  information about roles for federation, see <a href="Create a role for a third-party identity provider">Create a role for a third-party identity provider</a>
  (federation) in the IAM User Guide.
- **Temporary IAM user permissions** An IAM user or role can assume an IAM role to temporarily take on different permissions for a specific task.
- Cross-account access You can use an IAM role to allow someone (a trusted principal) in a
  different account to access resources in your account. Roles are the primary way to grant crossaccount access. However, with some Amazon Web Services services, you can attach a policy
  directly to a resource (instead of using a role as a proxy). To learn the difference between roles
  and resource-based policies for cross-account access, see <a href="Cross account resource access in IAM">Cross account resource access in IAM</a> in
  the IAM User Guide.
- Cross-service access Some Amazon Web Services services use features in other Amazon Web Services services. For example, when you make a call in a service, it's common for that service to run applications in Amazon EC2 or store objects in Amazon S3. A service might do this using the calling principal's permissions, using a service role, or using a service-linked role.
  - Forward access sessions (FAS) When you use an IAM user or role to perform actions in Amazon, you are considered a principal. When you use some services, you might perform an action that then initiates another action in a different service. FAS uses the permissions of the principal calling an Amazon Web Services service, combined with the requesting Amazon Web Services service to make requests to downstream services. FAS requests are only made when a service receives a request that requires interactions with other Amazon Web Services services or resources to complete. In this case, you must have permissions to perform both actions. For policy details when making FAS requests, see <a href="Forward access sessions">Forward access sessions</a>.

- Service role A service role is an <u>IAM role</u> that a service assumes to perform actions on your behalf. An IAM administrator can create, modify, and delete a service role from within IAM.
   For more information, see <u>Create a role to delegate permissions to an Amazon Web Services</u> service in the *IAM User Guide*.
- Service-linked role A service-linked role is a type of service role that is linked to an Amazon Web Services service. The service can assume the role to perform an action on your behalf. Service-linked roles appear in your Amazon Web Services account and are owned by the service. An IAM administrator can view, but not edit the permissions for service-linked roles.
- Applications running on Amazon EC2 You can use an IAM role to manage temporary credentials for applications that are running on an EC2 instance and making Amazon CLI or Amazon API requests. This is preferable to storing access keys within the EC2 instance. To assign an Amazon role to an EC2 instance and make it available to all of its applications, you create an instance profile that is attached to the instance. An instance profile contains the role and enables programs that are running on the EC2 instance to get temporary credentials. For more information, see <a href="Use an IAM role to grant permissions to applications running on Amazon EC2 instances">Use an IAM role to grant permissions to applications running on Amazon EC2 instances</a> in the IAM User Guide.

### Managing access using policies

You control access in Amazon by creating policies and attaching them to Amazon identities or resources. A policy is an object in Amazon that, when associated with an identity or resource, defines their permissions. Amazon evaluates these policies when a principal (user, root user, or role session) makes a request. Permissions in the policies determine whether the request is allowed or denied. Most policies are stored in Amazon as JSON documents. For more information about the structure and contents of JSON policy documents, see <a href="Overview of JSON policies">Overview of JSON policies</a> in the IAM User Guide.

Administrators can use Amazon JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

By default, users and roles have no permissions. To grant users permission to perform actions on the resources that they need, an IAM administrator can create IAM policies. The administrator can then add the IAM policies to roles, and users can assume the roles.

IAM policies define permissions for an action regardless of the method that you use to perform the operation. For example, suppose that you have a policy that allows the iam: GetRole action.

A user with that policy can get role information from the Amazon Web Services Management Console, the Amazon CLI, or the Amazon API.

### **Identity-based policies**

Identity-based policies are JSON permissions policy documents that you can attach to an identity, such as an IAM user, group of users, or role. These policies control what actions users and roles can perform, on which resources, and under what conditions. To learn how to create an identity-based policy, see Define custom IAM permissions with customer managed policies in the IAM User Guide.

Identity-based policies can be further categorized as *inline policies* or *managed policies*. Inline policies are embedded directly into a single user, group, or role. Managed policies are standalone policies that you can attach to multiple users, groups, and roles in your Amazon Web Services account. Managed policies include Amazon managed policies and customer managed policies. To learn how to choose between a managed policy or an inline policy, see <a href="Choose between managed policies">Choose between managed policies and inline policies in the IAM User Guide</a>.

### **Resource-based policies**

Resource-based policies are JSON policy documents that you attach to a resource. Examples of resource-based policies are IAM *role trust policies* and Amazon S3 *bucket policies*. In services that support resource-based policies, service administrators can use them to control access to a specific resource. For the resource where the policy is attached, the policy defines what actions a specified principal can perform on that resource and under what conditions. You must <u>specify a principal</u> in a resource-based policy. Principals can include accounts, users, roles, federated users, or Amazon Web Services services.

Resource-based policies are inline policies that are located in that service. You can't use Amazon managed policies from IAM in a resource-based policy.

### Access control lists (ACLs)

Access control lists (ACLs) control which principals (account members, users, or roles) have permissions to access a resource. ACLs are similar to resource-based policies, although they do not use the JSON policy document format.

Amazon S3, Amazon WAF, and Amazon VPC are examples of services that support ACLs. To learn more about ACLs, see <u>Access control list (ACL) overview</u> in the *Amazon Simple Storage Service Developer Guide*.

### Other policy types

Amazon supports additional, less-common policy types. These policy types can set the maximum permissions granted to you by the more common policy types.

- Permissions boundaries A permissions boundary is an advanced feature in which you set the maximum permissions that an identity-based policy can grant to an IAM entity (IAM user or role). You can set a permissions boundary for an entity. The resulting permissions are the intersection of an entity's identity-based policies and its permissions boundaries. Resource-based policies that specify the user or role in the Principal field are not limited by the permissions boundary. An explicit deny in any of these policies overrides the allow. For more information about permissions boundaries, see Permissions boundaries for IAM entities in the IAM User Guide.
- Service control policies (SCPs) SCPs are JSON policies that specify the maximum permissions for an organization or organizational unit (OU) in Amazon Organizations. Amazon Organizations is a service for grouping and centrally managing multiple Amazon Web Services accounts that your business owns. If you enable all features in an organization, then you can apply service control policies (SCPs) to any or all of your accounts. The SCP limits permissions for entities in member accounts, including each Amazon Web Services account root user. For more information about Organizations and SCPs, see <a href="Service control policies">Service control policies</a> in the Amazon Organizations User Guide.
- Resource control policies (RCPs) RCPs are JSON policies that you can use to set the maximum available permissions for resources in your accounts without updating the IAM policies attached to each resource that you own. The RCP limits permissions for resources in member accounts and can impact the effective permissions for identities, including the Amazon Web Services account root user, regardless of whether they belong to your organization. For more information about Organizations and RCPs, including a list of Amazon Web Services services that support RCPs, see Resource control policies (RCPs) in the Amazon Organizations User Guide.
- Session policies Session policies are advanced policies that you pass as a parameter when you programmatically create a temporary session for a role or federated user. The resulting session's permissions are the intersection of the user or role's identity-based policies and the session policies. Permissions can also come from a resource-based policy. An explicit deny in any of these policies overrides the allow. For more information, see Session policies in the IAM User Guide.

### Multiple policy types

When multiple types of policies apply to a request, the resulting permissions are more complicated to understand. To learn how Amazon determines whether to allow a request when multiple policy types are involved, see Policy evaluation logic in the *IAM User Guide*.

### **How Amazon Snow Family works with IAM**

Before you use IAM to manage access to Amazon Snow Family, learn what IAM features are available to use with Amazon Snow Family.

### IAM features you can use with Amazon Snow Family

IAM feature	Amazon Snow Family support
Identity-based policies	Yes
Resource-based policies	Yes
Policy actions	Yes
Policy resources	Yes
Policy condition keys (service-specific)	Yes
ACLs	No
ABAC (tags in policies)	Partial
Temporary credentials	Yes
Forward access sessions (FAS)	Yes
Service roles	Yes
Service-linked roles	No

To get a high-level view of how Amazon Snow Family and other Amazon services work with most IAM features, see <u>Amazon services that work with IAM</u> in the *IAM User Guide*.

### **Identity-based policies for Amazon Snow Family**

### Supports identity-based policies: Yes

Identity-based policies are JSON permissions policy documents that you can attach to an identity, such as an IAM user, group of users, or role. These policies control what actions users and roles can perform, on which resources, and under what conditions. To learn how to create an identity-based policy, see Define custom IAM permissions with customer managed policies in the IAM User Guide.

With IAM identity-based policies, you can specify allowed or denied actions and resources as well as the conditions under which actions are allowed or denied. You can't specify the principal in an identity-based policy because it applies to the user or role to which it is attached. To learn about all of the elements that you can use in a JSON policy, see <a href="IAM JSON policy elements reference">IAM JSON policy elements reference</a> in the IAM User Guide.

### **Identity-based policy examples for Amazon Snow Family**

To view examples of Amazon Snow Family identity-based policies, see <u>Identity-based policy</u> examples for Amazon Snowball Edge.

### Resource-based policies within Amazon Snow Family

### Supports resource-based policies: Yes

Resource-based policies are JSON policy documents that you attach to a resource. Examples of resource-based policies are IAM *role trust policies* and Amazon S3 *bucket policies*. In services that support resource-based policies, service administrators can use them to control access to a specific resource. For the resource where the policy is attached, the policy defines what actions a specified principal can perform on that resource and under what conditions. You must <u>specify a principal</u> in a resource-based policy. Principals can include accounts, users, roles, federated users, or Amazon Web Services services.

To enable cross-account access, you can specify an entire account or IAM entities in another account as the principal in a resource-based policy. Adding a cross-account principal to a resource-based policy is only half of establishing the trust relationship. When the principal and the resource are in different Amazon Web Services accounts, an IAM administrator in the trusted account must also grant the principal entity (user or role) permission to access the resource. They grant permission by attaching an identity-based policy to the entity. However, if a resource-based policy grants access to a principal in the same account, no additional identity-based policy is required. For more information, see Cross account resource access in IAM in the IAM User Guide.

### **Policy actions for Amazon Snow Family**

### Supports policy actions: Yes

Administrators can use Amazon JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The Action element of a JSON policy describes the actions that you can use to allow or deny access in a policy. Policy actions usually have the same name as the associated Amazon API operation. There are some exceptions, such as *permission-only actions* that don't have a matching API operation. There are also some operations that require multiple actions in a policy. These additional actions are called *dependent actions*.

Include actions in a policy to grant permissions to perform the associated operation.

To see a list of Amazon Snow Family actions, see <u>Actions defined by Amazon Snow Family</u> in the *Service Authorization Reference*.

Policy actions in Amazon Snow Family use the following prefix before the action:

```
snowball
```

To specify multiple actions in a single statement, separate them with commas.

```
"Action": [
    "snowball:action1",
    "snowball:action2"
]
```

To view examples of Amazon Snow Family identity-based policies, see <u>Identity-based policy</u> examples for Amazon Snowball Edge.

### **Policy resources for Amazon Snow Family**

### Supports policy resources: Yes

Administrators can use Amazon JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The Resource JSON policy element specifies the object or objects to which the action applies. Statements must include either a Resource or a NotResource element. As a best practice, specify a resource using its <a href="Managen Resource Name (ARN)"><u>Amazon Resource Name (ARN)</u></a>. You can do this for actions that support a specific resource type, known as *resource-level permissions*.

For actions that don't support resource-level permissions, such as listing operations, use a wildcard (\*) to indicate that the statement applies to all resources.

```
"Resource": "*"
```

To see a list of Amazon Snow Family resource types and their ARNs, see <u>Resources defined by Amazon Snow Family</u> in the *Service Authorization Reference*. To learn with which actions you can specify the ARN of each resource, see Actions defined by Amazon Snow Family.

To view examples of Amazon Snow Family identity-based policies, see <u>Identity-based policy</u> examples for Amazon Snowball Edge.

### **Policy condition keys for Amazon Snow Family**

### Supports service-specific policy condition keys: Yes

Administrators can use Amazon JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The Condition element (or Condition *block*) lets you specify conditions in which a statement is in effect. The Condition element is optional. You can create conditional expressions that use <u>condition operators</u>, such as equals or less than, to match the condition in the policy with values in the request.

If you specify multiple Condition elements in a statement, or multiple keys in a single Condition element, Amazon evaluates them using a logical AND operation. If you specify multiple values for a single condition key, Amazon evaluates the condition using a logical OR operation. All of the conditions must be met before the statement's permissions are granted.

You can also use placeholder variables when you specify conditions. For example, you can grant an IAM user permission to access a resource only if it is tagged with their IAM user name. For more information, see IAM policy elements: variables and tags in the IAM User Guide.

Amazon supports global condition keys and service-specific condition keys. To see all Amazon global condition keys, see Amazon global condition context keys in the *IAM User Guide*.

To see a list of Amazon Snow Family condition keys, see <u>Condition keys for Amazon Snow Family</u> in the *Service Authorization Reference*. To learn with which actions and resources you can use a condition key, see Actions defined by Amazon Snow Family.

To view examples of Amazon Snow Family identity-based policies, see <u>Identity-based policy</u> examples for Amazon Snowball Edge.

### **ACLs in Amazon Snow Family**

### **Supports ACLs:** No

Access control lists (ACLs) control which principals (account members, users, or roles) have permissions to access a resource. ACLs are similar to resource-based policies, although they do not use the JSON policy document format.

### **ABAC with Amazon Snow Family**

### Supports ABAC (tags in policies): Partial

Attribute-based access control (ABAC) is an authorization strategy that defines permissions based on attributes. In Amazon, these attributes are called *tags*. You can attach tags to IAM entities (users or roles) and to many Amazon resources. Tagging entities and resources is the first step of ABAC. Then you design ABAC policies to allow operations when the principal's tag matches the tag on the resource that they are trying to access.

ABAC is helpful in environments that are growing rapidly and helps with situations where policy management becomes cumbersome.

To control access based on tags, you provide tag information in the <u>condition element</u> of a policy using the aws:ResourceTag/*key-name*, aws:RequestTag/*key-name*, or aws:TagKeys condition keys.

If a service supports all three condition keys for every resource type, then the value is **Yes** for the service. If a service supports all three condition keys for only some resource types, then the value is **Partial**.

For more information about ABAC, see <u>Define permissions with ABAC authorization</u> in the *IAM User Guide*. To view a tutorial with steps for setting up ABAC, see <u>Use attribute-based access control</u> (ABAC) in the *IAM User Guide*.

### Using temporary credentials with Amazon Snow Family

### Supports temporary credentials: Yes

Some Amazon Web Services services don't work when you sign in using temporary credentials. For additional information, including which Amazon Web Services services work with temporary credentials, see Amazon Web Services services that work with IAM in the IAM User Guide.

You are using temporary credentials if you sign in to the Amazon Web Services Management Console using any method except a user name and password. For example, when you access Amazon using your company's single sign-on (SSO) link, that process automatically creates temporary credentials. You also automatically create temporary credentials when you sign in to the console as a user and then switch roles. For more information about switching roles, see <a href="Switch">Switch</a> from a user to an IAM role (console) in the IAM User Guide.

You can manually create temporary credentials using the Amazon CLI or Amazon API. You can then use those temporary credentials to access Amazon. Amazon recommends that you dynamically generate temporary credentials instead of using long-term access keys. For more information, see Temporary security credentials in IAM.

### Forward access sessions for Amazon Snow Family

### **Supports forward access sessions (FAS):** Yes

When you use an IAM user or role to perform actions in Amazon, you are considered a principal. When you use some services, you might perform an action that then initiates another action in a different service. FAS uses the permissions of the principal calling an Amazon Web Services service, combined with the requesting Amazon Web Services service to make requests to downstream services. FAS requests are only made when a service receives a request that requires interactions with other Amazon Web Services services or resources to complete. In this case, you must have permissions to perform both actions. For policy details when making FAS requests, see Forward access sessions.

### **Service roles for Amazon Snow Family**

### Supports service roles: Yes

A service role is an <u>IAM role</u> that a service assumes to perform actions on your behalf. An IAM administrator can create, modify, and delete a service role from within IAM. For more information, see Create a role to delegate permissions to an Amazon Web Services service in the *IAM User Guide*.



### Marning

Changing the permissions for a service role might break Amazon Snow Family functionality. Edit service roles only when Amazon Snow Family provides guidance to do so.

### Service-linked roles for Amazon Snow Family

### Supports service-linked roles: No

A service-linked role is a type of service role that is linked to an Amazon Web Services service. The service can assume the role to perform an action on your behalf. Service-linked roles appear in your Amazon Web Services account and are owned by the service. An IAM administrator can view, but not edit the permissions for service-linked roles.

For details about creating or managing service-linked roles, see Amazon services that work with IAM. Find a service in the table that includes a Yes in the Service-linked role column. Choose the **Yes** link to view the service-linked role documentation for that service.

### Identity-based policy examples for Amazon Snowball Edge

By default, users and roles don't have permission to create or modify Amazon Snow Family resources. They also can't perform tasks by using the Amazon Web Services Management Console, Amazon Command Line Interface (Amazon CLI), or Amazon API. To grant users permission to perform actions on the resources that they need, an IAM administrator can create IAM policies. The administrator can then add the IAM policies to roles, and users can assume the roles.

To learn how to create an IAM identity-based policy by using these example JSON policy documents, see Create IAM policies (console) in the IAM User Guide.

For details about actions and resource types defined by Amazon Snow Family, including the format of the ARNs for each of the resource types, see Actions, resources, and condition keys for Amazon Snow Family in the Service Authorization Reference.

### **Topics**

- Policy best practices
- Using the Amazon Snow Family console
- Allow users to view their own permissions

### **Policy best practices**

Identity-based policies determine whether someone can create, access, or delete Amazon Snow Family resources in your account. These actions can incur costs for your Amazon Web Services account. When you create or edit identity-based policies, follow these guidelines and recommendations:

- Get started with Amazon managed policies and move toward least-privilege permissions
  - To get started granting permissions to your users and workloads, use the *Amazon managed policies* that grant permissions for many common use cases. They are available in your Amazon Web Services account. We recommend that you reduce permissions further by defining Amazon customer managed policies that are specific to your use cases. For more information, see <u>Amazon managed policies</u> or Amazon managed policies for job functions in the *IAM User Guide*.
- Apply least-privilege permissions When you set permissions with IAM policies, grant only the
  permissions required to perform a task. You do this by defining the actions that can be taken on
  specific resources under specific conditions, also known as least-privilege permissions. For more
  information about using IAM to apply permissions, see Policies and permissions in IAM in the
  IAM User Guide.
- Use conditions in IAM policies to further restrict access You can add a condition to your policies to limit access to actions and resources. For example, you can write a policy condition to specify that all requests must be sent using SSL. You can also use conditions to grant access to service actions if they are used through a specific Amazon Web Services service, such as Amazon CloudFormation. For more information, see <a href="IAM JSON policy elements: Condition">IAM User Guide</a>.
- Use IAM Access Analyzer to validate your IAM policies to ensure secure and functional
  permissions IAM Access Analyzer validates new and existing policies so that the policies
  adhere to the IAM policy language (JSON) and IAM best practices. IAM Access Analyzer provides
  more than 100 policy checks and actionable recommendations to help you author secure and
  functional policies. For more information, see <u>Validate policies with IAM Access Analyzer</u> in the
  IAM User Guide.
- Require multi-factor authentication (MFA) If you have a scenario that requires IAM users or a
  root user in your Amazon Web Services account, turn on MFA for additional security. To require
  MFA when API operations are called, add MFA conditions to your policies. For more information,
  see Secure API access with MFA in the IAM User Guide.

For more information about best practices in IAM, see <u>Security best practices in IAM</u> in the *IAM User Guide*.

### **Using the Amazon Snow Family console**

To access the Amazon Snow Family console, you must have a minimum set of permissions. These permissions must allow you to list and view details about the Amazon Snow Family resources in your Amazon Web Services account. If you create an identity-based policy that is more restrictive than the minimum required permissions, the console won't function as intended for entities (users or roles) with that policy.

You don't need to allow minimum console permissions for users that are making calls only to the Amazon CLI or the Amazon API. Instead, allow access to only the actions that match the API operation that they're trying to perform.

To ensure that users and roles can still use the Amazon Snow Family console, also attach the Amazon Snow Family *ConsoleAccess* or *ReadOnly* Amazon managed policy to the entities. For more information, see Adding permissions to a user in the *IAM User Guide*.

### Allow users to view their own permissions

This example shows how you might create a policy that allows IAM users to view the inline and managed policies that are attached to their user identity. This policy includes permissions to complete this action on the console or programmatically using the Amazon CLI or Amazon API.

```
{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Sid": "ViewOwnUserInfo",
            "Effect": "Allow",
            "Action": [
                "iam:GetUserPolicy",
                "iam:ListGroupsForUser",
                "iam:ListAttachedUserPolicies",
                "iam:ListUserPolicies",
                "iam:GetUser"
            ],
            "Resource": ["arn:aws-cn:iam::*:user/${aws:username}"]
        },
            "Sid": "NavigateInConsole",
```

### **Troubleshooting Amazon Snowball Edge identity and access**

Use the following information to help you diagnose and fix common issues that you might encounter when working with Amazon Snow Family and IAM.

### **Topics**

- I am not authorized to perform an action in Amazon Snow Family
- I am not authorized to perform iam:PassRole
- I want to allow people outside of my Amazon Web Services account to access my Amazon Snow Family resources

### I am not authorized to perform an action in Amazon Snow Family

If you receive an error that you're not authorized to perform an action, your policies must be updated to allow you to perform the action.

The following example error occurs when the mateojackson IAM user tries to use the console to view details about a fictional *my-example-widget* resource but doesn't have the fictional snowball: *GetWidget* permissions.

```
User: arn:aws-cn:iam::123456789012:user/mateojackson is not authorized to perform: snowball:GetWidget on resource: my-example-widget
```

In this case, the policy for the mateojackson user must be updated to allow access to the *my-example-widget* resource by using the snowball: *GetWidget* action.

If you need help, contact your Amazon administrator. Your administrator is the person who provided you with your sign-in credentials.

### I am not authorized to perform iam:PassRole

If you receive an error that you're not authorized to perform the iam: PassRole action, your policies must be updated to allow you to pass a role to Amazon Snow Family.

Some Amazon Web Services services allow you to pass an existing role to that service instead of creating a new service role or service-linked role. To do this, you must have permissions to pass the role to the service.

The following example error occurs when an IAM user named marymajor tries to use the console to perform an action in Amazon Snow Family. However, the action requires the service to have permissions that are granted by a service role. Mary does not have permissions to pass the role to the service.

```
User: arn:aws-cn:iam::123456789012:user/marymajor is not authorized to perform: iam:PassRole
```

In this case, Mary's policies must be updated to allow her to perform the iam: PassRole action.

If you need help, contact your Amazon administrator. Your administrator is the person who provided you with your sign-in credentials.

# I want to allow people outside of my Amazon Web Services account to access my Amazon Snow Family resources

You can create a role that users in other accounts or people outside of your organization can use to access your resources. You can specify who is trusted to assume the role. For services that support resource-based policies or access control lists (ACLs), you can use those policies to grant people access to your resources.

To learn more, consult the following:

• To learn whether Amazon Snow Family supports these features, see <a href="How Amazon Snow Family">How Amazon Snow Family</a> works with IAM.

- To learn how to provide access to your resources across Amazon Web Services accounts that you own, see Providing access to an IAM user in another Amazon Web Services account that you own in the IAM User Guide.
- To learn how to provide access to your resources to third-party Amazon Web Services accounts, see Providing access to Amazon Web Services accounts owned by third parties in the IAM User Guide.
- To learn how to provide access through identity federation, see Providing access to externally authenticated users (identity federation) in the IAM User Guide.
- To learn the difference between using roles and resource-based policies for cross-account access, see Cross account resource access in IAM in the IAM User Guide.

#### Access Control in the Amazon Web Services Cloud

You can have valid credentials to authenticate your requests in Amazon. However, unless you have permissions you cannot create or access Amazon resources. For example, you must have permissions to create a job to order a Snowball Edge device.

The following sections describe how to manage cloud-based permissions for Amazon Snowball Edge. We recommend that you read the overview first.

- Overview of Managing Access Permissions to Your Resources in the Amazon Web Services Cloud
- Using Identity-Based Policies (IAM Policies) for Amazon Snowball Edge

### Overview of Managing Access Permissions to Your Resources in the Amazon Web **Services Cloud**

Every Amazon resource is owned by an Amazon Web Services account, and permissions to create or access a resource are governed by permissions policies. An account administrator can attach permissions policies to IAM identities (that is, users, groups, and roles), and some services (such as Amazon Lambda) also support attaching permissions policies to resources.



### Note

An account administrator (or administrator user) is a user with administrator privileges. For more information, see IAM Best Practices in the IAM User Guide.

### **Topics**

- Resources and Operations
- Understanding Resource Ownership
- Managing Access to Resources in the Amazon Web Services Cloud
- Specifying Policy Elements: Actions, Effects, and Principals
- Specifying Conditions in a Policy

### **Resources and Operations**

In Amazon Snowball Edge, the primary resource is a *job*. Amazon Snowball Edge also has devices like the Snowball and the Amazon Snowball Edge device, however, you can only use those devices in the context of an existing job. Amazon S3 buckets and Lambda functions are resources of Amazon S3 and Lambda respectively.

As mentioned previously, jobs don't have Amazon Resource Names (ARNs) associated with them. However, other services' resources, like Amazon S3 buckets, do have unique (ARNs) associated with them as shown in the following table.

Amazon Snowball Edge provides a set of operations to create and manage jobs. For a list of available operations, see the <u>Amazon Snowball Edge API Reference</u>.

### **Understanding Resource Ownership**

The Amazon Web Services account owns the resources that are created in the account, regardless of who created the resources. Specifically, the resource owner is the Amazon Web Services account of the <u>principal entity</u> (that is, the root account, an IAM user, or an IAM role) that authenticates the resource creation request. The following examples illustrate how this works:

- If you use the root account credentials of your Amazon Web Services account to create a S3 bucket, your Amazon Web Services account is the owner of the resource (in Amazon Snowball Edge, the resource is the job).
- If you create an IAM user in your Amazon Web Services account and grant permissions to create
  a job to order a Snowball Edge device to that user, the user can create a job to order a Snowball
  Edge device. However, your Amazon Web Services account, to which the user belongs, owns the
  job resource.

• If you create an IAM role in your Amazon Web Services account with permissions to create a job, anyone who can assume the role can create a job to order a Snowball Edge device. Your Amazon Web Services account, to which the role belongs, owns the job resource.

### Managing Access to Resources in the Amazon Web Services Cloud

A permissions policy describes who has access to what. The following section explains the available options for creating permissions policies.



### Note

This section discusses using IAM in the context of Amazon Snowball Edge. It doesn't provide detailed information about the IAM service. For complete IAM documentation, see What Is IAM? in the IAM User Guide. For information about IAM policy syntax and descriptions, see Amazon IAM Policy Reference in the IAM User Guide.

Policies attached to an IAM identity are referred to as identity-based policies (IAM polices) and policies attached to a resource are referred to as resource-based policies. Amazon Snowball Edge supports only identity-based policies (IAM policies).

#### **Topics**

Resource-Based Policies

#### **Resource-Based Policies**

Other services, such as Amazon S3, also support resource-based permissions policies. For example, you can attach a policy to an S3 bucket to manage access permissions to that bucket. Amazon Snowball Edge doesn't support resource-based policies.

### Specifying Policy Elements: Actions, Effects, and Principals

For each job (see Resources and Operations), the service defines a set of API operations (see Amazon Snowball Edge API Reference) to create and manage said job. To grant permissions for these API operations, Amazon Snowball Edge defines a set of actions that you can specify in a policy. For example, for a job, the following actions are defined: CreateJob, CancelJob, and DescribeJob. Note that, performing an API operation can require permissions for more than one action.

The following are the most basic policy elements:

• Resource – In a policy, you use an Amazon Resource Name (ARN) to identify the resource to which the policy applies. For more information, see Resources and Operations.



#### Note

This is supported for Amazon S3, Amazon EC2, Amazon Lambda, Amazon KMS, and many other services.

Snowball does not support specifying a resource ARN in the Resource element of an IAM policy statement. To allow access to Snowball, specify "Resource": "\*" in your policy.

• Action – You use action keywords to identify resource operations that you want to allow or deny. For example, depending on the specified Effect, snowball: \* either allows or denies the user permissions to perform all operations.



#### Note

This is supported for Amazon EC2, Amazon S3, and IAM.

 Effect – You specify the effect when the user requests the specific action—this can be either allow or deny. If you don't explicitly grant access to (allow) a resource, access is implicitly denied. You can also explicitly deny access to a resource, which you might do to make sure that a user cannot access it, even if a different policy grants access.



#### Note

This is supported for Amazon EC2, Amazon S3, and IAM.

• Principal – In identity-based policies (IAM policies), the user that the policy is attached to is the implicit principal. For resource-based policies, you specify the user, account, service, or other entity that you want to receive permissions (applies to resource-based policies only). Amazon Snowball Edge doesn't support resource-based policies.

To learn more about IAM policy syntax and descriptions, see Amazon IAM Policy Reference in the IAM User Guide.

For a table showing all of the Amazon Snowball Edge API actions, see Amazon Snowball Edge API Permissions: Actions, Resources, and Conditions Reference.

### **Specifying Conditions in a Policy**

When you grant permissions, you can use the IAM policy language to specify the conditions when a policy should take effect. For example, you might want a policy to be applied only after a specific date. For more information about specifying conditions in a policy language, see Condition in the IAM User Guide.

To express conditions, you use predefined condition keys. There are no condition keys specific to Amazon Snowball Edge. However, there are Amazon-wide condition keys that you can use as appropriate. For a complete list of Amazon-wide keys, see Available Keys for Conditions in the IAM User Guide.

### Using Identity-Based Policies (IAM Policies) for Amazon Snowball Edge

This topic provides examples of identity-based policies that demonstrate how an account administrator can attach permissions policies to IAM identities (that is, users, groups, and roles). These policies thereby grant permissions to perform operations on Amazon Snowball Edge resources in the Amazon Web Services Cloud.

#### Important

We recommend that you first review the introductory topics that explain the basic concepts and options available for you to manage access to your Amazon Snowball Edge resources. For more information, see Overview of Managing Access Permissions to Your Resources in the Amazon Web Services Cloud.

The sections in this topic cover the following:

- Permissions Required to Use the Amazon Snowball Edge Console
- Amazon-Managed (Predefined) Policies for Amazon Snowball Edge
- **Customer Managed Policy Examples**

The following shows an example of a permissions policy.

```
"Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "s3:GetBucketLocation",
        "s3:GetObject",
        "s3:ListBucket"
      ],
      "Resource": "arn:aws:s3:::*"
    },
    {
       "Effect": "Allow",
       "Action": [
          "snowball:*",
          "importexport:*"
       ],
       "Resource": "*"
    }
  ]
}
```

### The policy has two statements:

- The first statement grants permissions for three Amazon S3 actions (s3:GetBucketLocation, s3:GetObject, and s3:ListBucket) on all Amazon S3 buckets using the *Amazon Resource Name (ARN)* of arn:aws:s3:::\*. The ARN specifies a wildcard character (\*) so the user can choose any or all Amazon S3 buckets to export data from.
- The second statement grants permissions for all Amazon Snowball Edge actions. Because these actions don't support resource-level permissions, the policy specifies the wildcard character (\*) and the Resource value also specifies a wild card character.

The policy doesn't specify the Principal element because in an identity-based policy you don't specify the principal who gets the permission. When you attach a policy to a user, the user is the implicit principal. When you attach a permissions policy to an IAM role, the principal identified in the role's trust policy gets the permissions.

For a table showing all of the Amazon Snowball Edge job management API actions and the resources that they apply to, see <u>Amazon Snowball Edge API Permissions: Actions, Resources, and Conditions Reference.</u>

### Permissions Required to Use the Amazon Snowball Edge Console

The permissions reference table lists the Amazon Snowball Edge job management API operations and shows the required permissions for each operation. For more information about job management API operations, see <a href="Management-API operations"><u>Amazon Snowball Edge API Permissions: Actions, Resources, and Conditions Reference.</u></a>

To use the Amazon Snow Family Management Console, you need to grant permissions for additional actions as shown in the following permissions policy:

```
{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Effect": "Allow",
            "Action": [
                "s3:GetBucketLocation",
                "s3:GetBucketPolicy",
                "s3:ListBucket",
                "s3:ListBucketMultipartUploads",
                "s3:ListAllMyBuckets"
            ],
            "Resource": "arn:aws:s3:::*"
        },
        {
            "Effect": "Allow",
            "Action": [
                "s3:CreateBucket",
                "s3:PutObject",
                "s3:AbortMultipartUpload",
                "s3:ListMultipartUploadParts",
                "s3:PutObjectAcl"
            ],
            "Resource": "arn:aws:s3:::*"
        },
        {
            "Effect": "Allow",
            "Action": [
                "lambda:GetFunction",
                "lambda:GetFunctionConfiguration"
            ],
            "Resource": "arn:aws:lambda:::function:*"
```

```
{
    "Effect": "Allow",
    "Action": [
        "lambda:ListFunctions"
    ],
    "Resource": "arn:aws:lambda:::*"
},
{
    "Effect": "Allow",
    "Action": [
        "iam:AttachRolePolicy",
        "iam:CreatePolicy",
        "iam:CreateRole",
        "iam:ListRoles",
        "iam:ListRolePolicies",
        "iam:PutRolePolicy"
    ],
    "Resource": [
        11 * 11
    ]
},
    "Effect": "Allow",
    "Action": "iam:PassRole",
    "Resource": "arn:aws:iam::*:role/snowball*",
    "Condition": {
        "StringEquals": {
            "iam:PassedToService": "importexport.amazonaws.com"
        }
    }
},
   "Effect": "Allow",
   "Action": [
        "ec2:DescribeImages",
        "ec2:ModifyImageAttribute",
   ],
   "Resource": [
        11 * 11
   ]
},
    "Effect": "Allow",
    "Action": [
```

```
"sns:CreateTopic",
                 "sns:ListTopics",
                 "sns:GetTopicAttributes",
                 "sns:SetTopicAttributes",
                 "sns:ListSubscriptionsByTopic",
                 "sns:Subscribe"
             ],
             "Resource": [
                 11 * 11
             ]
        },
         {
             "Effect": "Allow",
             "Action": [
                  "greengrass:getServiceRoleForAccount"
             ],
             "Resource": [
             11 * 11
             ]
        },
             "Effect": "Allow",
             "Action": [
                 "snowball:*"
             ],
             "Resource": [
                 11 * 11
             ]
         }
    ]
}
```

The Amazon Snowball Edge console needs these additional permissions for the following reasons:

- ec2: These allow the user to describe Amazon EC2-compatible instances and modify their attributes for local compute purposes. For more information, see <u>Using Amazon EC2-compatible</u> compute instances on Snowball Edge.
- iam: These allow the user to create or choose an IAM role ARN that Amazon Snowball Edge will assume to access the Amazon resources associated with job creation and processing.
- sns: These allow the user to create or choose the Amazon SNS notifications for the jobs they create. For more information, see Notifications for Snowball Edge.

### Amazon-Managed (Predefined) Policies for Amazon Snowball Edge

Amazon addresses many common use cases by providing standalone IAM policies that are created and administered by Amazon. Managed policies grant necessary permissions for common use cases so you can avoid having to investigate what permissions are needed. For more information, see <a href="Amazon Managed Policies">Amazon Managed Policies</a> in the IAM User Guide.

You can use the following Amazon-managed policies with Amazon Snowball Edge.

### Creating an IAM Role Policy for Snowball Edge Edge

An IAM role policy must be created with read and write permissions for your Amazon S3 buckets. The IAM role must also have a trust relationship with Snowball Edge. Having a trust relationship means that Amazon can write the data in the Snowball and in your Amazon S3 buckets, depending on whether you're importing or exporting data.

When you create a job to order a Snowball Edge device in the Amazon Snow Family Management Console, creating the necessary IAM role occurs in step 4 in the **Permission** section. This process is automatic. The IAM role that you allow Snowball Edge to assume is only used to write your data to your bucket when the Snowball with your transferred data arrives at Amazon. The following procedure outlines that process.

### To create the IAM role for your i

- Sign in to the Amazon Web Services Management Console and open the Amazon Snowball Edge console at <a href="https://console.amazonaws.cn/importexport/">https://console.amazonaws.cn/importexport/</a>.
- 2. Choose **Create job**.
- 3. In the first step, fill out the details for your import job into Amazon S3, and then choose **Next**.
- 4. In the second step, under **Permission**, choose **Create/Select IAM Role**.
  - The IAM Management Console opens, showing the IAM role that Amazon uses to copy objects into your specified Amazon S3 buckets.
- 5. Review the details on this page, and then choose **Allow**.
  - You return to the Amazon Snow Family Management Console, where **Selected IAM role ARN** contains the Amazon Resource Name (ARN) for the IAM role that you just created.
- 6. Choose **Next** to finish creating your IAM role.

The preceding procedure creates an IAM role that has write permissions for the Amazon S3 buckets that you plan to import your data into. The IAM role that is created has one of the following structures, depending on whether it's for an import job or export job.

### IAM Role for an Import Job

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "s3:GetBucketLocation",
        "s3:ListBucketMultipartUploads"
      ],
      "Resource": "arn:aws:s3:::*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "s3:GetBucketPolicy",
        "s3:PutObject",
        "s3:AbortMultipartUpload",
        "s3:ListMultipartUploadParts",
        "s3:PutObjectAcl",
        "s3:ListBucket"
      ],
      "Resource": "arn:aws:s3:::*"
    }
  ]
}
```

If you use server-side encryption with Amazon KMS-managed keys (SSE-KMS) to encrypt the Amazon S3 buckets associated with your import job, you also need to add the following statement to your IAM role.

```
{
    "Effect": "Allow",
    "Action": [
        "kms:GenerateDataKey"
],
```

```
"Resource": "arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-efgh-1111111111"
}
```

If the object sizes are larger, the Amazon S3 client that is used for the import process uses multipart upload. If you initiate a multipart upload using SSE-KMS, then all the uploaded parts are encrypted using the specified Amazon KMS key. Because the parts are encrypted, they must be decrypted before they can be assembled to complete the multipart upload. So you must have permission to decrypt the Amazon KMS key (kms:Decrypt) when you run a multipart upload to Amazon S3 with SSE-KMS.

The following is an example of an IAM role needed for an import job that needs kms: Decrypt permission.

```
{
    "Effect": "Allow",
    "Action": [
        "kms:GenerateDataKey","kms:Decrypt"

    ],
        "Resource": "arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-efgh-11111111111"
}
```

The following is an example of an IAM role needed for an export job.

If you use server-side encryption with Amazon KMS-managed keys to encrypt the Amazon S3 buckets associated with your export job, you also need to add the following statement to your IAM role.

```
{
     "Effect": "Allow",
     "Action": [
            "kms:Decrypt"
      ],
     "Resource": "arn:aws:kms:us-west-2:123456789012:key/abc123a1-abcd-1234-
efgh-11111111111"
}
```

You can create your own custom IAM policies to allow permissions for API operations for Amazon Snowball Edge job management. You can attach these custom policies to the IAM users or groups that require those permissions.

### **Customer Managed Policy Examples**

In this section, you can find example user policies that grant permissions for various Amazon Snowball Edge job management actions. These policies work when you are using Amazon SDKs or the Amazon CLI. When you are using the console, you need to grant additional permissions specific to the console, which is discussed in Permissions Required to Use the Amazon Snowball Edge Console.



### Note

All examples use the us-west-2 region and contain fictitious account IDs.

### **Examples**

- Example 1: Role Policy That Allows a User to Create a Job to order a Snowball Edge device with the API
- Example 2: Role Policy for Creating Import Jobs
- Example 3: Role Policy for Creating Export Jobs
- Example 4: Expected Role Permissions and Trust Policy
- Amazon Snowball Edge API Permissions: Actions, Resources, and Conditions Reference

## Example 1: Role Policy That Allows a User to Create a Job to order a Snowball Edge device with the API

The following permissions policy is a necessary component of any policy that is used to grant job or cluster creation permission using the job management API. The statement is needed as a Trust Relationship policy statement for the Snowball IAM role.

### **Example 2: Role Policy for Creating Import Jobs**

You use the following role trust policy for creating import jobs for Snowball Edge that use Amazon Lambda powered by Amazon IoT Greengrass functions.

```
"s3:ListBucketMultipartUploads",
        "s3:ListBucket",
        "s3:PutObject",
        "s3:AbortMultipartUpload",
        "s3:ListMultipartUploadParts",
        "s3:PutObjectAcl",
        "s3:GetObject"
    ],
    "Resource": "arn:aws:s3:::*"
},
{
    "Effect": "Allow",
    "Action": [
        "snowball:*"
    ],
    "Resource": [
        11 * 11
    ]
},
{
    "Effect": "Allow",
    "Action": [
        "iot:AttachPrincipalPolicy",
        "iot:AttachThingPrincipal",
        "iot:CreateKeysAndCertificate",
        "iot:CreatePolicy",
        "iot:CreateThing",
        "iot:DescribeEndpoint",
        "iot:GetPolicy"
    ],
    "Resource": [
        11 * 11
    ]
},
    "Effect": "Allow",
    "Action": [
        "lambda:GetFunction"
    ],
    "Resource": [
        11 * 11
    ]
},
```

```
"Effect": "Allow",
            "Action": [
                "greengrass:CreateCoreDefinition",
                "greengrass:CreateDeployment",
                "greengrass:CreateDeviceDefinition",
                "greengrass:CreateFunctionDefinition",
                "greengrass:CreateGroup",
                "greengrass:CreateGroupVersion",
                "greengrass:CreateLoggerDefinition",
                "greengrass:CreateSubscriptionDefinition",
                "greengrass:GetDeploymentStatus",
                "greengrass:UpdateGroupCertificateConfiguration",
                "greengrass:CreateGroupCertificateAuthority",
                "greengrass:GetGroupCertificateAuthority",
                "greengrass:ListGroupCertificateAuthorities",
                "greengrass:ListDeployments",
                "greengrass:GetGroup",
                "greengrass:GetGroupVersion",
                "greengrass:GetCoreDefinitionVersion"
            ],
            "Resource": [
                11 * 11
            ]
        }
    ]
}
```

### **Example 3: Role Policy for Creating Export Jobs**

You use the following role trust policy for creating export jobs for Snowball Edge that use Amazon Lambda powered by Amazon IoT Greengrass functions.

```
"s3:ListBucket"
    ],
    "Resource": "arn:aws:s3:::*"
},
{
   "Effect": "Allow",
   "Action": [
        "snowball:*"
   ],
   "Resource": [
        11 * II
   ]
},
{
    "Effect": "Allow",
    "Action": [
        "iot:AttachPrincipalPolicy",
        "iot:AttachThingPrincipal",
        "iot:CreateKeysAndCertificate",
        "iot:CreatePolicy",
        "iot:CreateThing",
        "iot:DescribeEndpoint",
        "iot:GetPolicy"
    ],
    "Resource": [
        11 * 11
    ]
},
    "Effect": "Allow",
    "Action": [
        "lambda:GetFunction"
    ],
    "Resource": [
        11 * 11
    ]
},
{
    "Effect": "Allow",
    "Action": [
        "greengrass:CreateCoreDefinition",
        "greengrass:CreateDeployment",
        "greengrass:CreateDeviceDefinition",
        "greengrass:CreateFunctionDefinition",
```

```
"greengrass:CreateGroup",
                "greengrass:CreateGroupVersion",
                "greengrass:CreateLoggerDefinition",
                "greengrass:CreateSubscriptionDefinition",
                "greengrass:GetDeploymentStatus",
                "greengrass:UpdateGroupCertificateConfiguration",
                "greengrass:CreateGroupCertificateAuthority",
                "greengrass:GetGroupCertificateAuthority",
                "greengrass:ListGroupCertificateAuthorities",
                "greengrass:ListDeployments",
                "greengrass:GetGroup",
                "greengrass:GetGroupVersion",
                "greengrass:GetCoreDefinitionVersion"
            ],
            "Resource": [
                11 * 11
            ]
        }
    ]
}
```

### **Example 4: Expected Role Permissions and Trust Policy**

The following expected role permissions policy is a necessary for an existing service role to use. It is a one time set up.

```
{
    "Version": "2012-10-17",
    "Statement":
    Ε
        {
            "Effect": "Allow",
            "Action": "sns:Publish",
            "Resource": ["[[snsArn]]"]
        },
        {
            "Effect": "Allow",
            "Action":
                "cloudwatch:ListMetrics",
                "cloudwatch:GetMetricData",
                "cloudwatch:PutMetricData"
            ],
```

The following expected role trust policy is a necessary for an existing service role to use. It is a one time set up.

```
{
  "Version": "2012-10-17",
  "Statement": [
      {
         "Effect": "Allow",
         "Principal": {
               "Service": "importexport.amazonaws.com"
            },
            "Action": "sts:AssumeRole"
        }
    ]
}
```

### Amazon Snowball Edge API Permissions: Actions, Resources, and Conditions Reference

When you are setting up Access Control in the Amazon Web Services Cloud and writing a permissions policy that you can attach to an IAM identity (identity-based policies), you can use the following list as a reference. The includes each Amazon Snowball Edge job management API operation and the corresponding actions for which you can grant permissions to perform the action. It also includes for each API operation the Amazon resource for which you can grant the permissions. You specify the actions in the policy's Action field, and you specify the resource value in the policy's Resource field.

You can use Amazon-wide condition keys in your Amazon Snowball Edge policies to express conditions. For a complete list of Amazon-wide keys, see Available Keys in the *IAM User Guide*.



#### Note

To specify an action, use the snowball: prefix followed by the API operation name (for example, snowball:CreateJob).

## Logging and Monitoring in Amazon Snowball Edge

Monitoring is an important part of maintaining the reliability, availability, and performance of Amazon Snowball Edge and your Amazon solutions. You should collect monitoring data so that you can more easily debug a multi-point failure if one occurs. Amazon provides several tools for monitoring your Amazon Snowball Edge resources and responding to potential incidents:

### Amazon CloudTrail Logs

CloudTrail provides a record of actions taken by a user, role, or an Amazon service in the Amazon Snowball Edge Job Management API or when using the Amazon Console. Using the information collected by CloudTrail, you can determine the API request that was made to Amazon Snowball Edge service, the IP address from which the request was made, who made the request, when it was made, and additional details. For more information, see Logging Amazon Snowball Edge API calls with Amazon CloudTrail.

### Compliance Validation for Amazon Snowball Edge

To learn whether an Amazon Web Services service is within the scope of specific compliance programs, see Amazon Web Services services in Scope by Compliance Program and choose the compliance program that you are interested in. For general information, see Amazon Web Services Compliance Programs.

You can download third-party audit reports using Amazon Artifact. For more information, see Downloading Reports in Amazon Artifact.

Your compliance responsibility when using Amazon Web Services services is determined by the sensitivity of your data, your company's compliance objectives, and applicable laws and regulations. Amazon provides the following resources to help with compliance:

 Security & Compliance – These solution implementation guides discuss architectural considerations and provide steps for deploying security and compliance features.

Logging and Monitoring 453

- <u>Amazon Compliance Resources</u> This collection of workbooks and guides might apply to your industry and location.
- <u>Evaluating Resources with Rules</u> in the *Amazon Config Developer Guide* The Amazon Config service assesses how well your resource configurations comply with internal practices, industry guidelines, and regulations.
- <u>Amazon Security Hub</u> This Amazon Web Services service provides a comprehensive view of
  your security state within Amazon. Security Hub uses security controls to evaluate your Amazon
  resources and to check your compliance against security industry standards and best practices.
  For a list of supported services and controls, see Security Hub controls reference.
- Amazon GuardDuty This Amazon Web Services service detects potential threats to your
  Amazon Web Services accounts, workloads, containers, and data by monitoring your
  environment for suspicious and malicious activities. GuardDuty can help you address various
  compliance requirements, like PCI DSS, by meeting intrusion detection requirements mandated
  by certain compliance frameworks.

### Resilience

The Amazon global infrastructure is built around Amazon Web Services Regions and Availability Zones. Amazon Web Services Regions provide multiple physically separated and isolated Availability Zones, which are connected with low-latency, high-throughput, and highly redundant networking. With Availability Zones, you can design and operate applications and databases that automatically fail over between Availability Zones without interruption. Availability Zones are more highly available, fault tolerant, and scalable than traditional single or multiple data center infrastructures.

For more information about Amazon Web Services Regions and Availability Zones, see <u>Amazon</u> Global Infrastructure.

### Infrastructure Security in Amazon Snowball Edge

As a managed service, Amazon Snow Family is protected by Amazon global network security. For information about Amazon security services and how Amazon protects infrastructure, see <a href="Amazon Cloud Security">Amazon Security</a>. To design your Amazon environment using the best practices for infrastructure security, see <a href="Infrastructure Protection">Infrastructure Protection</a> in Security Pillar Amazon Well-Architected Framework.

You use Amazon published API calls to access Amazon Snow Family through the network. Clients must support the following:

Resilience 454

- Transport Layer Security (TLS). We require TLS 1.2 and recommend TLS 1.3.
- Cipher suites with perfect forward secrecy (PFS) such as DHE (Ephemeral Diffie-Hellman) or ECDHE (Elliptic Curve Ephemeral Diffie-Hellman). Most modern systems such as Java 7 and later support these modes.

Additionally, requests must be signed by using an access key ID and a secret access key that is associated with an IAM principal. Or you can use the <u>Amazon Security Token Service</u> (Amazon STS) to generate temporary security credentials to sign requests.

Infrastructure Security 455

# Validation of data transferred with Snowball Edge devices

Following, you'll find information about how Amazon Snowball Edge validates data transfers, and the manual steps you can take to help ensure data integrity during and after a job.

When you copy a file from a local data source using the Amazon S3 interface to the Snowball Edge, a number of checksums are created. These checksums are used to automatically validate data as it's transferred

At a high level, these checksums are created for each file (or for parts of large files). For the Snowball Edge, these checksums are visible when you run the following Amazon CLI command against a bucket on the device. The checksums are used to validate the integrity of your data throughout the transfers and help ensure that your data is copied correctly.

```
aws s3api list-objects --bucket bucket-name --endpoint http://ip:8080 --profile edge-profile
```

When these checksums don't match, the associated data is not imported into Amazon S3.

## Local file inventory and Snowball Edge data trasnfer

Create a local inventory of files copied to the Snowball Edge when using the Amazon S3 adapter or CLI. The content of the local inventory can be used to compare with what is on the local storage or server.

For example,

```
aws s3 cp folder/ s3://bucket --recursive > inventory.txt
```

## Common causes of data validation errors with Snowball Edge

When a validation error occurs, the corresponding data (a file or a part of a large file) is not written to the destination. The following are common causes for validation errors:

Trying to copy symbolic links.

Local file inventory 456

- Trying to copy files that are actively being modified. The attempt fails checksum validation and is marked as a failed transfer.
- Trying to copy files that are larger than 5 TB in size.
- Trying to copy part sizes that are larger than 2 GiB in size.
- Trying to copy files to a Snowball Edge device that is already at full data storage capacity.
- Trying to copy files to a Snowball Edge device that doesn't follow the <u>object key naming</u> guidelines for Amazon S3.

When any one of these validation errors occurs, it is logged. You can take steps to manually identify what files failed validation and why. For information, see <u>Validating data from a Snowball</u> Edge device manually after import into Amazon S3.

# Validating data from a Snowball Edge device manually after import into Amazon S3

After an import job has completed, you have several options to manually validate the data in Amazon S3, as described following.

### Check job completion report and associated logs

Whenever data is imported into or exported out of Amazon S3, you get a downloadable PDF job report. For import jobs, this report becomes available at the end of the import process. For more information, see Getting your data transfer job completion report and logs.

### S3 inventory

If you transferred a huge amount of data into Amazon S3 in multiple jobs, going through each job completion report might not be an efficient use of time. Instead, you can get an inventory of all the objects in one or more Amazon S3 buckets. Amazon S3 inventory provides a comma-separated values (CSV) file showing your objects and their corresponding metadata on a daily or weekly basis. This file covers objects for an Amazon S3 bucket or a shared prefix (that is, objects that have names that begin with a common string).

When you have the inventory of the Amazon S3 buckets that you've imported data into, you can easily compare it against the files that you transferred on your source data location. In this way, you can quickly identify what files where not transferred.

### Use the Amazon S3 sync command

If your workstation can connect to the internet, you can do a final validation of all your transferred files by running the Amazon CLI command aws s3 sync. This command syncs directories and S3 prefixes. This command recursively copies new and updated files from the source directory to the destination. For more information, see sync in the Amazon CLI Command Reference.

### Important

If you specify your local storage as the destination for this command, make sure that you have a backup of the files that you sync against. These files are overwritten by the contents in the specified Amazon S3 source.

## **Notifications for Snowball Edge**

### **How Snow uses Amazon SNS**

The Snow service is designed to take advantage of the robust notifications delivered by Amazon Simple Notification Service (Amazon SNS). While creating a job to order a Snow device, you can provide email addresses to receive notifications for your job status changes. When you do this, you choose an existing SNS topic or create a new one. If the SNS topic is encrypted, you need to enable customer-managed KMS encryption for the topic and set up customer-managed KMS key policy. See Choose preferences for notifications about the Snowball Edge job.

After you create your job, every email address that you specified to get Amazon SNS notifications receives an email message from Amazon notifications asking for confirmation to the topic subscription. A user of the email account must confirm the subscription by choosing **Confirm subscription**. The Amazon SNS notification emails are tailored for each job status, and include a link to the Amazon Snow Family Management Console.

You can also configure Amazon SNS to send text messages for status change notifications from the Amazon SNS console. For more information, see <u>Mobile text messaging (SMS)</u> in the *Amazon Simple Notification Service Developer Guide*.

## **Encrypting SNS topics for Amazon Snow job status changes**

Enable customer-managed KMS encryption for the SNS topic for Snow job status change notifications. SNS topics encrypted with Amazon-managed encryption cannot receive Snow job status changes because the Snow import IAM role does not have access to the Amazon-managed KMS key to perform Decrypt and GenerateDataKey actions. Additionally, policies of Amazon-managed KMS keys cannot be edited.

### To enable server-side encryption for an SNS topic using the Amazon SNS management console

- 1. Sign in to the Amazon Web Services Management Console and open the Amazon SNS console at https://console.amazonaws.cn/sns/v3/home.
- 2. In the navigation pane, choose **Topics**.
- 3. In the Topics page, choose the topic used for job status change notifications, then choose Edit.
- 4. Expand the **Encryption** section and do the following:

How Snow uses Amazon SNS 459

- a. Choose **Enable encryption**.
- b. Specify the Amazon KMS key. See
- c. For each KMS type, the description, account, and KMS ARN are displayed.
- To use a custom key from your Amazon account, choose the Amazon KMS key field and then choose the custom KMS kms from the list. For instructions on creating custom KMS, see Creating keys in the Amazon Key Management Service Developer Guide.
  - To use a custom KMS ARN from your Amazon account or from another Amazon account, enter the KMS key ARN in the **Amazon KMS key** field.
- Choose Save changes. Server side encryption is enabled for your topic and the topic page is displayed.

# Setting up a customer-managed KMS key policy for Amazon Snow

After enabling encryption for SNS topics that will receive notifications for Snow job status changes, update the KMS policy for the SNS topic encryption and allow the Snow service principal "importexport.amazonaws.com" for "kms:Decrypt" and "kms:GenerateDataKey\*" actions.

### To allow the import export service role in the KMS key policy

- 1. Sign in to the Amazon Web Services Management Console and open the Amazon Key Management Service (Amazon KMS) console at https://console.amazonaws.cn/kms.
- 2. To change the Amazon Web Services Region, use the Region selector in the upper-right corner of the page.
- 3. At the top-right corner of the console, change the Amazon Web Services Region of the console to the same region as the Snow device was ordered from.
- 4. In the navigation pane, choose **Customer managed keys**.
- 5. IN the list of KMS keys, choose the alias or key ID of the KMS key to update.
- 6. Choose the **Key policy** tab, in the key policy statements, you can see the principals that have been given access to the KMS key by the key policy, and you can see the actions they can perform.

7. For the Snow service principal "importexport.amazonaws.com", add the following policy statement for "kms:Decrypt" and "kms:GenerateDataKey\*" actions:

```
{
    "Effect": "Allow",
    "Principal": {
    "Service": "service.amazonaws.com"
 },
  "Action": [
  "kms:Decrypt",
  "kms:GenerateDataKey"
    ],
    "Resource": "*",
    "Condition": {
    "ArnLike": {
    "aws:SourceArn": "arn:aws:service:region:customer-account-id:resource-type/
customer-resource-id"
 },
 "StringEquals": {
  "kms:EncryptionContext:aws:sns:topicArn": "arn:aws:sns:your_region:customer-
account-id:your_sns_topic_name"
 }
 }
 }
```

8. Choose **Save Changes** to apply the changes and exit the policy editor.

## **Amazon SNS notification examples for Amazon Snow**

Amazon SNS notifications produce the following email messages when your job status changes. These messages are examples of the Email-JSON SNS topic protocol.

Job status	SNS notification JSON
Job created	
	{ "Type" : "Notification",

### Job status SNS notification JSON

```
"MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) has been created. More
 info - https://console.aws.amazon.
com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6qmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJu0rExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### Preparing appliance

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is being prepared.
 More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### **SNS notification JSON**

### Exporting

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is being Exported.
 More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### In transit to you

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is in transit to
you. More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

## Delivered to you

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) was delivered to
you. More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

#### In transit to Amazon

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is in transit to
 AWS. More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### At sorting facility

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is at AWS sorting
 facility. More info - https://
console.aws.amazon.com/impor
texport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6qmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNk1VyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

#### At Amazon

### **SNS notification JSON**

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is at AWS. More info
 - https://console.aws.amazon.com/
importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### **SNS notification JSON**

### Importing

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) is being imported.
 More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

### Job status SNS notification JSON

### Completed

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) complete.\nThanks
 for using AWS Snowball Edge.\nCan you
take a quick survey on your experienc
e? Survey here: http://bit.ly/1pLQ
JMY. More info - https://console.aw
s.amazon.com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion" : "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi11lhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJu0rExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

Job status	SNS notification JSON

### **SNS notification JSON**

### Cancelled

```
{
  "Type" : "Notification",
  "MessageId" : "dc1e94d9-56c5-5e9
6-808d-cc7f68faa162",
  "TopicArn" : "arn:aws:sns:us-ea
st-2:111122223333:ExampleTopic1",
  "Message" : "Your job Job-name
 (JID8bca334a-6c2f-4cd0-97e2
-3f5a4dc9bd6d) was canceled. More
 info - https://console.aws.amazon.
com/importexport",
  "Timestamp" : "2023-02-23T00:27:
58.831Z",
  "SignatureVersion": "1",
  "Signature" : "FMG5tlZhJNHLHUXvZ
gtZzlk24FzVa7oX0T4P03neeXw8
ZEXZx6z35j2F0TuNYShn2h0bKNC/
zLTnMyIxEzmi2X1shOBWsJHkrW2xkR58ABZ
F+4uWHEE73yDVR4SyYAikP9jstZzDRm
+bcVs8+T0yaLiEGLrIIIL4esi1llhIkg
ErCuy5btPcWXBdio2fpCRD5x9oR
6gmE/rd5071X1c1uvnv4r1Lkk4pqP2/
iUfxFZva1xLSRvgyfm6D9hNklVyPfy+7
TalMD0lzmJuOrExtnSIbZew3foxgx8GT
+1bZkLd0ZdtdRJlIyPRP44eyq78sU0Eo/
LsDr0Iak4ZDpg8dXg==",
  "SigningCertURL" : "https://
sns.us-east-1.amazonaws.com/
SimpleNotificationService-010a507c1
833636cd94bdb98bd93083a.pem",
  "UnsubscribeURL" : "https://
sns.us-east-2.amazonaws.com/?
Action=Unsubscribe&SubscriptionArn
=arn:aws:sns:us-east-2:1111
22223333:ExampleTopic1:e103
9402-24e7-40a3-a0d4-797da162b297"
  }
```

# Logging Amazon Snowball Edge API calls with Amazon CloudTrail

The Amazon Snowball or Snowball Edge service integrates with Amazon CloudTrail, a service that provides a record of actions taken by a user, role, or service. CloudTrail captures all API calls for Amazon Snowball Edge service. The calls captured include calls from the Amazon Snowball Edge Family console and code calls to the Amazon Snowball Edge Family Job Management API. If you create a trail, you can enable continuous delivery of CloudTrail events to an Amazon S3 bucket, including events for Amazon Snowball Edge Family API calls. If you don't configure a trail, you can still view the most recent events in the CloudTrail console in **Event history**. Using the information collected by CloudTrail, you can determine the request made with Amazon Snowball Edge Family API, the IP address of the request made, who made the request, when it was made, and additional details.

To learn more about CloudTrail, see the Amazon CloudTrail User Guide.

## Amazon Snowball Edge information in CloudTrail

CloudTrail is enabled on your Amazon Web Services account when you create the account. When activity occurs in Amazon Snowball Edge, that activity is recorded in a CloudTrail event along with other Amazon service events in **Event history**. You can view, search, and download recent events in your Amazon Web Services account. For more information, see <u>Viewing Events with CloudTrail Event History</u> in the *Amazon CloudTrail User Guide*.

For an ongoing record of events in your Amazon Web Services account, including events for Amazon Snowball Edge, create a trail. A *trail* enables CloudTrail to deliver log files to an Amazon S3 bucket. By default, when you create a trail in the console, the trail applies to all Amazon Regions. The trail logs events from all Amazon Web Services Regions in the Amazon partition and delivers the log files to the Amazon S3 bucket that you specify. Additionally, you can configure other Amazon services to further analyze and act upon the event data collected in CloudTrail logs. For more information, see the following topics in the *Amazon CloudTrail User Guide*:

- Overview for Creating a Trail
- CloudTrail Supported Services and Integrations
- Configuring Amazon SNS notifications for CloudTrail

 Receiving CloudTrail Log Files from Multiple Regions and Receiving CloudTrail Log Files from Multiple Accounts

All job management actions are documented in the <u>Amazon Snowball Edge API Reference</u> and are logged by CloudTrail with the following exceptions:

- The CreateAddress operation is not logged to protect customer sensitive information.
- All read-only API calls (for API operations beginning with the prefix of Get, Describe, or List) don't record response elements.

Every event or log entry contains information about who generated the request. The identity information helps you determine the following:

- Whether the request was made with root or Amazon Identity and Access Management (IAM user) credentials.
- Whether the request was made with temporary security credentials for a role or federated user.
- Whether the request was made by another Amazon service.

For more information, see the CloudTrail userIdentity Element in the Amazon CloudTrail User Guide.

## Understanding log file entries for Amazon Snowball Edge

A trail is a configuration that enables delivery of events as log files to an Amazon S3 bucket that you specify. CloudTrail log files contain one or more log entries. An event represents a single request from any source and includes information about the requested action, the date and time of the action, request parameters, and so on. CloudTrail log files aren't an ordered stack trace of the public API calls, so they don't appear in any specific order.

The following example shows a CloudTrail log entry that demonstrates the DescribeJob operation.

```
{"Records": [
{
    "eventVersion": "1.05",
    "userIdentity": {
        "type": "Root",
        "principalId": "111122223333",
```

Understanding log file entries 475

```
"arn": "arn:aws:iam::111122223333:root",
            "accountId": "111122223333",
            "accessKeyId": "AKIAIOSFODNN7EXAMPLE",
            "sessionContext": {"attributes": {
                "mfaAuthenticated": "false",
                "creationDate": "2019-01-22T21:58:38Z"
            }},
            "invokedBy": "signin.amazonaws.com"
        },
        "eventTime": "2019-01-22T22:02:21Z",
        "eventSource": "snowball.amazonaws.com",
        "eventName": "DescribeJob",
        "awsRegion": "eu-west-1",
        "sourceIPAddress": "192.0.2.0",
        "userAgent": "signin.amazonaws.com",
        "requestParameters": {"jobId": "JIDa1b2c3d4-0123-abcd-1234-0123456789ab"},
        "responseElements": null,
        "requestID": "12345678-abcd-1234-abcd-ab0123456789",
        "eventID": "33c7ff7c-3efa-4d81-801e-7489fe6fff62",
        "eventType": "AwsApiCall",
        "recipientAccountId": "444455556666"
    }
]}
```

Understanding log file entries 476

## **Amazon Snowball Edge quotas**

Following, you can find information about limitations on using the Amazon Snowball Edge device.

### Important

When you transfer data into Amazon Simple Storage Service (Amazon S3) using a Snowball Edge, keep in mind that individual Amazon S3 objects can range in size from a minimum of 0 bytes to a maximum of 5 terabytes (TB).

## **Limitations for Amazon Snowball Edge jobs**

The following limitations exist for creating Amazon Snowball Edge device jobs:

- If you're using an Amazon Snowball Edge device to import data, and you need to transfer more data than will fit on a single Snowball Edge Edge device, create additional jobs. Each export job can use multiple Snowball Edge Edge devices.
- The default service limit for the number of Snowball Edge Edge devices you can have at one time is 1 per account, per Amazon Web Services Region. If you want to increase your service limit or create a cluster job, contact Amazon Web Services Support.
- Metadata for objects transferred to a device is not persisted. The only metadata that remains the same is filename and filesize. All other metadata is set as in the following example:

```
-rw-rw-r-- 1 root root [filesize] Dec 31 1969 [path/filename]
```

## Rate limits on Amazon Snowball Edge

The Rate Limiter is used to control the rate of requests in a server cluster environment.

## **Amazon Snow S3 Adapter connection limit**

The maximum connection limit is 1000 for Snowball Edge on Amazon S3. Any connections beyond 1000 are dropped.

## Limitations on transferring on-premises data with a Snowball Edge Edge device

The following limitations exist for transferring data to or from an Amazon Snowball Edge device on-premises:

- Files must be in a static state while being written. Files that are modified while being transferred are not imported into Amazon S3.
- Jumbo frames are not supported—that is, Ethernet frames with more than 1500 bytes of payload.
- When selecting what data to export, keep in mind that objects with trailing slashes in their names (/ or \) are not transferred. Before exporting any objects with trailing slashes, update their names to remove the slash.
- When using multipart data transfer, the maximum part size is 2 GiB.

## Quotas for compute instances on a Snowball Edge device

The following are storage quotas and shared resource limitations for compute resources on an Amazon Snowball Edge device.

## Compute resource storage quotas on Snowball Edge

The storage available for compute resources is a separate resource from the dedicated Amazon S3 storage on a Snowball Edge device. The quotas for storage are as follows:

A Snowball Edge compute-optimized device can run up to 20 AMIs and 10 volumes per instance.

Instance type	vCPU cores	Memory (GiB)	Suppor device option
sbe1.small	1	1	storage optimized
sbe1.medium	1	2	storage optimized

Instance type	vCPU cores	Memory (GiB)	Suppor device option
sbe1.large	2	4	storage optimized
sbe1.xlarge	4	8	storage optimized
sbe1.2xlarge	8	16	storage optimized
sbe1.4xlarge	16	32	storage optimized
sbe1.6xlarge	24	32	storage optimized
sbe-c.small	1	2	compute optimized
sbe-c.medium	1	4	compute optimized
sbe-c.large	2	8	compute optimized
sbe-c.xlarge	4	16	compute optimized
sbe-c.2xlarge	8	32	compute optimized
sbe-c.4xlarge	16	64	compute optimized
sbe-c.8xlarge	32	128	compute optimized

Instance type	vCPU cores	Memory (GiB)	Suppor device option
sbe-c.12xlarge	48	192	compute optimized
sbe-c.16xlarge	64	256	compute optimized
sbe-c.24xlarge	96	384	compute optimized

## Shared compute resource limitations on Snowball Edge

All services on a Snowball Edge device use some of the finite resources on the device. A Snowball Edge device with its available compute resources maximized can't launch new compute resources. For example, if you try to start the NFS interface while also running a sbe1.4xlarge compute instance on a storage optimized device, the NFS interface service doesn't start. The following outlines the available resources on the different device options as well as resource requirements for each service.

- If no compute services are ACTIVE:
  - On a storage optimized option, you have 24 vCPUs and 32 GiB of memory for your compute instances.
  - On a compute optimized option, you have 104 vCPUs and 208 GiB of memory for your compute instances.
- While Amazon IoT Greengrass and Amazon Lambda powered by Amazon IoT Greengrass are ACTIVE:
  - On a storage optimized option, these services use 4 vCPU cores and 8 GiB of memory.
  - On a compute optimized option, these services use 1 vCPU core and 1 GiB of memory.
  - While the NFS interface is ACTIVE, it uses 8 vCPU cores and 16 GiB of memory on a Snowball Edge device.
  - While Amazon S3 compatible storage on Snowball Edge is ACTIVE on a Snowball Edge
     Compute Optimized with AMD EPYC Gen2 and NVME, for a single node with the minimum

configuration of 3 TB of Amazon S3 compatible storage on Snowball Edge, it uses 8 vCPU cores and 16 GB of memory. For a single node with more than 3 TB of Amazon S3 compatible storage on Snowball Edge, it uses 20 vCPU cores and 40 GB of memory. For a cluster, it uses 20 vCPU cores and 40 GB of memory.

You can determine whether a service is ACTIVE on a Snowball Edge by using the command snowballEdge describe-service on the Snowball Edge client. For more information, see Vieiwing status of services running on Snowball Edge.

## Limitations on shipping a Snowball Edge Edge device

The following limitations exist for shipping an Amazon Snowball Edge device:

- Amazon will not ship a Snowball Edge Edge device to a post office box.
- Amazon will not ship a Snowball Edge Edge device between non-US Regions—for example, from EU (Ireland) to EU (Frankfurt), or to Asia Pacific (Sydney).
- Moving a Snowball Edge Edge device to an address outside of the country specified when the job
  was created is not allowed and is a violation of the Amazon service terms.

For more information about shipping, see Shipping considerations for Snowball Edge.

# Limitations on processing a returned Snowball Edge Edge for import

To import your data into Amazon, the device must meet the following requirements:

- The Amazon Snowball Edge device must not be compromised. Except for opening the three doors on the front, back, and top, or to add and replace the optional air filter, don't open the Amazon Snowball Edge device for any reason.
- The device must not be physically damaged. You can prevent damage by closing the three doors on the Snowball Edge Edge device until the latches make an audible clicking sound.
- The E Ink display on the Snowball Edge Edge device must be visible. It must also show the return label that was automatically generated when you finished transferring your data onto the Amazon Snowball Edge device.

Shipping limitations 481



### Note

All Snowball Edge Edge devices returned that don't meet these requirements are erased without having any work performed on them.

## **Troubleshooting Amazon Snowball Edge**

Keep the following general guidelines in mind when troubleshooting.

- Objects in Amazon S3 have a maximum file size of 5 TB.
- Objects transferred onto an Amazon Snowball Edge device have a maximum key length of 933 bytes. Key names that include characters that take up more than 1 byte each still have a maximum key length of 933 bytes. When determining key length, you include the file or object name and also its path or prefixes. Thus, files with short file names within a heavily nested path can have keys longer than 933 bytes. The bucket name is not factored into the path when determining the key length. Some examples follow.

Object name	Bucket name	Path plus bucket name	Key Length
sunflower -1.jpg	pictures	sunflower -1.jpg	15 character s
receipts. csv	MyTaxInfo	/Users/Er ic/Docume nts/2016/ January/	47 character s
bhv.1	\$7\$zWwwXKQj\$gLAOoZCj\$r8p	/.VfV/FqG C3QN\$7BXy s3KHYePfu IOMNjY83d Vx ugPYlxVg/ evpcQEJLT /rSwZc\$M1 VVf/\$hwef VISRqwepB \$/BiiD/PP F\$twRAjrD	135 characters

Object name	Bucket name	Path plus bucket name	Key Length
		/fIMp/0NY	

 If you encounter unexpected errors using an Amazon Snowball Edge device, we want to hear about it. Copy the relevant logs and include them along with a brief description of the issues that you encountered in a message to Amazon Web Services Support. For more information about logs, see Configuring and using the Snowball Edge Client.

### **Topics**

- How to identify a Snowball Edge
- Troubleshooting boot-up problems with Snowball Edge
- Troubleshooting connection problems with Snowball Edge
- Troubleshooting unlock-device command problems with Snowball Edge
- Troubleshooting credentials problems with Snowball Edge
- Troubleshooting data transfer problems with Snowball Edge
- Troubleshooting Amazon CLI problems with Snowball Edge
- Troubleshooting compute instances on Snowball Edge

## How to identify a Snowball Edge

Use the describe-device command to find the device type, then look up the returned value of DeviceType in the table below to determine the configuration.

snowballEdge describe-device

### Example of describe-device output

```
{
```

Identify a device 484

```
"DeviceId" : "JID-206843500001-35-92-20-211-23-06-02-18-24",
    "UnlockStatus" : {
        "State" : "UNLOCKED"
        ...
        "DeviceType" : "V3_5C"
}
```

### DeviceType and Snowball Edge device configurations

DeviceType value	Device configuration
V3_5C	Snowball Edge compute-optimized with AMD EPYC Gen2 and NVME
V3_5S	Snowball Edge storage-optimized 210 TB

For more information about Snowball Edge device configurations, see <u>Amazon Snowball Edge</u> device hardware information.

## Troubleshooting boot-up problems with Snowball Edge

The following information can help you troubleshoot certain issues you might have with bootingup your Snowball Edge.

- Allow 10 minutes for a device to boot up. Avoid moving or using the device during this time.
- Ensure both ends of the cable supplying power are connected securely.
- Replace the cable supplying power with another cable that you know is good.
- Connect the cable supplying power to another source of power that you know is good.

# Troubleshooting problems with the LCD display of a Snowball Edge device during boot-up

Sometimes, after powering on a Snowball Edge device, the LCD display may encounter a problem.

• The LCD screen is black and does not display an image after you connect the Snowball Edge device to power and press the power button above the LCD screen.

• The LCD screen does not advance past the **Setting you your Snowball Edge, this may take a number of minutes.** message and the network configuration screen does not appear.




### Action to take when the LCD screen is black after pressing the power button

- 1. Ensure the Snowball Edge device is connected to a power source and the power source is providing power.
- 2. Leave the device connected to the power source for 1 to 2 hours. Ensure the doors on the front and back of the device are open.
- 3. Return to the device and the LCD screen will be ready to use.

### Action to take when the Snowball Edge does not advance to the network configuration screen

- 1. Let the screen stay on the **Setting you your Snowball Edge, this may take a number of minutes.** message for 10 minutes.
- 2. On the screen, choose the **Restart display** button. The **Shutting down...** message will appear, then the **Setting you your Snowball Edge, this may take a number of minutes.** message will appear and the device will start normally.

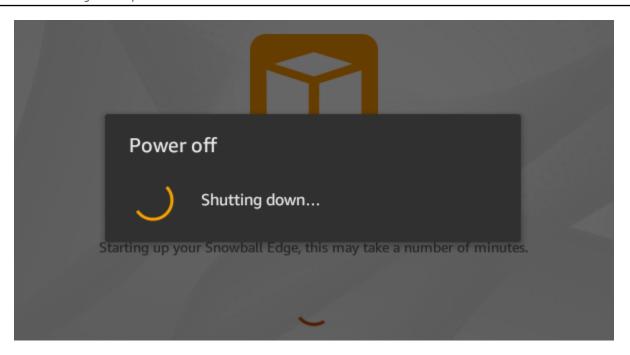

If the LCD screen does not advance past the **Setting you your Snowball Edge, this may take a number of minutes.** message after using the **Restart display** button, use the following procedure.

### Action to take

- 1. Above the LCD screen, press the power button to power off the device.
- 2. Disconnect all cables from the device.
- 3. Leave the device powered off and disconnected for 20 minutes.
- 4. Connect the power and network cables.
- 5. Above the LCD screen, press the power button to power on the device.

If the problem persists, contact Amazon Web Services Support to return the device and receive a new Snowball Edge device.

### Troubleshooting problems with the E Ink display during boot-up

Sometimes, after powering on a Snowball Edge device, the E Ink display on top of the device may display the following message:

The appliance has timed out

This message does not indicate a problem with the device. Use it normally and when you turn it off to return it to Amazon, the return shipping information will appear as expected.

## Troubleshooting connection problems with Snowball Edge

The following information can help you troubleshoot certain issues that you might have with connecting to your Snowball Edge:

- Routers and switches that work at a rate of 100 megabytes per second don't work with a Snowball Edge. We recommend that you use a switch that works at a rate of 1 GB per second (or faster).
- If you experience odd connection errors with the device, power off the Snowball Edge, unplug all the cables, and leave it for 10 minutes. After 10 minutes have passed, restart the device, and try again.
- Ensure that no antivirus software or firewalls block the Snowball Edge device's network connection.
- Be aware that the NFS interface and Amazon S3 interface have different IP addresses.

For more advanced connection troubleshooting, you can take the following steps:

- If you can't communicate with the Snowball Edge, ping the IP address of the device. If the ping returns no connect, confirm the IP address for the device and confirm your local network configuration.
- If the IP address is correct and the lights on the back of the device are flashing, use telnet to test the device on ports 22, 9091, and 8080. Testing port 22 determines whether the Snowball Edge is working correctly. Testing port 9091 determines whether the Amazon CLI can be used to send commands to the device. Testing port 8080 helps ensure that the device can write to the Amazon S3 buckets on it with S3 adapter only. If you can connect on port 22 but not on port 8080, first power off the Snowball Edge and then unplug all the cables. Leave the device for 10 minutes, and then reconnect it and start again.

## Troubleshooting unlock-device command problems with Snowball Edge

If the unlock-device command returns connection refused, you may have mistyped the command syntax or the configuration of your computer or network may be preventing the command from reaching the Snow device. Take these actions to resolve the situation:

- 1. Ensure the command was entered correctly.
  - a. Use the LCD screen on the device to verify the IP addressed used in the command is correct.
  - b. Ensure that the path to the manifest file used in the command is correct, including the file name.
  - c. Use the <u>Amazon Snowball Edge Management Console</u> to verify the unlock code used in the command is correct.
- 2. Ensure the computer you are using is on the same network and subnet as the Snow device.
- 3. Ensure the computer you are using and the network are configured to allow access to the Snow device. Use the ping command for your operating system to determine if the computer can reach the Snow device over the network. Check the configurations of antivirus software, firewall configuration, virtual private network (VPN), or other configurations of your computer and network.

## Troubleshooting manifest file problems with Snowball Edge

Each job has a specific manifest file associated with it. If you create multiple jobs, track which manifest is for which job.

If you lose a manifest file or if a manifest file is corrupted, you can download the manifest file for a specific job again. You do so using the console, Amazon CLI, or one of the Amazon APIs.

If you run an update on the Snowball Edge, then a new manifest file needs to be downloaded and used for the job. For information about downloading a manifest file, see <u>Getting credentials to access a Snowball Edge</u>.

## Troubleshooting credentials problems with Snowball Edge

Use the following topics to help you resolve credentials issues with the Snowball Edge device.

## Unable to locate Amazon CLI credentials for Snowball Edge

If you're communicating with the Amazon Snowball Edge device through the Amazon S3 interface using the Amazon CLI, you might encounter an error message that says Unable to locate credentials. You can configure credentials by running "aws configure".

#### Action to take

Configure the Amazon Web Services credentials that the Amazon CLI uses to run commands for you. For more information, see Configuring the Amazon CLI in the Amazon Command Line Interface User Guide.

# Troubleshooting Snowball Edge error message: Check Your Secret Access Key and Signing

When using the Amazon S3 interface to transfer data to a Snowball Edge, you might encounter the following error message.

An error occurred (SignatureDoesNotMatch) when calling the CreateMultipartUpload operation: The request signature we calculated does not match the signature you provided.

Check your Amazon secret access key and signing method. For more details go to: http://docs.aws.amazon.com/AmazonS3/latest/dev/

RESTAuthentication.html#ConstructingTheAuthenticationHeader

#### Action to take

Get your credentials from the Snowball Edge client. For more information, see <u>Getting credentials</u> for a Snowball Edge.

## Troubleshooting data transfer problems with Snowball Edge

If you encounter performance issues while transferring data to or from a Snowball Edge, see Recommendations for best data transfer performance to or from a Snowball Edge for recommendations and guidance on improving transfer performance. The following can help you troubleshoot issues that you might have with your data transfer to or from a Snowball Edge:

• You can't transfer data into the root directory of the Snowball Edge. If you have trouble transferring data into the device, make sure that you're transferring data into a subdirectory. The

top-level subdirectories have the names of the Amazon S3 buckets that you included in the job. Put your data in those subdirectories.

- If you're using Linux and you can't upload files with UTF-8 characters to an Amazon Snowball Edge device, it might be because your Linux server doesn't recognize UTF-8 character encoding. You can correct this issue by installing the locales package on your Linux server and configuring it to use one of the UTF-8 locales like en\_US.UTF-8. You can configure the locales package by exporting the environment variable LC\_ALL, for example: export LC\_ALL=en\_US.UTF-8
- When you use the Amazon S3 interface with the Amazon CLI, you can work with files or folders with spaces in their names, such as my photo.jpg or My Documents. However, make sure that you handle the spaces properly. For more information, see <a href="Specify parameter values for the Amazon CLI">Specify parameter values for the Amazon CLI</a> in the Amazon Command Line Interface User Guide.

### Troubleshooting import job problems with Snowball Edge

Sometimes files fail to import into Amazon S3. If the following issue occurs, try the actions specified to resolve your issue. If a file fails import, you might need to try importing it again. Importing it again might require a new job for Snowball Edge.

### Files failed import into Amazon S3 due to invalid characters in object names

This problem occurs if a file or folder name has characters that aren't supported by Amazon S3. Amazon S3 has rules about what characters can be in object names. For more information, see Creating object key names in Amazon S3 User Guide.

#### Action to take

If you encounter this issue, you see the list of files and folders that failed import in your job completion report.

In some cases, the list is prohibitively large, or the files in the list are too large to transfer over the internet. In these cases, you should create a new Snowball import job, change the file and folder names to comply with Amazon S3 rules, and transfer the files again.

If the files are small and there isn't a large number of them, you can copy them to Amazon S3 through the Amazon CLI or the Amazon Web Services Management Console. For more information, see <a href="How do I upload files and folders to an S3 bucket?">How do I upload files and folders to an S3 bucket?</a> in the Amazon Simple Storage Service User Guide.

### Troubleshooting export job problems with Snowball Edge

Sometimes files fail to export into your workstation. If the following issue occurs, try the actions specified to resolve your issue. If a file fails export, you might need to try exporting it again. Exporting it again might require a new job for Snowball Edge.

#### Files failed export to a Microsoft Windows Server

A file can fail export to a Microsoft Windows Server if it or a related folder is named in a format not supported by Windows. For example, if your file or folder name has a colon (:) in it, the export fails because Windows doesn't allow that character in file or folder names.

#### Action to take

- Make a list of the names that are causing the error. You can find the names of the files and folders that failed export in your logs. For more information, see <u>Viewing and downloading</u> logs from Snowball Edge.
- 2. Change the names of the objects in Amazon S3 that are causing the issue to remove or replace the unsupported characters.
- 3. If the list of names is prohibitively large, or if the files in the list are too large to transfer over the internet, create a new export job specifically for those objects.

If the files are small and there isn't a large number of them, copy the renamed objects from Amazon S3 through the Amazon CLI or the Amazon Web Services Management Console. For more information, see <a href="How do I download an object from an S3 bucket?">How do I download an object from an S3 bucket?</a> in the Amazon Simple Storage Service User Guide.

### Troubleshooting NFS interface problems with Snowball Edge

The Snowball Edge may indicate the status of the NFS interface is DEACTIVATED. This might occur if the Snowball Edge was powered off without first stopping the NFS interface.

#### Action to take

To correct the problem, stop and restart the NFS service using the following steps.

Use the describe-service command to determine the status of the service:

```
snowballEdge describe-service --service-id nfs
```

The command returns the following.

```
{
   "ServiceId" : "nfs",
   "Status" : {
    "State" : "DEACTIVATED"
   }
}
```

2. Use the stop-service command to stop the NFS service.

```
snowballEdge stop-service --service-id nfs
```

Use the start-service command to start the NFS service. For more information, see Managing the NFS interface.

```
snowballEdge start-service --virtual-network-interface-arms vni-arm --service-id
nfs --service-configuration AllowedHosts=0.0.0.0/0
```

4. Use the describe-service command to make sure the service is running.

```
snowballEdge describe-service --service-id nfs
```

If the value of the State name is ACTIVE, the NFS interface service is active.

```
"Port" : 2049,
"Host" : "192.0.2.0"
} ],
"ServiceConfiguration" : {
  "AllowedHosts" : [ "10.24.34.0/23", "198.51.100.0/24" ]
}
```

# Troubleshooting an access denied error when transferring data using the S3 interface

When using the S3 interface to transfer data to or from a Snowball Edge device, you might encounter an access denied error. This error may be the result of IAM user or bucket policies.

#### Action to take

- 1. Check the policy of the S3 bucket you are using for the following syntax issues.
  - a. If the policy only allows data to be uploaded if KMS headers are passed, ensure the policy specifies an principal ARN instead of a user ID. The example below shows the correct syntax.

```
{
    "Sid": "Statement3",
    "Effect": "Deny",
    "Principal": "*",
    "Action": "s3:PutObject",
    "Resource": "arn:aws-cn:s3:::amzn-s3-demo-bucket/*",
    "Condition": {
        "StringNotLike": {
            "aws:PrincipalArn": "arn:aws-cn:iam::111122223333:role/JohnDoe"
        },
        "StringNotEquals": {
            "s3:x-amz-server-side-encryption": [
                "aws:kms",
                "AES256"
            ]
        }
},
```

b. If the bucket policy only allows upload to the bucket if the correct headers are passed, uploads from Snowball Edge devices don't pass any headers by default. Modify the policy to allow an exception for the IAM user used to upload the data. Below is an example of the correct syntax for this.

```
}
    "Sid": "Statement3",
    "Effect": "Deny",
    "Principal": "",
    "Action": "s3:PutObject",
    "Resource": "arn:aws:s3:::amzn-s3-demo-bucket/",
    "Condition": {
        "StringNotEquals": {
            "s3:x-amz-server-side-encryption": "AES256"
        },
        "StringNotLike": {
            "aws:PrincipalArn": "arn:aws:iam::111122223333:role/JohnDoe"
        }
    }
},
{
    "Sid": "Statement4",
    "Effect": "Deny",
    "Principal": "",
    "Action": "s3:PutObject",
```

2. Check the policy of the KMS key you are using for the correct syntax in the Principal element. See the example below shows the correct syntax.

```
{
    "Sid": "Statement2",
    "Effect": "Allow",
    "Principal": {
        "AWS": [
            "arn:aws:iam::111122223333:role/service-role/JohnDoe"
        ]
    },
    "Action": [
        "kms:Encrypt",
        "kms:Decrypt",
        "kms:ReEncrypt*",
        "kms:GenerateDataKey*",
        "kms:DescribeKey"
    ],
    "Resource": "*"
}
```

# Troubleshooting an 403 forbidden error when transferring data using the S3 interface

When using the S3 interface to transfer data to or from a Snowball Edge device, you might encounter an 403 forbidden error. This error may be the result of IAM user or bucket policies. Check the policy of the S3 bucket you are using for the following syntax issues.

#### Action to take

1. The policy does not provide the PrincipalArn. Use the following policy as an example to use the aws:PrincipalArn header and provide the IAM role ARN without : \*.

```
{
"Version": "2012-10-17",
"Statement": [{
        "Sid": "DenyIncorrectEncryptionHeader",
        "Effect": "Deny",
        "Principal": "*",
        "Action": "s3:PutObject",
        "Resource": "arn:aws:s3:::BucketName/*",
        "Condition": {
            "StringNotLike": {
                "aws:PrincipalArn": "arn:aws:iam::1234567890:role/RoleName"
            },
            "StringNotEquals": {
                "s3:x-amz-server-side-encryption": [
                    "aws:kms",
                    "AES256"
            }
        }
   },
    {
        "Sid": "DenyUnEncryptedObjectUploads",
        "Effect": "Deny",
        "Principal": "*",
        "Action": "s3:PutObject",
        "Resource": "arn:aws:s3::::DOC-EXAMPLE-BUCKET/*",
        "Condition": {
            "StringNotLike": {
                "aws:PrincipalArn": "arn:aws:iam::1234567890:role/RoleName"
            },
            "Null": {
                "s3:x-amz-server-side-encryption": "true"
            }
        }
   },
        "Sid": "DenyInsecureTransport",
```

```
"Effect": "Deny",
            "Principal": "*",
            "Action": "s3:*",
            "Resource": [
                "arn:aws:s3:::BucketName/*",
                "arn:aws:s3:::BucketName"
            ],
            "Condition": {
                "Bool": {
                    "aws:SecureTransport": "false"
                }
            }
        },
        {
            "Sid": "AllowSnowballPutObjectAccess",
            "Effect": "Allow",
            "Principal": {
                "AWS": "arn:aws:iam::1234567890:role/RoleName"
            },
            "Action": "s3:PutObject",
            "Resource": "arn:aws:s3:::BucketName/*"
        }
    ]
}s
```

2. If the KMS policy uses the incorrect IAM Role format, a 403 error may occur. Modify the policy to allow an exception for the IAM user used to upload the data. Below is an example of the correct syntax for this.

```
],
"Resource": "*"
}
```

3. The IAM role may need to bypass the encryption header condition. By default, all objects stored on a Snowball Edge device are encrypted with SSE-S3 encryption. Use the policy below to provide an exception for the IAM role to upload objects without encryption headers.

```
{
    "Version": "2012-10-17",
    "Id": "PutObjPolicy",
    "Statement": [{
            "Sid": "DenyIncorrectEncryptionHeader",
            "Effect": "Deny",
            "Principal": "*",
            "Action": "s3:PutObject",
            "Resource": "arn:aws:s3:::BucketName/",
            "Condition": {
                "StringNotEquals": {
                    "s3:x-amz-server-side-encryption": "AES256"
                },
                "StringNotLike": {
                    "aws:PrincipalArn": "arn:aws:iam::1234567890:role/RoleName"
                }
            }
        },
        {
            "Sid": "DenyUnEncryptedObjectUploads",
            "Effect": "Deny",
            "Principal": "*",
            "Action": "s3:PutObject",
            "Resource": "arn:aws:s3:::BucketName/*",
            "Condition": {
                "Null": {
                    "s3:x-amz-server-side-encryption": "true"
                },
                "StringNotLike": {
                    "aws:PrincipalArn": "arn:aws:iam::1234567890:role/RoleName"
                }
            }
```

```
}
```

4. The error message indicates access is denied to PutObject using NotPrincipal with IP condition. Add an exception as shown below for the Snowball Edge IAM role.

```
{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Sid": "Statement1",
            "Effect": "Deny",
            "NotPrincipal": {
                "AWS": [
                     "IAMRole"
                ]
            },
            "Action": [
                "s3:PutObject",
                "s3:GetObject"
            ],
            "Resource": [
                "arn:aws:s3:::BucketName/*",
                "arn:aws:s3:::BucketName"
            ],
            "Condition": {
                "NotIpAddress": {
                     "aws:SourceIp": [
                         "IPAddress"
                     ]
                },
                "StringNotEquals": {
                     "aws:PrincipalArn": "arn:aws:iam::1234567890:role/RoleName"
                }
            }
        }
    ]
}
```

## Troubleshooting Amazon CLI problems with Snowball Edge

Use the following topics to help you resolve problems when working with an Amazon Snowball Edge device and the Amazon CLI.

# Troubleshooting Amazon CLI error message: "Profile Cannot Be Null" with Snowball Edge

When working with the Amazon CLI, you might encounter an error message that says Profile cannot be null. You can encounter this error if the Amazon CLI hasn't been installed or an Amazon CLI profile hasn't been configured.

#### Action to take

Ensure that you have downloaded and configured the Amazon CLI on your workstation. For more information, see <u>Install or update to the latest version of the Amazon CLI</u> in the *Amazon Command Line Interface User Guide*.

# Troubleshooting null pointer error when transferring data with the Amazon CLI with Snowball Edge

When using the Amazon CLI to transfer data, you might encounter a null pointer error. This error can occur in the following conditions:

- If the specified file name is misspelled, for example flowwer.png or flower.npg instead of flower.png
- If the specified path is incorrect, for example C:\Documents\flower.png instead of C:\Documents\flower.png
- If the file is corrupted

#### **Action to take**

Confirm that your file name and path are correct, and try again. If you continue to experience this issue, confirm that the file has not been corrupted, abandon the transfer, or attempt repairs to the file.

## Troubleshooting compute instances on Snowball Edge

Following, you can find troubleshooting tips for computer instances on Snowball Edge devices.

#### **Topics**

- Virtual Network Interface has an IP Address of 0.0.0.0
- Snowball Edge device stops responding when launching a large compute instance
- My instance on the Snowball Edge has one root volume
- Unprotected private key file error

#### Virtual Network Interface has an IP Address of 0.0.0.0

This issue can occur if the physical network interface (NIC) you associated with your virtual network interface (VNIC) also has an IP address of 0.0.0.0. This effect can happen if the NIC wasn't configured with an IP address (for instance, if you've just powered on the device). It can also happen if you're using the wrong interface. For example, you might be trying to get the IP address of the SFP+ interface, but it's the RJ45 interface that's connected to your network.

#### **Action to Take**

If this occurs, you can do the following:

- Create a new VNI associated with a NIC that has an IP address. For more information, see
   Network configurations for compute instances on Snowball Edge.
- Update an existing VNI. For more information, see <u>Updating a Virtual Network Interface on a Snowball Edge</u>.

# Snowball Edge device stops responding when launching a large compute instance

It can appear that your Snowball Edge has stopped launching an instance. This is generally not the case. However, it can take an hour or more for the largest compute instances to launch.

To check the status of your instances, use the Amazon CLI command aws ec2 describe-instances run against the HTTP or HTTPS Amazon EC2-compatible endpoint on the Snowball Edge.

### My instance on the Snowball Edge has one root volume

Instances have one root volume by design. All sbe instances have a single root volume, but on a Snowball Edge device, you can add or remove block storage based on the needs of your applications. For more information, see <u>Using block storage with Amazon EC2-compatible</u> instances on Snowball Edge.

### Unprotected private key file error

This error can occur if your .h file on your compute instance has insufficient read/write permissions.

#### **Action to Take**

You can resolve this by changing the permissions for the file with the following procedure:

- 1. Open a terminal and navigate to the location where you saved your . pem file.
- 2. Enter the following command.

chmod 400 filename.pem

## **Document history**

• API version: 1.0

• Latest documentation update: March 14, 2024

The following table describes important changes to the *Amazon Snowball Edge Developer Guide* after July 2018. For notifications about documentation updates, you can subscribe to the RSS feed.

Change	Description	Date
Tape Gateway on Snowball Edge devices deprecated	Tape Gateway functionality is no longer available on Snowball Edge devices.	March 14, 2024
File interface deprecated	The file interface is no longer available for data transfer.	March 1, 2024
Amazon S3 compatible storage on Snowball Edge available on Snowball Edge storage-optimized 210 TB devices	Amazon S3 compatible storage on Snowball Edge is available for S3 storage on Snowball Edge storage-optimized 210 TB devices. For more information, see Using Amazon S3 compatible storage on Snowball Edge.	February 26, 2024
Include custom AMIs when ordering devices	Custom Amazon Machine Images can now be preloaded while ordering Snowball Edge jobs. For more informati on, see Adding an AMI from Amazon Web Services Marketplace.	November 15, 2023
Amazon S3 compatible storage on Snowball Edge generally available	Amazon S3 compatible storage on Snowball Edge is supported on Snowball	April 20, 2023

Edge compute-optimized devices. For more informati on, see <u>Amazon S3 compatible</u> e storage on Snowball Edge.

New Amazon Web Services
Region supported

Amazon Snowball Edge is now supported in the Middle East (UAE) Region. For information about endpoints for this region, see Snowball Edge Edge Endpoints and Quotas in the Amazon Web Services General Reference. For information on shipping, see Shipping Considerations for Snowball Edge.

March 6, 2023

New Amazon Web Services
Region supported

Amazon Snowball Edge is now supported in the Asia Pacific (Jakarta) Region. For information about endpoints for this region, see Snowball Edge Edge Endpoints and Quotas in the Amazon Web Services General Reference. For information on shipping, see Shipping Considerations for Snowball Edge.

September 7, 2022

Large Data Migration for Snowball Edge Snowball Edge now supports automating a large data migration plan. For more information see <u>Large Data Migration</u> (manual steps) and <u>Create a Large Data Migration</u> Plan to initiate automation if desired.

April 27, 2022

Introducing Amazon Snowball Edge Device Management Snowball Edge Device
Management allows you
to manage your Snowball
Edge device and local
Amazon services remotely.
All Snowball Edge devices
support Snowball Edge
Device Management, and
it comes pre-installed on
new devices in most Amazon
Web Services Regions where
Snowball Edge is available
. For more information, see
Using Amazon Snowball
Edge Device Management to

April 27, 2022

NFS Configuration for Snowball Edge Added NFS Configuration for Snowball Edge for Storage Optimized devices.

**Manage Devices** 

April 21, 2022

Rate Limits for Load Balancer

Snowball Edge now supports

Rate Limits to distribute
requests in a server cluster
environment.

April 19, 2022

Support for Snowball Edge with Tape Gateway

You can now order a Snowball Edge device that is specially configured to host the Tape Gateway service. This combination of technologies facilitates secure offline tape data migration.

November 30, 2021

Support for Network Time
Protocol (NTP) server
configuration

Snowball Edge devices now support external Network Time Protocol (NTP) server configuration.

November 16, 2021

## Support for NFS offline data transfer

Snowball Edge devices now support offline data transfer using NFS. For more informati on, see <u>Using NFS for Offline</u> Data Transfer.

August 4, 2021

# New Amazon Web Services Region supported

Snowball Edge devices are now available in the Africa (Cape Town) Amazon Web Services Region. For more information, see Snowball Edge Edge Endpoints and Quotas in the Amazon Web Services General Reference. For information on shipping, see Shipping Considerations for Snowball Edge.

November 23, 2020

# Support for importing your own image into your device

You can now import a snapshot of your image into your Snowball Edge device and register it as an Amazon EC2-compatible Amazon Machine Image (AMI). For more information, see Importing an Image into Your Device as an Amazon EC2 AMI

November 9, 2020

## New Amazon Web Services Region supported

Snowball Edge devices are now available in the Europe (Milan) Amazon Web Services Region. For more informati on, see <u>Snowball Edge Edge Endpoints and Quotas</u> in the *Amazon Web Services General Reference*. For information on shipping, see <u>Shipping Considerations for Snowball Edge</u>.

September 30, 2020

#### Content restructure

Created a Getting Started section that aligns with the Amazon Snow Family Management Console workflow and updated other sections for clarity. For more information, see Getting Started with an Amazon Snowball Edge.

September 17, 2020

#### Introducing Amazon OpsHub

The Snowball Edge now offer a user-friendly tool, Amazon OpsHub, that you can use to manage your devices and local Amazon services. For more information, see <u>Using Amazon OpsHub to Manage Snowball Devices</u>.

April 16, 2020

Amazon Identity and Access
Management (IAM) is now
available locally on the
Amazon Snowball Edge
device

You can now use Amazon
Identity and Access
Management (IAM) to
securely control access to
Amazon resources running on
your Amazon Snowball Edge
device. For more information,
see Using IAM Locally.

April 16, 2020

Introducing a new Snowball Edge Storage Optimized (for data transfer) device option

Snowball now adds a new storage optimized device based on the current compute-optimized and GPU devices. For more informati on, see <u>Snowball Edge Device</u> Options.

March 23, 2020

NFC tag validation support

Snowball Edge Compute
Optimized devices (with or
without the GPU) have NFC
tags built into them. You
can scan these tags with
the Amazon Snowball Edge
Verification App, available on
Android. For more informati
on, see <u>Validating NFC Tags</u>.

December 13, 2018

Security groups are now available for compute instances

Security groups in Snowball Edge devices are similar to security groups in the Amazon Web Services Cloud, with some subtle differences. For more information, see Security Groups in Snowball

Edge Devices.

November 26, 2018

Introducing on-premises update	You can now update the software that makes a Snowball Edge device run in your local environment. Note that on-premises updates require an internet connection. For more information, see Updating an Snowball Edge.	November 26, 2018
Introducing new device options for Snowball Edge	Snowball Edge devices come in three options – storage optimized, compute optimized, and with GPU. For more information, see <a href="Snowball Edge Device">Snowball Edge Device</a> Options.	November 15, 2018
New Amazon Web Services Region supported	Snowball Edge devices are now available in the Asia Pacific (Mumbai). Note that compute instances and Amazon Lambda powered by Amazon IoT Greengrass are not supported in this region.	September 24, 2018
Introducing support for Amazon EC2-compatible compute instances on Snowball Edge devices	Amazon Snowball Edge now supports local jobs using Amazon EC2 compute instances running on Snowball Edge devices.	July 17, 2018
Improved troubleshooting content	The troubleshooting chapter has been updated and reorganized.	July 11, 2018